

RCA2-SA6R

ROBO Cylinder, Slider Type, Actuator Width 60mm, Servo Motor, Side-mounted Motor

Model Specification Items	RCA2 — SA6R — I — 30 — [] — [] — [] — [] — []
	Series — Type — Encoder type — Motor type — Lead — Stroke — Applicable controller — Cable length — Options
	I: Incremental * The Simple absolute encoder is also considered type "I".
	30: 30W Servo motor
	12: 12mm 6: 6mm 3: 3mm
	50: 50mm ? 800: 800mm (50mm pitch increments)
	A1: ACON ASEL A3: AMEC ASEP MSEP
	N: None P: 1m S: 3m M: 5m X [] []: Custom length
	See Options below. * Be sure to specify which side the motor is to be mounted (ML/MR).

* See page Pre-47 for details on the model descriptions.



Power-saving

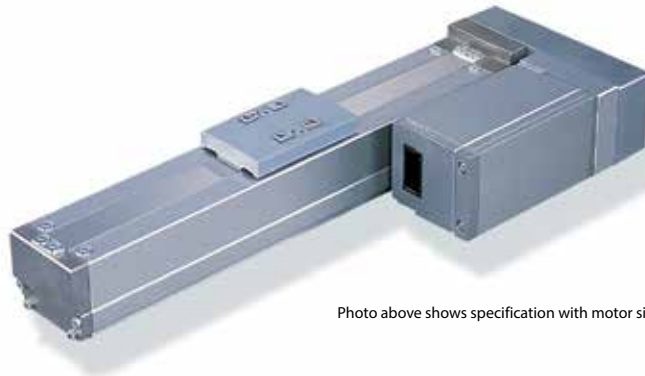


Photo above shows specification with motor side-mounted to the left (ML Option).

Technical References Appendix P.5

POINT Notes on selection

- (1) When the stroke increases, the maximum will drop to prevent the ball screw from reaching the critical rotational speed. Use the actuator specification table below to check the maximum speed at the stroke you desire.
- (2) The load capacity is based on operation at an acceleration of 0.3G (0.2G for the 3mm-lead model, or when used vertically). These values are the upper limits for the acceleration.
- (3) See page A-71 for details on push motion.

Actuator Specifications

Leads and Payloads

Model number	Motor output (W)	Lead (mm)	Max. Load Capacity		Rated thrust (N)	Stroke (mm)
			Horizontal (kg)	Vertical (kg)		
RCA2-SA6R-I-30-12-①-②-③-④	30	12	4	1.5	26	50~800 (every 50mm)
RCA2-SA6R-I-30-6-①-②-③-④		6	7	2	53	
RCA2-SA6R-I-30-3-①-②-③-④		3	10	4	105	

Stroke and Maximum Speed

Stroke Lead	50~550 (every 50mm)	600 (mm)	650 (mm)	700 (mm)	750 (mm)	800 (mm)
	12	600	570	490	425	370
6	300	285	245	210	185	165
3	150	140	120	105	90	80

Code explanation ① Stroke ② Applicable Controller ③ Cable length ④ Options * See page A-71 for details on push motion. (Unit: mm/s)

① Stroke

① Stroke (mm)	Standard price	
	With cover (standard)	Without cover (option)
50	—	—
100	—	—
150	—	—
200	—	—
250	—	—
300	—	—
350	—	—
400	—	—
450	—	—
500	—	—
550	—	—
600	—	—
650	—	—
700	—	—
750	—	—
800	—	—

③ Cable Length

Type	Cable symbol	Standard price
Standard (Robot Cables)	P (1m)	—
	S (3m)	—
	M (5m)	—
Special length	X06 (6m) ~ X10 (10m)	—
	X11 (11m) ~ X15 (15m)	—
	X16 (16m) ~ X20 (20m)	—

* The standard cable is the motor-encoder integrated robot cable.
 * See page A-59 for cables for maintenance.


④ Options

Name	Option code	See page	Standard price
Brake	B	→ A-42	—
Optional cable exit direction (top)	CJT	→ A-42	—
Optional cable exit direction (outside)	CJO	→ A-42	—
Optional cable exit direction (bottom)	CJB	→ A-42	—
Power-saving	LA	→ A-52	—
Left-mounted motor (standard)	ML	→ A-52	—
Right-mounted motor	MR	→ A-52	—
No cover	NCO	→ A-52	—
Non-motor end specification	NM	→ A-52	—

Actuator Specifications

Item	Description
Drive System	Ball screw, ø10mm, rolled C10
Positioning repeatability	±0.02mm
Lost Motion	0.1mm
Base	Material: Aluminum, special alumite treated
Allowable static moment	Ma: 17.6 N·m, Mb: 25.2 N·m, Mc: 44.5 N·m
Allowable dynamic moment (*)	Ma: 4.31 N·m, Mb: 6.17 N·m, Mc: 10.98 N·m
Allowable overhang	150mm or less in Ma, Mb and Mc directions
Ambient operating temperature, humidity	0 to 40°C, 85% RH or less (Non-condensing)

(*) Based on 5,000km of traveling life




Dimensional Drawings

CAD drawings can be downloaded from the website. www.intelligentactuator.com



For Special Orders Appendix P.15

- (*1) Connect the motor-encoder integrated cable here. See page A-59 for details on cables.
- (*2) After homing, the slider moves to the ME, therefore, please watch for any interference with surrounding objects.
ME: Mechanical end
SE: Stroke end
- (*3) Reference position for calculating the Ma moment

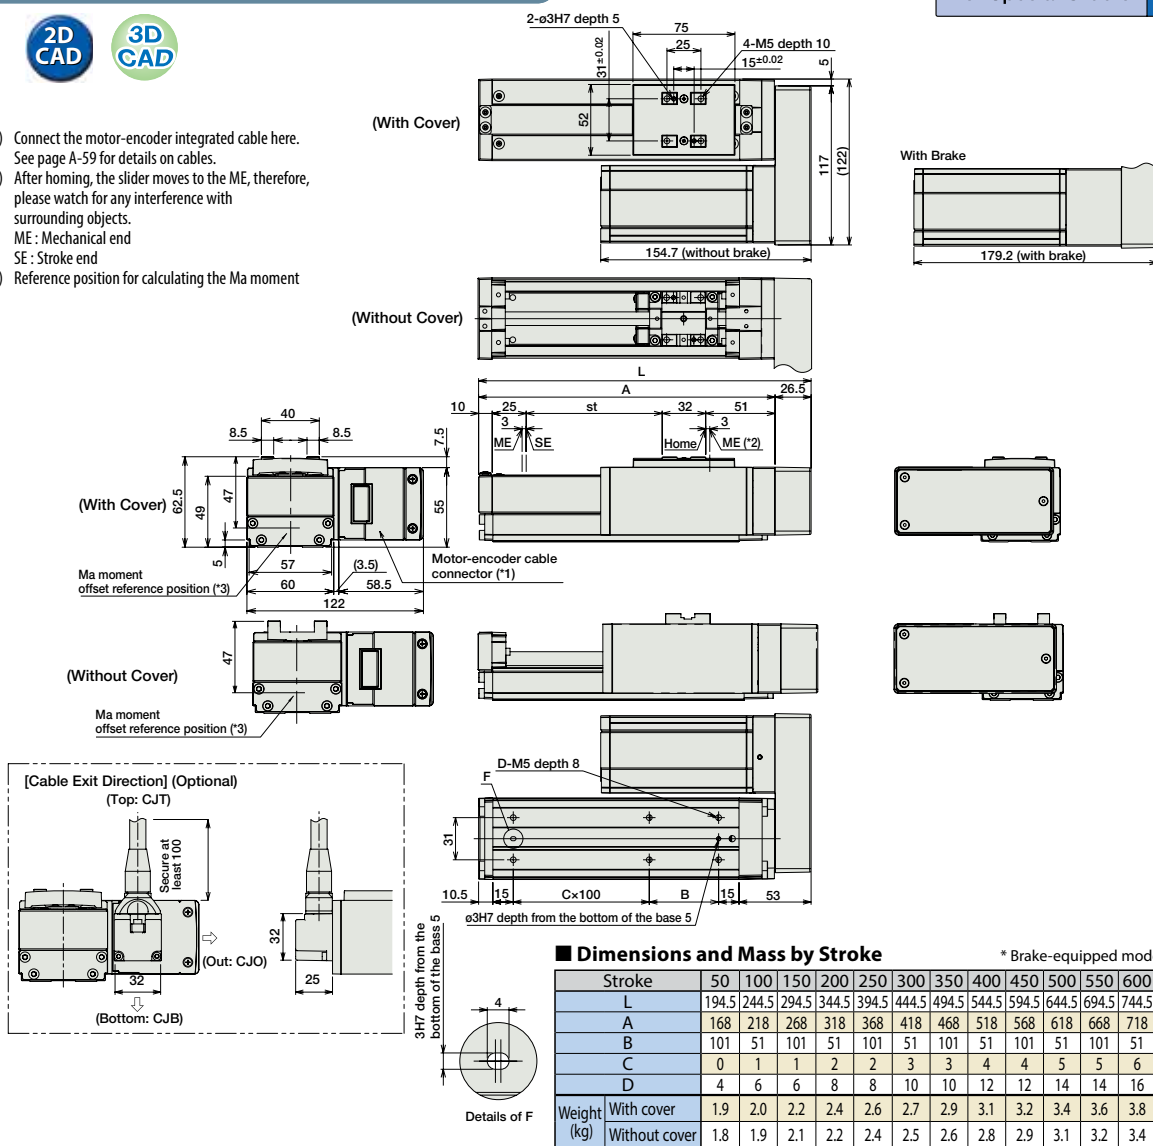

Dimensions and Mass by Stroke

* Brake-equipped models are heavier by 0.4kg.

Stroke	50	100	150	200	250	300	350	400	450	500	550	600	650	700	750	800
L	194.5	244.5	294.5	344.5	394.5	444.5	494.5	544.5	594.5	644.5	694.5	744.5	794.5	844.5	894.5	944.5
A	168	218	268	318	368	418	468	518	568	618	668	718	768	818	868	918
B	101	51	101	51	101	51	101	51	101	51	101	51	101	51	101	51
C	0	1	1	2	2	3	3	4	4	5	5	6	6	7	7	8
D	4	6	6	8	8	10	10	12	12	14	14	16	16	18	18	20
Weight (kg)	With cover		Without cover		With cover		Without cover		With cover		Without cover		With cover		Without cover	
	1.9	2.0	2.2	2.4	2.6	2.7	2.9	3.1	3.2	3.4	3.6	3.8	3.9	4.1	4.3	4.5
	1.8	1.9	2.1	2.2	2.4	2.5	2.6	2.8	2.9	3.1	3.2	3.4	3.5	3.7	3.8	3.9

Applicable Controllers

RCA2 series actuators can be operated with the controllers indicated below. Select the type according to your intended application.

Name	External view	Model number	Features	Maximum number of positioning points	Input power	Power-supply capacity	Standard price	Reference page
Solenoid Valve Type		AMEC-C-30I(1)-(II)-2-1	Easy-to-use controller, even for beginners	3 points	AC100V	2.4A rated	—	→ P537
		ASEP-C-30I(1)-(II)-2-0	Simple controller operable with the same signal as a solenoid valve					→ P547
Solenoid valve multi-axis type PIO specification		MSEP-C-(III)-(IV)-2-0	Positioner type based on PIO control, allowing up to 8 axes to be connected	256 points	DC24V	(Standard) 1.3A rated 4.4A max. (Power-saving) 1.3A rated 2.2A max.	—	→ P563
Solenoid valve multi-axis type Network specification		MSEP-C-(III)-(IV)-0-0	Field network-ready positioner type, allowing up to 8 axes to be connected					
Positioner type		ACON-C-30I(1)-(II)-2-0	Positioning is possible for up to 512 points	512 points	DC24V	(Standard) 1.3A rated 4.4A max. (Power-saving) 1.3A rated 2.2A max.	—	—
Safety-Compliant Positioner Type		ACON-CG-30I(1)-(II)-2-0						
Pulse Train Input Type (Differential Line Driver)		ACON-PL-30I(1)-(II)-2-0	Pulse train input type with differential line driver support	(—)	DC24V	(Standard) 1.3A rated 4.4A max. (Power-saving) 1.3A rated 2.2A max.	—	→ P631
Pulse Train Input Type (Open Collector)		ACON-PO-30I(1)-(II)-2-0	Pulse train input type with open collector support					
Serial Communication Type		ACON-SE-30I(1)-N-0-0	Dedicated Serial Communication	64 points	DC24V	(Standard) 1.3A rated 4.4A max. (Power-saving) 1.3A rated 2.2A max.	—	—
Program Control Type		ASEL-CS-1-30I(1)-(II)-2-0	Programmed operation is possible. Can operate up to 2 axes	1,500 points	DC24V	(Standard) 1.3A rated 4.4A max. (Power-saving) 1.3A rated 2.2A max.	—	→ P675

* This is for the single-axis ASEL. * Enter the code "LA" in (1) when the power-saving specification is specified. * (II) indicates I/O type (NP/PN). * (III) indicates number of axes (1 to 8). * (IV) indicates field network specification symbol.

- Slider Type
- Mini
- Standard
- Controller Integrated
- Rod Type
- Mini
- Standard
- Controllers Integrated
- Table/Arm/Flat Type
- Mini
- Standard
- Gripper/Rotary Type
- Linear Servo Type
- Clean-room Type
- Splash-Proof Type
- Pulse Motor
- Servo Motor (24V)
- Servo Motor (200V)
- Linear Servo Motor