

# ISDBCR-L-200

Single-axis robot for cleanroom/Large/Actuator width:  
150mm/200 W Straight shape

# ISPDBCR-L-200

Single-axis robot for cleanroom/Large/Actuator width:  
150mm/200W Straight shape **High precision specification**



### Model Specification Items

Series	L	Encoder type	Motor type	Lead	Stroke	Applicable controller	Cable length	Options
ISDBCR: Standard specification ISPDBCR: High precision specification		A: Absolute specification I: Incremental specification	200: 200W	40: 40mm 20: 20mm 10: 10mm	100: 100mm 1300: 1300mm (in 50mm increments)	T1: XSEL-J/K T2: SCON SSEL XSEL-P/Q	N: None S: 3m M: 5m X□: Specified length	Refer to the options table below.

\* Refer to P. 10 for the details of items comprising the model number.

### Model Number/Specification

Model number	Encoder type	Motor output (W)	Lead (mm)	Stroke in 50mm increments (mm)	Speed (mm/s)	Acceleration (Note 1)				Payload (Note 1)				Rated thrust (N)	Suction flow rate (Nl/min)
						Horizontal (G)		Vertical (G)		Horizontal (kg)		Vertical (kg)**			
						Rated	Maximum	Rated	Maximum	Rated acceleration	Maximum acceleration	Rated acceleration	Maximum acceleration		
ISDBCR[ISPDBCR]-L-①-200-40-②-③-④-⑤	Absolute/Incremental	200	40	100~1300	1~1800	0.4	1.0	0.4	1.0	15	7	2.5	2	85.5	180
ISDBCR[ISPDBCR]-L-①-200-20-②-③-④-⑤			20		1~1200	0.4	1.0	0.4	1.0	45	15	9	5	170.9	120
ISDBCR[ISPDBCR]-L-①-200-10-②-③-④-⑤			10		1~600	0.4	0.7	0.4	0.6	90	40	20	14	341.8	50

\*In the above model numbers, ① indicates the encoder type, ② indicates the stroke, ③ indicates the applicable controller, ④ indicates the cable length, and ⑤ indicates the option(s).  
\*\*If the guide with ball retention mechanism (RT) is used, the vertical payload decreases by 1.0kg. (Please also refer to P.9).

### Option

Name	Model number	Reference page	Name	Model number	Reference page
Cable exit from the left	A1S	→P11	Home limit switch	L	→P11
Cable exit from the rear left	A1E	→P11	Home limit switch on the opposite side	LL	→P11
Cable exit from the right	A3S	→P11	Master axis specification	LM	→P12
Cable exit from the rear right	A3E	→P11	Master axis specification (sensor on the opposite side)	LLM	→P12
AQ seal (standard feature)	AQ	→P11	Non-motor side specification	NM	→P12
Brake	B	→P11	Guide with ball retention mechanism	RT	→P12
Creep sensor	C	→P11	Slave axis specification	S	→P12
Creep sensor on the opposite side	CL	→P11	High straightness, precision specification	ST	→P13
			Suction tube joint on the opposite side	VR	→P12

### Common Specifications


Positioning repeatability (Note 2)	±0.01mm [±0.005mm]
Drive method (Note 3)	Ball screw ø20mm, rolled C10 [equivalent to rolled C5]
Lost Motion (Note 4)	0.05mm [0.02mm] max.
Dynamic allowable load moment (Note 5)	Ma: 104.9N·m Mb: 149.9N·m Mc: 248.9N·m
Overhang load length	Ma direction: 750mm max. Mb, Mc directions: 750mm max.
Dynamic straightness (Note 6)	0.02mm/m max.
Base	Material: Aluminum, with white alumite treatment
Applicable controller	T1: XSEL-J/K T2: XSEL-P/Q, SSEL, SCON
Cable length (Note 7)	N: None, S: 3m, M: 5m, X□: Specified length
Grease	Low dust-raising grease (for ball screw and guide)
Cleanliness degree	Class 10 (0.1µm per 1cf)
Suction tube joint	Quick connect joint, applicable tube outer diameter ø12mm

### Diagram

\*CAD drawings are available for download from our website.

2D CAD

SE: Stroke End  
ME: Mechanical End

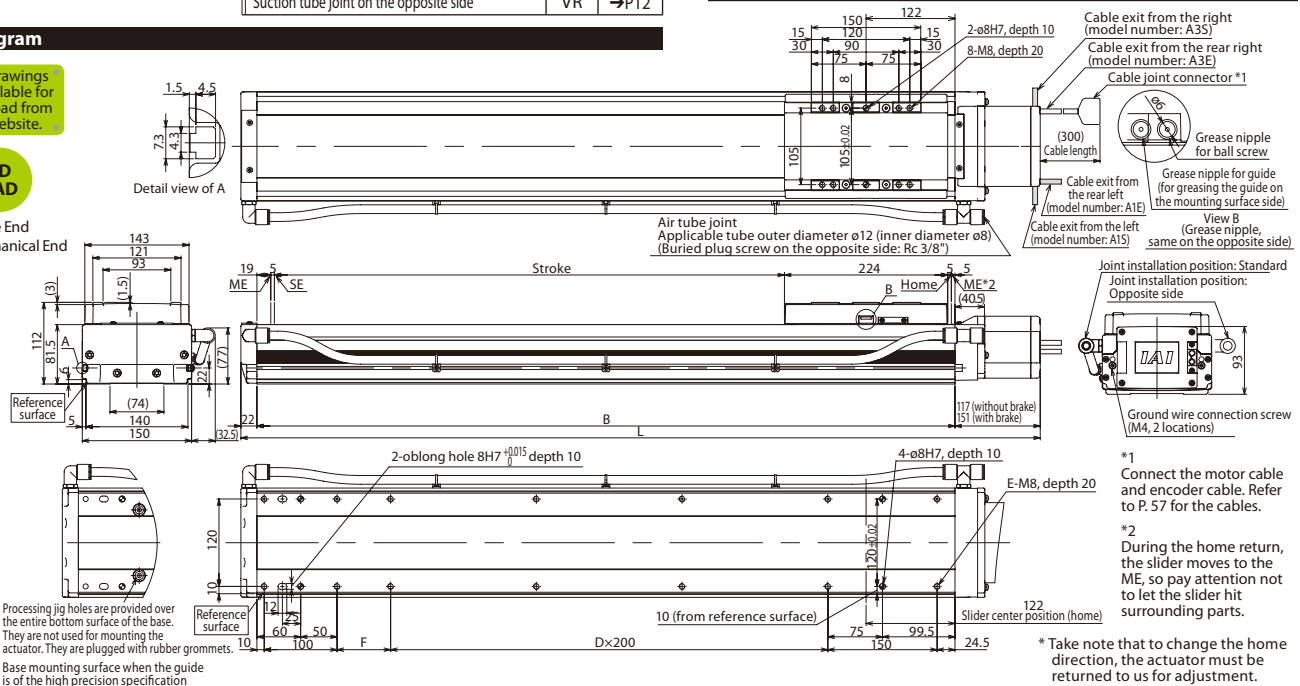

### Dimensions, Mass and Maximum Speed by Stroke

Stroke	100	150	200	250	300	350	400	450	500	550	600	650	700	750	800	850	900	950	1000	1050	1100	1150	1200	1250	1300		
	L without brake	497	547	597	647	697	747	797	847	897	947	997	1047	1097	1147	1197	1247	1297	1347	1397	1447	1497	1547	1597	1647	1697	
L with brake	531	581	631	681	731	781	831	881	931	981	1031	1081	1131	1181	1231	1281	1331	1381	1431	1481	1531	1581	1631	1681	1731		
B	358	408	458	508	558	608	658	708	758	808	858	908	958	1008	1058	1108	1158	1208	1258	1308	1358	1408	1458	1508	1558		
D	0	0	0	1	1	1	1	2	2	2	2	3	3	3	3	4	4	4	4	5	5	5	5	6	6		
E	8	8	8	10	10	10	10	12	12	12	12	14	14	14	14	16	16	16	16	18	18	18	18	20	20		
F	73.5	123.5	173.5	23.5	73.5	123.5	173.5	23.5	73.5	123.5	173.5	23.5	73.5	123.5	173.5	23.5	73.5	123.5	173.5	23.5	73.5	123.5	173.5	23.5	73.5		
Mass (kg)	11.9	12.7	13.6	14.4	15.3	16.2	17.0	17.9	18.7	19.6	20.4	21.3	22.1	23.0	23.9	24.7	25.6	26.4	27.3	28.1	29.0	29.8	30.7	31.5	32.4		
Maximum speed (mm/s)	Lead 40	1800											1700	1540	1410	1290	1185	1095	1015	940	875	815					
	Lead 20	1200											850	770	705	645	595	545	505	470	440	410					
	Lead 10	600											585	520	470	425	385	350	320	295	275	255	235	220	205		

\*If the brake is equipped, the mass increases by 0.5kg. \*The maximum speed (mm/s) varies depending on the stroke.

### Applicable Controller Specifications

Applicable Controller	Maximum number of controlled axes	Connectable encoder type	Operating method	Power-supply voltage	Reference page
X-SEL-P/Q	6 axes	Absolute/Incremental	Program	Single/three-phase 200 VAC	→P56
X-SEL-J/K	4 axes			→P56	
SSEL	2 axes			Single-phase 100/200 VAC	→P56
SCON	1 axis			Positioner pulse train control	→P56



(Note 1) Refer to P. 9 for the relationship of acceleration and payload. (Notes 2, 3, 4) The values in [ ] apply to the ISPDBCR series. Other specification values apply commonly to the ISDBCR and ISPDBCR.  
(Note 5) The value of dynamic straightness is when the high straightness, precision specification (option) is specified.  
(Note 6) The maximum cable length is 30m. Specify a desired length in meters. (Example. X08 = 8m)  
(Note 7)