

**PCON, ACON, DCON, SCON
RCP6S Series + PLC Connection Unit
ERC2, ERC3**

Serial Communication [Modbus Version]

Operation Manual, Tenth Edition

IAI Corporation

IAI

Modbus

Please Read Before Use

Thank you for purchasing our product.

This Operation Manual explains the serial communication (Modbus), among others, providing the information you need to know to use the product safely.

Before using the product, be sure to read this manual and fully understand the contents explained herein to ensure safe use of the product.

The DVD that comes with the product contains operation manuals for IAI products.

When using the product, refer to the necessary portions of the applicable operation manual by printing them out or displaying them on a PC.

After reading the Operation Manual, keep it in a convenient place so that whoever is handling this product can reference it quickly when necessary.

[Important]

- The product cannot be operated in any way unless expressly specified in this Operation Manual. IAI shall assume no responsibility for the outcome of any operation not specified herein.
- Information contained in this Operation Manual is subject to change without notice for the purpose of product improvement.
- If you have any question or comment regarding the content of this manual, please contact the IAI sales office near you.
- Using or copying all or part of this Operation Manual without permission is prohibited.
- The company names, names of products and trademarks of each company shown in the sentences are registered trademarks.

Construction of Instruction Manual for Each Controller Model and This Manual

● Basic Specifications

Serial Communication (Modbus_RTU/ASCII) (This Manual) _____ ME0162

★ Related Controller Model and Instruction Manual Number

| | |
|------------------------------------------|--------|
| ACON-CB/CGB, DCON-CB/CGB _____ | ME0343 |
| ACON-CYB/PLB/POB, DCON-CYB/PLB/POB _____ | ME0354 |
| ACON-CA, DCON-CA _____ | ME0326 |
| ACON-C/CG _____ | ME0176 |
| ACON-PL/PO _____ | ME0166 |
| ACON-SE _____ | ME0171 |
| ACON-CY _____ | ME0167 |

| | |
|----------------------------|--------|
| PCON-CB/CGB/CFB/CGFB _____ | ME0342 |
| PCON-CYB/PLB/POB _____ | ME0353 |
| PCON-CA/CFA _____ | ME0289 |
| PCON-C/CG/CF _____ | ME0170 |
| PCON-PL/PO _____ | ME0164 |
| PCON-SE _____ | ME0163 |
| PCON-CY _____ | ME0156 |

| | |
|------------------------------------|--------|
| SCON-CB/CGB _____ | ME0340 |
| SCON-CB-F (Servo Press Type) _____ | ME0345 |
| SCON-CA/CAL/CGAL _____ | ME0243 |
| SCON-C _____ | ME0161 |

| | |
|-----------------------------------------------------------|--------|
| RCP6S Series + PLC Connection Unit (This Manual) _____ | ME0162 |
| [RCP6S Series: RCP6S, RCM-P6PC, RCM-P6AC, RCM-P6DC] _____ | ME0349 |

| | |
|------------------|--------|
| ERC3 _____ | ME0297 |
| ERC2 (PIO) _____ | ME0158 |
| ERC2 (SIO) _____ | ME0159 |

| | |
|------------------------------|--------|
| ROBONET-SIO ERC2 (PIO) _____ | ME0208 |
|------------------------------|--------|

Table of Contents

| | |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----|
| Safety Guide | 1 |
| Handling Precautions | 8 |
| 1 Overview | 11 |
| 1.1 Instruction Manuals Stored in DVD Related to This Product | 11 |
| 2 Specifications | 13 |
| 2.1 Communication Mode | 14 |
| 3 Preparation for Communication | 15 |
| 3.1 In Case the Host Uses RS232C Interface | 15 |
| (1) System configuration | 15 |
| (2) Wiring | 16 |
| 3.2 In Case the Host Uses RS485 Interface | 18 |
| (1) System configuration | 18 |
| (2) Wiring | 19 |
| 3.3 Communication Connector Pin Assignment of PLC and PC (Reference) | 20 |
| 3.4 Various Setting before Starting Communication | 21 |
| 3.5 Setting Axis Numbers | 22 |
| 3.6 Setting Controller Communication Speed | 23 |
| 3.6.1 Setting Wiring and Hardware for Each System | 23 |
| 3.6.2 Setting Communication Speed | 23 |
| 4 Communication | 25 |
| 4.1 Message Transmission Timing | 25 |
| 4.2 Timeout and Retry | 26 |
| 4.3 Internal Addresses and Data Structure of RC Controller | 27 |
| 4.3.1 Structure of Modbus Registers | 27 |
| 4.3.2 Details of Modbus Registers | 28 |
| (1) Data of alarm detail code (Address = 0500 _H) (ALA0) | 30 |
| (2) Data of alarm address (Address = 0501 _H) (ALA0) | 30 |
| (3) Data of alarm code (Address = 0503 _H) (ALC0) | 31 |
| (4) Data of alarm occurrence time (Address = 0504 _H) (ALT0) | 32 |
| (5) Data of device control register 1 (Address = 0D00 _H) (DRG1) | 33 |
| (6) Data of device control register 2 (Address = 0D01 _H) (DRG2) | 34 |
| (7) Data of position number command registers (Address = 0D03 _H) (POSR) | 35 |
| (8) Data of total moving count (Address = 8400 _H) (TLMC) | 36 |
| (9) Data of total moving distance (Address = 8402 _H) (ODOM) | 37 |
| (10) Data of present time (Address = 841E _H (SCON-CA/CAL/CB), 8420 _H (PCON-CA/CFA/CB/CFB), 8422 _H (ACON-CA/CB, DCON-CA/CB) (TIMN) | 38 |
| (11) Data of total FAN driving time (Address = 842A _H (SCON-CAL, SCON-CB [400W or more]), 842E _H (PCON-CFA/CFB) (TFAN) | 39 |
| (12) Data of device status register 1 (Address = 9005 _H) (DSS1) | 40 |
| (13) Data of device status register 2 (Address = 9006 _H) (DSS2) | 41 |
| (14) Data of expansion device status register (Address = 9007 _H) (DSSE) | 42 |
| (15) Data of system status registers (Address = 9008 _H) (STAT) | 43 |
| (16) Data of special port monitor registers (Address = 9012 _H) (SIPM) | 44 |
| (17) Data of zone status register (Address = 9013 _H) (ZONS) | 45 |
| (18) Data of position number status register (Address = 9014 _H) (POSS) Exected program number registers (Address = 9014 _H) (PSOR) ·For SCON Servo Press Type | 46 |
| (19) Data of expansion system status registers (Address = 9015 _H) (SSSE) | 47 |

| | |
|-------------------------------------------------------------------------------------------------------------------------|-----|
| (20) Overload level monitors (Address = 9020 _H) (OLLV)..... | 48 |
| (21) Press program alarm codes (Address = 9022 _H) (ALMP) · SCON Servo Press Type only..... | 49 |
| (22) Alarm generated press program No. (Address = 9023 _H) (ALMP) · SCON Servo Press Type only..... | 50 |
| (23) Press program status registers (Address = 9024 _H) (PPST) · SCON Servo Press Type only | 51 |
| (24) Press program judgements status registers (Address = 9025 _H) (PPJD) · SCON Servo Press Type only | 52 |
| 4.3.3 Structure of Modbus Status Registers | 53 |
| 4.3.4 Detail of Modbus Status Registers..... | 54 |
| 5 Modbus RTU | 58 |
| 5.1 Message Frames (Query and Response)..... | 59 |
| 5.2 List of RTU Mode Queries | 61 |
| 5.3 Data and Status Reading (Used function code 03) | 65 |
| 5.3.1 Reading Consecutive Multiple Registers..... | 65 |
| 5.3.2 Alarm Detail Description Reading <<ALA0, ALC0, ALT0>> | 69 |
| 5.3.3 Position Data Description Reading <<PCMD, INP, VCMD, ZNMP, ZNLP, ACMD, DCMD, PPOW, LPOW, CTLF>> | 71 |
| 5.3.4 Total moving count Reading <<TLMC>> | 74 |
| 5.3.5 Total moving distance Reading <<ODOM>> (in 1 mm units)..... | 76 |
| 5.3.6 Present Time Reading <<TIMN>> | 78 |
| 5.3.7 Total FAN Driving Time Reading <<TFAN>> | 81 |
| 5.3.8 Current Position Reading <<PNOW>> (in 0.01 mm units) | 83 |
| 5.3.9 Present Alarm Code Reading <<ALMC>> | 85 |
| 5.3.10 I/O Port Input Signal Status Reading <<DIPM>> | 87 |
| 5.3.11 I/O Port Output Signal Status Reading<<DOPM>> | 92 |
| 5.3.12 Controller Status Signal Reading 1 <<DSS1>> | 97 |
| 5.3.13 Controller Status Signal Reading 2 <<DSS2>> | 99 |
| 5.3.14 Controller Status Signal Reading 3 <<DSSE>> | 101 |
| 5.3.15 Controller Status Signal Reading 4 <<STAT>> | 103 |
| 5.3.16 Current Speed Reading <<VNOW>> | 105 |
| 5.3.17 Current Ampere Reading <<CNOW>> | 107 |
| 5.3.18 Deviation Reading <<DEVI>> | 109 |
| 5.3.19 Total Time after Power On Reading <<STIM>> | 111 |
| 5.3.20 Special Input Port Input Signal Status Reading<<SIPM>> | 113 |
| 5.3.21 Zone Output Signal Status Reading<<ZONS>>..... | 115 |
| 5.3.22 Position Complete Number Reading<<POSS>> Exected Program Number Register (Servo Press Type) <<POSS>>..... | 117 |
| 5.3.23 Controller Status Signal Reading 5 <<SSSE>>..... | 119 |
| 5.3.24 Current Load Reading <<FBFC>> — SCON-CA/CB Only..... | 121 |
| 5.3.25 Overload Level Monitor Reading <<OLLV>> — SCON-CA/CAL/CB Only | 123 |
| 5.3.26 Press Program Alarm Code Reading <<ALMP>> — Servo Press Type Only..... | 125 |
| 5.3.27 Alarm Generated Press Program No. Reading <<ALMP>> — Servo Press Type Only..... | 127 |
| 5.3.28 Press Program Status Register Reading <<PPST>> — Servo Press Type Only | 129 |
| 5.3.29 Press Program Judgement Status Register Reading <<PPJD>> — Servo Press Type Only..... | 131 |
| 5.4 Operation Commands and Data Rewrite (Used function code 05) | 133 |
| 5.4.1 Writing to Coil..... | 133 |
| 5.4.2 Safety Speed Enable/Disable Switching (SFTY) | 134 |
| 5.4.3 Servo ON/OFF <<SON>> | 136 |
| 5.4.4 Alarm Reset <<ALRS>> | 138 |
| 5.4.5 Brake Forced Release <<BKRL>> | 140 |
| 5.4.6 Pause <<STP>>..... | 142 |

| | | |
|--------|-----------------------------------------------------------------------------------------------------------|-----|
| 5.4.7 | Home Return <<HOME>> | 144 |
| 5.4.8 | Positioning Start Command <<CSTR>> | 146 |
| 5.4.9 | Jog/Inch Switching <<JISL>> | 148 |
| 5.4.10 | Teaching Mode Command <<MOD>> | 150 |
| 5.4.11 | Position Data Load Command <<TEAC>> | 152 |
| 5.4.12 | Jog+ Command <<JOG+>> | 154 |
| 5.4.13 | Jog- Command <<JOG->> | 156 |
| 5.4.14 | Start Positions 0 to 7 <<ST0 to ST7>> Movement Command (Limited to solenoid valve mode) | 158 |
| 5.4.15 | Load Cell Calibration Command <<CLBR>> — A dedicated load cell must be connected. | 160 |
| 5.4.16 | PIO/Modbus Switching Setting <<PMSL>> | 162 |
| 5.4.17 | Deceleration Stop <<STOP>> | 164 |
| 5.4.18 | Axis operation permission <<ENMV>> — Servo Press Type Only | 166 |
| 5.4.19 | Program Home Position Movement <<PHOM>> — Servo Press Type Only | 168 |
| 5.4.20 | Search Stop <<SSTP>> — Servo Press Type Only | 170 |
| 5.4.21 | Program compulsoly finish <<FPST>> — Servo Press Type Only | 172 |
| 5.4.22 | Program Start <<PSTR>> — Servo Press Type Only | 174 |
| 5.5 | Direct Writing of Control Information (Used function code 06) | 176 |
| 5.5.1 | Writing to Registers | 176 |
| 5.6 | Direct Writing of Positioning Data (Used function code 10) | 180 |
| 5.6.1 | Numerical Value Movement Command | 180 |
| 5.6.2 | Writing Position Table Data | 198 |
| 6 | Modbus ASCII | 206 |
| 6.1 | Message Frames (Query and Response) | 207 |
| 6.2 | ASCII Code Table | 210 |
| 6.3 | List of ASCII Mode Queries | 211 |
| 6.4 | Data and Status Reading (Used function code 03) | 215 |
| 6.4.1 | Reading Consecutive Multiple Registers | 215 |
| 6.4.2 | Alarm Detail Description Reading <<ALA0, ALC0, ALT0>> | 219 |
| 6.4.3 | Position Data Description Reading <<PCMD, INP, VCMD, ZNMP, ZNLP, ACMD, DCMD, PPOW, LPOW, CTLF>> | 221 |
| 6.4.4 | Total moving count Reading <<TLMC>> | 224 |
| 6.4.5 | Total moving distance Reading <<ODOM>> (in 0.01 mm units) | 226 |
| 6.4.6 | Present Time Reading <<TIMN>> | 228 |
| 6.4.7 | Total FAN Driving Time Reading <<TFAN>> | 231 |
| 6.4.8 | Current Position Reading (in 0.01 mm units) Monitor <<PNOW>> | 233 |
| 6.4.9 | Present Alarm Code Query <<ALMC>> | 235 |
| 6.4.10 | I/O Port Input Signal Status Reading <<DIPM>> | 237 |
| 6.4.11 | I/O Port Output Signal Status Reading <<DOPM>> | 242 |
| 6.4.12 | Controller Status Signal Reading <<DSS1>> | 247 |
| 6.4.13 | Controller Status Signal Reading 2 <<DSS2>> | 249 |
| 6.4.14 | Controller Status Signal Reading 3 <<DSSE>> | 251 |
| 6.4.15 | Controller Status Signal Reading 4 <<STAT>> | 253 |
| 6.4.16 | Current Speed Query <<VNOW>> | 255 |
| 6.4.17 | Current Ampere Reading <<CNOW>> | 257 |
| 6.4.18 | Deviation Reading <<DEVI>> | 259 |
| 6.4.19 | Total Time after Power On Reading <<STIM>> | 261 |
| 6.4.20 | Special Input Port Input Signal Status Query <<SIPM>> | 263 |
| 6.4.21 | Zone Output Signal Status Reading <<ZONS>> | 265 |
| 6.4.22 | Position Complete Number Query <<POSS>> Exected Program Number Register (Servo Press Type) <<POSS>> | 267 |

| | | |
|--------|---------------------------------------------------------------------------------------------------|-----|
| 6.4.23 | Controller Status Signal 5 <<SSSE>> | 269 |
| 6.4.24 | Current Load Reading <<FBFC>> — SCON-CA/CB Only..... | 271 |
| 6.4.25 | Overload Label Monitor Reading <<OLLV>> — SCON-CA/CAL/CB Only | 273 |
| 6.4.26 | Press Program Alarm Code Reading <<ALMP>> — Servo Press Type Only..... | 275 |
| 6.4.27 | Alarm Generated Press Program Reading <<ALMP>> — Servo Press Type Only..... | 277 |
| 6.4.28 | Press Program Status Register Reading <<PPST>> — Servo Press Type Only | 279 |
| 6.4.29 | Press Program Judgement Status Register Reading <<PPJD>> — Servo Press Type Only..... | 281 |
| 6.5 | Operation Commands and Data Rewrite (Used function code 05) | 283 |
| 6.5.1 | Writing to Coil..... | 283 |
| 6.5.2 | Safety Speed Enable/Disable Switching (SFTY) | 284 |
| 6.5.3 | Servo ON/OFF <<SON>> | 286 |
| 6.5.4 | Alarm Reset <<ALRS>> | 288 |
| 6.5.5 | Brake Forced Release <<BKRL>> | 290 |
| 6.5.6 | Pause <<STP>> | 292 |
| 6.5.7 | Home return <<HOME>> | 294 |
| 6.5.8 | Positioning Start Command <<CSTR>> | 296 |
| 6.5.9 | Jog/Inch Switching <<JISL>> | 298 |
| 6.5.10 | Teaching Mode Command <<MOD>> | 300 |
| 6.5.11 | Position Data Load Command <<TEAC>> | 302 |
| 6.5.12 | Jog+ Command <<JOG+>> | 304 |
| 6.5.13 | Jog- Command <<JOG->> | 306 |
| 6.5.14 | Start Positions 0 to 7 <<ST0 to ST7>> (Limited to solenoid valve mode)..... | 308 |
| 6.5.15 | Load Cell Calibration Command <<CLBR>> — A dedicated load cell must be connected. | 310 |
| 6.5.16 | PIO/Modbus Switching Setting <<PMSL>> | 312 |
| 6.5.17 | Deceleration Stop <<STOP>> | 314 |
| 6.5.18 | Axis operation permission <<ENMV>> — Servo Press Type Only..... | 316 |
| 6.5.19 | Program Home Position Movement <<PHOM>> — Servo Press Type Only | 318 |
| 6.5.20 | Search Stop <<SSTP>> — Servo Press Type Only | 320 |
| 6.5.21 | Program compulsory finish <<FPST>> — Servo Press Type Only | 322 |
| 6.5.22 | Program Start <<PSTR>> — Servo Press Type Only | 324 |
| 6.6 | Control Information Direct Writing (Used function code 06) | 326 |
| 6.6.1 | Writing to Registers | 326 |
| 6.7 | Positioning Data Direct Writing (Used function code 10)..... | 330 |
| 6.7.1 | Numerical Value Movement Command | 330 |
| 6.7.2 | Writing Position Table Data | 348 |
| 7 | Troubleshooting..... | 356 |
| 7.1 | Responses at Errors (Exception Responses)..... | 357 |
| 7.2 | Notes | 360 |
| 7.3 | When Communication Fails | 361 |
| 8 | Reference Materials | 368 |
| 8.1 | CRC Check Calculation | 369 |
| 8.2 | Configuration of Systems that Use both SIO and PIO..... | 371 |
| 8.3 | Regarding Option Units..... | 373 |
| 8.3.1 | SIO converter (vertical specification: RCB-TU-SIO-A, horizontal specification: RCB-TU-SIO-B)..... | 373 |
| 8.3.2 | PLC Connection Unit for RCP6S (RCB-P6PLC-□) * Not applicable for ASCII Mode | 374 |
| | Change History | 377 |

Safety Guide

“Safety Guide” has been written to use the machine safely and so prevent personal injury or property damage beforehand. Make sure to read it before the operation of this product.

Safety Precautions for Our Products

The common safety precautions for the use of any of our robots in each operation.

| No. | Operation Description | Description |
|-----|-----------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | Model Selection | <ul style="list-style-type: none">• This product has not been planned and designed for the application where high level of safety is required, so the guarantee of the protection of human life is impossible. Accordingly, do not use it in any of the following applications.<ol style="list-style-type: none">1) Medical equipment used to maintain, control or otherwise affect human life or physical health.2) Mechanisms and machinery designed for the purpose of moving or transporting people (For vehicle, railway facility or air navigation facility)3) Important safety parts of machinery (Safety device, etc.)• Do not use the product outside the specifications. Failure to do so may considerably shorten the life of the product.• Do not use it in any of the following environments.<ol style="list-style-type: none">1) Location where there is any inflammable gas, inflammable object or explosive2) Place with potential exposure to radiation3) Location with the ambient temperature or relative humidity exceeding the specification range4) Location where radiant heat is added from direct sunlight or other large heat source5) Location where condensation occurs due to abrupt temperature changes6) Location where there is any corrosive gas (sulfuric acid or hydrochloric acid)7) Location exposed to significant amount of dust, salt or iron powder8) Location subject to direct vibration or impact• For an actuator used in vertical orientation, select a model which is equipped with a brake. If selecting a model with no brake, the moving part may drop when the power is turned OFF and may cause an accident such as an injury or damage on the work piece. |

| No. | Operation Description | Description |
|-----|--------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 2 | Transportation | <ul style="list-style-type: none"> • When carrying a heavy object, do the work with two or more persons or utilize equipment such as crane. • When the work is carried out with 2 or more persons, make it clear who is to be the leader and who to be the follower(s) and communicate well with each other to ensure the safety of the workers. • When in transportation, consider well about the positions to hold, weight and weight balance and pay special attention to the carried object so it would not get hit or dropped. • Transport it using an appropriate transportation measure. The actuators available for transportation with a crane have eyebolts attached or there are tapped holes to attach bolts. Follow the instructions in the operation manual for each model. • Do not step or sit on the package. • Do not put any heavy thing that can deform the package, on it. • When using a crane capable of 1t or more of weight, have an operator who has qualifications for crane operation and sling work. • When using a crane or equivalent equipments, make sure not to hang a load that weighs more than the equipment's capability limit. • Use a hook that is suitable for the load. Consider the safety factor of the hook in such factors as shear strength. • Do not get on the load that is hung on a crane. • Do not leave a load hung up with a crane. • Do not stand under the load that is hung up with a crane. |
| 3 | Storage and Preservation | <ul style="list-style-type: none"> • The storage and preservation environment conforms to the installation environment. However, especially give consideration to the prevention of condensation. • Store the products with a consideration not to fall them over or drop due to an act of God such as earthquake. |
| 4 | Installation and Start | <p>(1) Installation of Robot Main Body and Controller, etc.</p> <ul style="list-style-type: none"> • Make sure to securely hold and fix the product (including the work part). A fall, drop or abnormal motion of the product may cause a damage or injury. Also, be equipped for a fall-over or drop due to an act of God such as earthquake. • Do not get on or put anything on the product. Failure to do so may cause an accidental fall, injury or damage to the product due to a drop of anything, malfunction of the product, performance degradation, or shortening of its life. • When using the product in any of the places specified below, provide a sufficient shield. <ol style="list-style-type: none"> 1) Location where electric noise is generated 2) Location where high electrical or magnetic field is present 3) Location with the mains or power lines passing nearby 4) Location where the product may come in contact with water, oil or chemical droplets |

| No. | Operation Description | Description |
|-----|------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 4 | Installation and Start | <p>(2) Cable Wiring</p> <ul style="list-style-type: none">• Use our company's genuine cables for connecting between the actuator and controller, and for the teaching tool.• Do not scratch on the cable. Do not bend it forcibly. Do not pull it. Do not coil it around. Do not insert it. Do not put any heavy thing on it. Failure to do so may cause a fire, electric shock or malfunction due to leakage or continuity error.• Perform the wiring for the product, after turning OFF the power to the unit, so that there is no wiring error.• When the direct current power (+24V) is connected, take the great care of the directions of positive and negative poles. If the connection direction is not correct, it might cause a fire, product breakdown or malfunction.• Connect the cable connector securely so that there is no disconnection or looseness. Failure to do so may cause a fire, electric shock or malfunction of the product.• Never cut and/or reconnect the cables supplied with the product for the purpose of extending or shortening the cable length. Failure to do so may cause the product to malfunction or cause fire. |
| | | <p>(3) Grounding</p> <ul style="list-style-type: none">• The grounding operation should be performed to prevent an electric shock or electrostatic charge, enhance the noise-resistance ability and control the unnecessary electromagnetic radiation.• For the ground terminal on the AC power cable of the controller and the grounding plate in the control panel, make sure to use a twisted pair cable with wire thickness 0.5mm^2 (AWG20 or equivalent) or more for grounding work. For security grounding, it is necessary to select an appropriate wire thickness suitable for the load. Perform wiring that satisfies the specifications (electrical equipment technical standards).• Perform Class D Grounding (former Class 3 Grounding with ground resistance 100Ω or below). |





| No. | Operation Description | Description |
|-----|------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 4 | Installation and Start | <p>(4) Safety Measures</p> <ul style="list-style-type: none"> • When the work is carried out with 2 or more persons, make it clear who is to be the leader and who to be the follower(s) and communicate well with each other to ensure the safety of the workers. • When the product is under operation or in the ready mode, take the safety measures (such as the installation of safety and protection fence) so that nobody can enter the area within the robot's movable range. When the robot under operation is touched, it may result in death or serious injury. • Make sure to install the emergency stop circuit so that the unit can be stopped immediately in an emergency during the unit operation. • Take the safety measure not to start up the unit only with the power turning ON. Failure to do so may start up the machine suddenly and cause an injury or damage to the product. • Take the safety measure not to start up the machine only with the emergency stop cancellation or recovery after the power failure. Failure to do so may result in an electric shock or injury due to unexpected power input. • When the installation or adjustment operation is to be performed, give clear warnings such as "Under Operation; Do not turn ON the power!" etc. Sudden power input may cause an electric shock or injury. • Take the measure so that the work part is not dropped in power failure or emergency stop. • Wear protection gloves, goggle or safety shoes, as necessary, to secure safety. • Do not insert a finger or object in the openings in the product. Failure to do so may cause an injury, electric shock, damage to the product or fire. • When releasing the brake on a vertically oriented actuator, exercise precaution not to pinch your hand or damage the work parts with the actuator dropped by gravity. |
| 5 | Teaching | <ul style="list-style-type: none"> • When the work is carried out with 2 or more persons, make it clear who is to be the leader and who to be the follower(s) and communicate well with each other to ensure the safety of the workers. • Perform the teaching operation from outside the safety protection fence, if possible. In the case that the operation is to be performed unavoidably inside the safety protection fence, prepare the "Stipulations for the Operation" and make sure that all the workers acknowledge and understand them well. • When the operation is to be performed inside the safety protection fence, the worker should have an emergency stop switch at hand with him so that the unit can be stopped any time in an emergency. • When the operation is to be performed inside the safety protection fence, in addition to the workers, arrange a watchman so that the machine can be stopped any time in an emergency. Also, keep watch on the operation so that any third person can not operate the switches carelessly. • Place a sign "Under Operation" at the position easy to see. • When releasing the brake on a vertically oriented actuator, exercise precaution not to pinch your hand or damage the work parts with the actuator dropped by gravity. <p>* Safety protection Fence : In the case that there is no safety protection fence, the movable range should be indicated.</p> |

| No. | Operation Description | Description |
|-----|-----------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 6 | Trial Operation | <ul style="list-style-type: none">• When the work is carried out with 2 or more persons, make it clear who is to be the leader and who to be the follower(s) and communicate well with each other to ensure the safety of the workers.• After the teaching or programming operation, perform the check operation one step by one step and then shift to the automatic operation.• When the check operation is to be performed inside the safety protection fence, perform the check operation using the previously specified work procedure like the teaching operation.• Make sure to perform the programmed operation check at the safety speed. Failure to do so may result in an accident due to unexpected motion caused by a program error, etc.• Do not touch the terminal block or any of the various setting switches in the power ON mode. Failure to do so may result in an electric shock or malfunction. |
| 7 | Automatic Operation | <ul style="list-style-type: none">• Check before starting the automatic operation or rebooting after operation stop that there is nobody in the safety protection fence.• Before starting automatic operation, make sure that all peripheral equipment is in an automatic-operation-ready state and there is no alarm indication.• Make sure to operate automatic operation start from outside of the safety protection fence.• In the case that there is any abnormal heating, smoke, offensive smell, or abnormal noise in the product, immediately stop the machine and turn OFF the power switch. Failure to do so may result in a fire or damage to the product.• When a power failure occurs, turn OFF the power switch. Failure to do so may cause an injury or damage to the product, due to a sudden motion of the product in the recovery operation from the power failure. |

| No. | Operation Description | Description |
|-----|----------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 8 | Maintenance and Inspection | <ul style="list-style-type: none"> • When the work is carried out with 2 or more persons, make it clear who is to be the leader and who to be the follower(s) and communicate well with each other to ensure the safety of the workers. • Perform the work out of the safety protection fence, if possible. In the case that the operation is to be performed unavoidably inside the safety protection fence, prepare the "Stipulations for the Operation" and make sure that all the workers acknowledge and understand them well. • When the work is to be performed inside the safety protection fence, basically turn OFF the power switch. • When the operation is to be performed inside the safety protection fence, the worker should have an emergency stop switch at hand with him so that the unit can be stopped any time in an emergency. • When the operation is to be performed inside the safety protection fence, in addition to the workers, arrange a watchman so that the machine can be stopped any time in an emergency. Also, keep watch on the operation so that any third person can not operate the switches carelessly. • Place a sign "Under Operation" at the position easy to see. • For the grease for the guide or ball screw, use appropriate grease according to the Operation Manual for each model. • Do not perform the dielectric strength test. Failure to do so may result in a damage to the product. • When releasing the brake on a vertically oriented actuator, exercise precaution not to pinch your hand or damage the work parts with the actuator dropped by gravity. • The slider or rod may get misaligned OFF the stop position if the servo is turned OFF. Be careful not to get injured or damaged due to an unnecessary operation. • Pay attention not to lose the cover or untightened screws, and make sure to put the product back to the original condition after maintenance and inspection works. Use in incomplete condition may cause damage to the product or an injury. <p>* Safety protection Fence : In the case that there is no safety protection fence, the movable range should be indicated.</p> |
| 9 | Modification and Dismantle | <ul style="list-style-type: none"> • Do not modify, disassemble, assemble or use of maintenance parts not specified based at your own discretion. |
| 10 | Disposal | <ul style="list-style-type: none"> • When the product becomes no longer usable or necessary, dispose of it properly as an industrial waste. • When removing the actuator for disposal, pay attention to drop of components when detaching screws. • Do not put the product in a fire when disposing of it. The product may burst or generate toxic gases. |
| 11 | Other | <ul style="list-style-type: none"> • Do not come close to the product or the harnesses if you are a person who requires a support of medical devices such as a pacemaker. Doing so may affect the performance of your medical device. • See Overseas Specifications Compliance Manual to check whether complies if necessary. • For the handling of actuators and controllers, follow the dedicated operation manual of each unit to ensure the safety. |

Alert Indication

The safety precautions are divided into “Danger”, “Warning”, “Caution” and “Notice” according to the warning level, as follows, and described in the Operation Manual for each model.

| Level | Degree of Danger and Damage | Symbol |
|---------|-------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------|
| Danger | This indicates an imminently hazardous situation which, if the product is not handled correctly, will result in death or serious injury. |  Danger |
| Warning | This indicates a potentially hazardous situation which, if the product is not handled correctly, could result in death or serious injury. |  Warning |
| Caution | This indicates a potentially hazardous situation which, if the product is not handled correctly, may result in minor injury or property damage. |  Caution |
| Notice | This indicates lower possibility for the injury, but should be kept to use this product properly. |  Notice |

Handling Precautions

The explanations provided in this manual are limited to procedures of serial communication. Refer to the operation manual supplied with the ROBO Cylinder Controller (hereinafter referred to as RC controller) for other specifications, such as control, installation and connection.

Caution

- (1) Make sure to follow the usage condition, environment and specifications ranges of the product.
Not doing so may cause a drop in performance or malfunction of the product.
- (2) If any address or function not defined in this specification is sent to an RC controller, the controller may not operate properly or it may implement unintended movements. Do not send any function or address not specified herein.
- (3) RC controllers are designed in such a way that once the controller detects a break (space) signal of 150 msec or longer via its SIO port, it will automatically switch the baud rate to 9600 bps.
On some PCs, the transmission line remains in the break (space) signal transmission mode while the communication port is closed. Exercise caution if one of these PCs is used as the host device, because the baud rate in your RC controller may have been changed to 9600 bps.
- (4) Set the baud rate and other parameters using IAI's PC software or other dedicated teaching tool.
- (5) If the controller is used in a place meeting any of the following conditions, provide sufficient shielding measures. If sufficient actions are not taken, the controller may malfunction:
 - [1] Where large current or high magnetic field generates
 - [2] Where arc discharge occurs due to welding, etc.
 - [3] Where noise generates due to electrostatic, etc.
 - [4] Where the controller may be exposed to radiation
- (6) When performing wiring tasks and inserting/extracting connectors in/from sockets, make sure that the power supplies of the host and each RC controller are turned OFF. Carrying out such tasks with the power supplies turned ON may result in electric shock and/or damage to parts.

- (7) In order to prevent malfunctions due to noise, wire the communication cables such that the communication cables are isolated from power lines and other control wiring.
- (8) In order to prevent malfunctions due to noise, make sure to take noise prevention measures on the electric equipment in the same power supply circuit or within the same device.
- (9) The alarm codes output to 0503_H and 9002_H in Modbus address include those in message level. There are some types in the IAI controllers that do not issue the message level alarms. In case it is necessary to replace a controller that does not issue the message level alarms with one that issues, add the operation patterns at the issuance of a message level alarm in the system that requires changing the operation pattern for each alarm level. (Example: Replacing from PCON-C to PCON-CA)
For the details of the alarm levels to be issued, refer to the troubleshooting in the instruction manual of each controller.
- (10) About Battery-less Absolute Type Stepping Motor Mounted Actuator
Note 1) and 2) should be applied to encoders with resolution of 800 pulses.
 - 1) Position adjustment operation will be conducted only in the first servo-on after the power is turned on due to the characteristics of the stepping motor. The maximum amount of movement in the position adjustment operation is 0.025mm * lead length [mm].
 - 2) Home-return complete signal [HEND] and limit switch output signal [LS] are output after the first servo-on after the power is turned on.
 - 3) An error output will not be issued when the first servo-on is held outside the soft limit range. Soft limit monitoring starts after moved into the range.
 - 4) Make sure to perform the home-return operation (absolute reset) when the motor unit is taken off the actuator for such a purpose as motor replacement work.
- (11) For Position Data editing of RCP6S, RCM-P6PC, RCM-P6AC and RCM-P6DC, the teaching tool such as PC software needs to be connected to the teaching port on the RCP6S actuator. Connecting to ports other than this teaching port cannot access without the connection to this teaching port, and 0 will be read even the reading query is executed.

1 Overview

The ROBO Cylinder Controller (hereinafter referred to as RC controller) is equipped with a serial bus interface for asynchronous communication conforming to the EIA RS485 standard. This interface allows the RC controller to communicate with the host (host controller). In this way, it is possible to build an SIO link system that can connect and control up to 16 axes of slaves (RC controllers) ^(Note 1).

In addition to sending commands to each axis individually, it is also possible to broadcast the same command to all slaves at the same time.

Modbus Protocol is employed as the communication protocol, and it is possible to send commands from a host as well as read internal information.

Since the specifications of Modbus Protocol are disclosed globally, software development can be carried out easily.

(Note 1) Note that it is only possible to connect RC series devices on the same network; old RC series (protocol T) or other devices cannot be connected.

There are 2 types of serial transmission modes: ASCII mode (where 1-byte (8 bits) data is Converted to ASCII code (2 characters) and sent) and RTU mode (where 1-byte (8 bits) data is sent as is).

RC controllers identify the transmission mode on a packet-by-packet basis, thus making it possible to receive in both modes ^(Note 2).

Set the ROBONET RS485 to the SIO through mode. [Refer to the separate ROBONET Operation Manual.]

(Note 2) Make sure to use the same serial transmission mode for all devices on one network: it is not allowed to use both modes.

☆ Controllable controllers

- ERC2(SE)/ERC3 (V0002 or later)
- PCON-C/CG/CF/CY/PL/PO/SE/CA/CFA/CB/CFB/CGB/CGFB/CYB/PLB/POB
- ACON-C/CG/CY/PL/PO/SE/CA/CB/CGB/CYB/PLB/POB
- DCON-CA/CB/CGB/CYB/PLB/POB
- SCON-C/CA/CAL/CGAL/CB/CGB/Servo Press Type
- ROBONET_RS485 (When RTU mode and SIO through mode)
- RCP6S Series + PLC Connection Unit (RTU mode)
[RCP6S Series: RCP6S, RCM-P6PC, RCM-P6AC, RCM-P6DC]

1.1 Instruction Manuals Stored in DVD Related to This Product

Refer to “Construction of Instruction Manuals for Each Controller Model Code and This Manual” in front of the table of contents for the instruction manual numbers for each controller.

Abbreviation for Type Names for Controllers in This Manual

Some controller types may not be able to use some features and commands (queries) explained in this instruction manual. In case there is such restrictions, the type names that are applicable and those that are not applicable should be described. As Safety Category (G) Type is the same as the standard type in the way of applicable and not applicable, abbreviation should be as described below.

| | | |
|------------------------------|---------------------------------|---------------------------------|
| [Abbreviation] | Abbreviated as C for C/CG | Abbreviated as CAL for CAL/CGAL |
| Abbreviated as CB for CB/CGB | Abbreviated as CFA for CFA/CGFA | Abbreviated as CFB for CFB/CGFB |

2 Specifications

| Item | Method/condition |
|----------------------------------|---------------------------------------------------------------------------------------------------------------------------------|
| Interface | Conforming to EIA RS485 |
| Communication method | Half-duplex communication |
| Maximum total extension distance | 100 m |
| Synchronization method | Start-stop synchronization |
| Connection pattern | 1-to-N unbalanced bus connection ($1 \leq N \leq 16$) |
| Transmission mode | RTU/ASCII (auto-detect) ^(Note) |
| Baud rate (bps) | Selectable from the following speeds via parameter setting: 9600, 14400, 19200, 28800, 38400 57600, 76800, 115200, 230400 |
| Bit length | 8 bits |
| Stop bit | 1 bit |
| Parity | None |

Note ROBONET and RCP6S Series + PLC Connection Unit are not applicable for ASCII Mode.
[RCP6S Series: RCP6S, RCM-P6PC, RCM-P6AC, RCM-P6DC]

2.1 Communication Mode

In the Modbus protocol, communication takes place in a single-master/multiple-slave configuration. In this communication, only the master (the PLC host in the example below) issues a query to a specified slave (the RC controller connected to axis C in the example below). When the specified slave receives this query, it executes the function specified in the query, and then returns a response message (one communication cycle is completed with this operation).

The query message format consists of the slave address (or broadcast), function code defining the content of request, data, and error check.

The response message format consists of the function code confirming the content of request, data, and error check. Following figure shows the query message format and response message configuration.


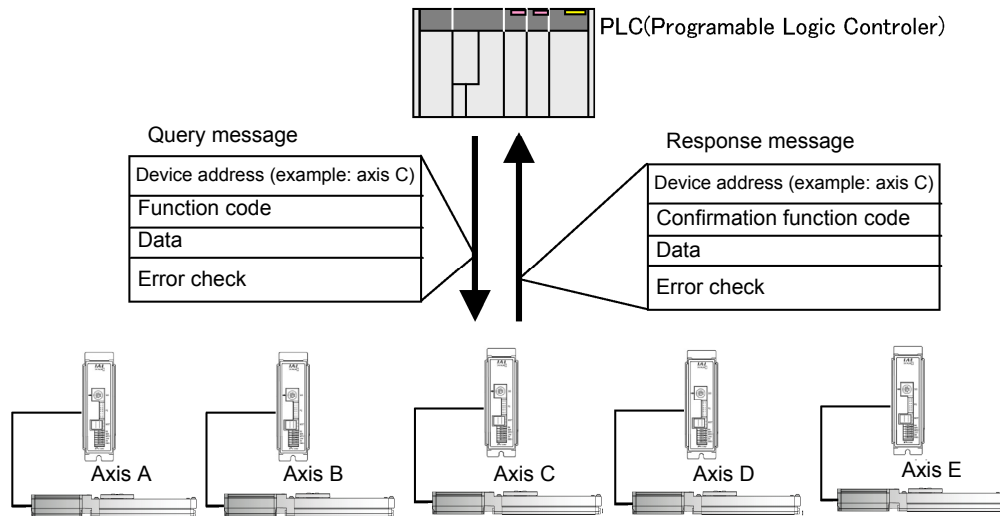


Fig. 2.1

3 Preparation for Communication


3.1 In Case the Host Uses RS232C Interface

(1) System configuration

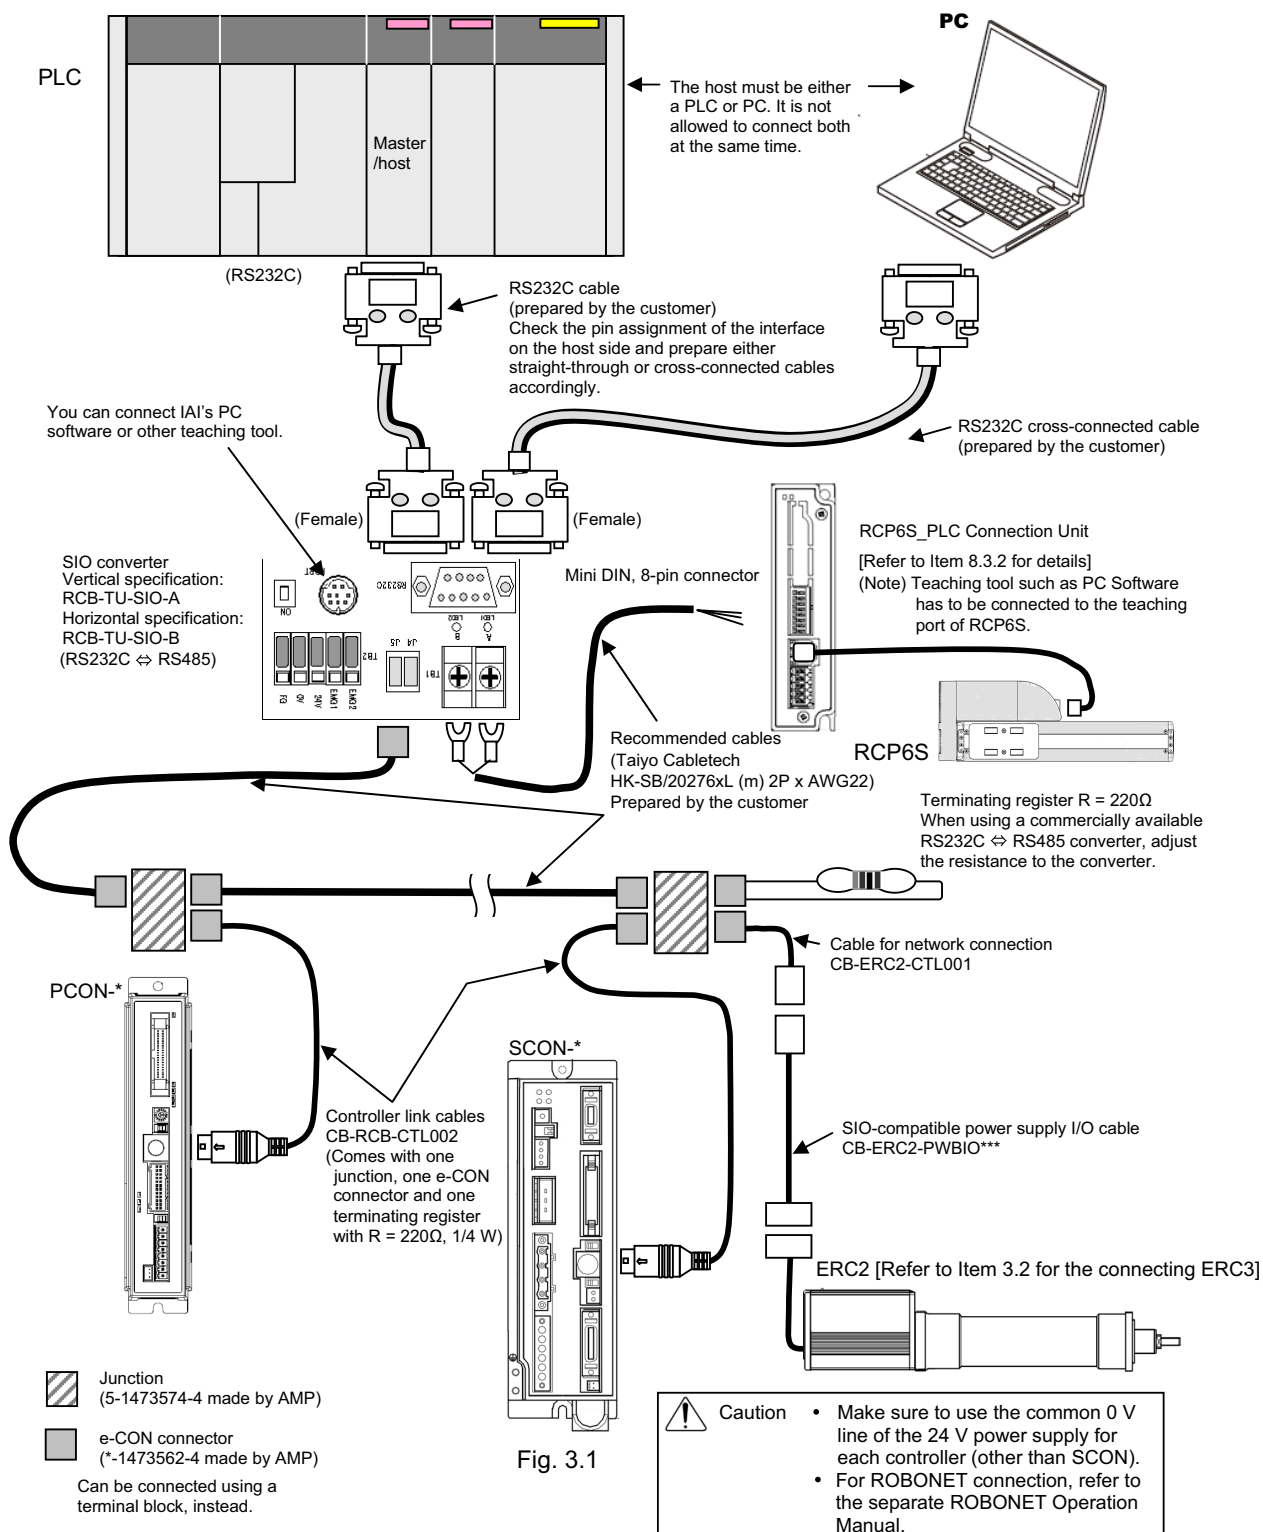

(2) Wiring

RS232C cables (commercially available cables, etc.)
Make sure to check the signal names of the RS232 C connectors on the host side before connecting (refer to "3.3 Communication Connector Pin Assignment of PLC and PC").

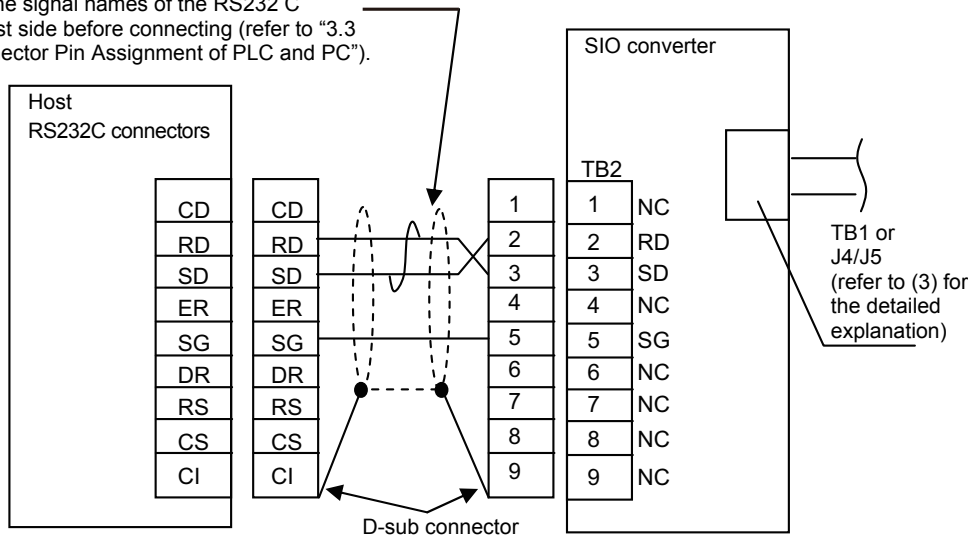

Caution Make sure to use the common 0 V line of the 24 V power supply for each controller (other than SCON).
For ROBONET connection, refer to the separate ROBONET Operation Manual.

If the host side (PLC or PC) is using flow control, connect RS and CS as well as DR and ER as shown in the figure to the left.

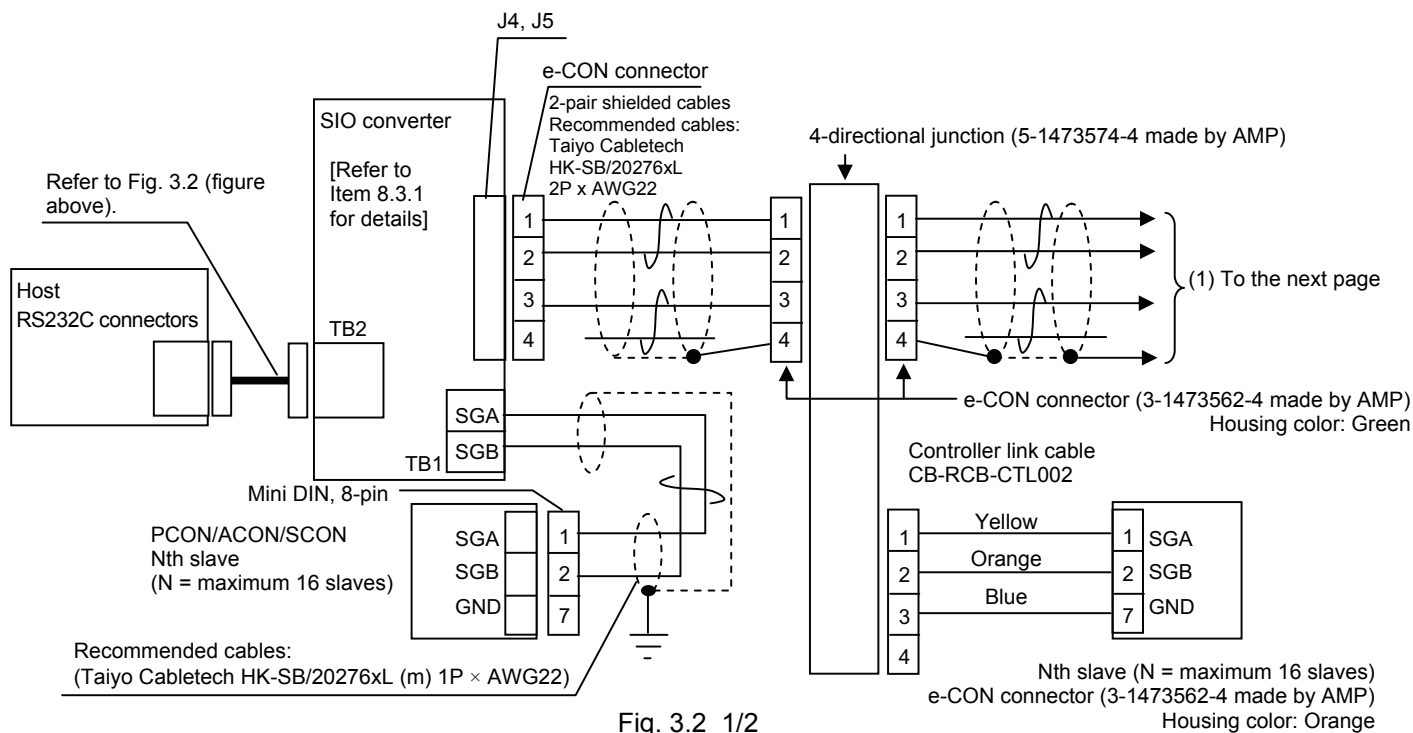


Fig. 3.2_1/2

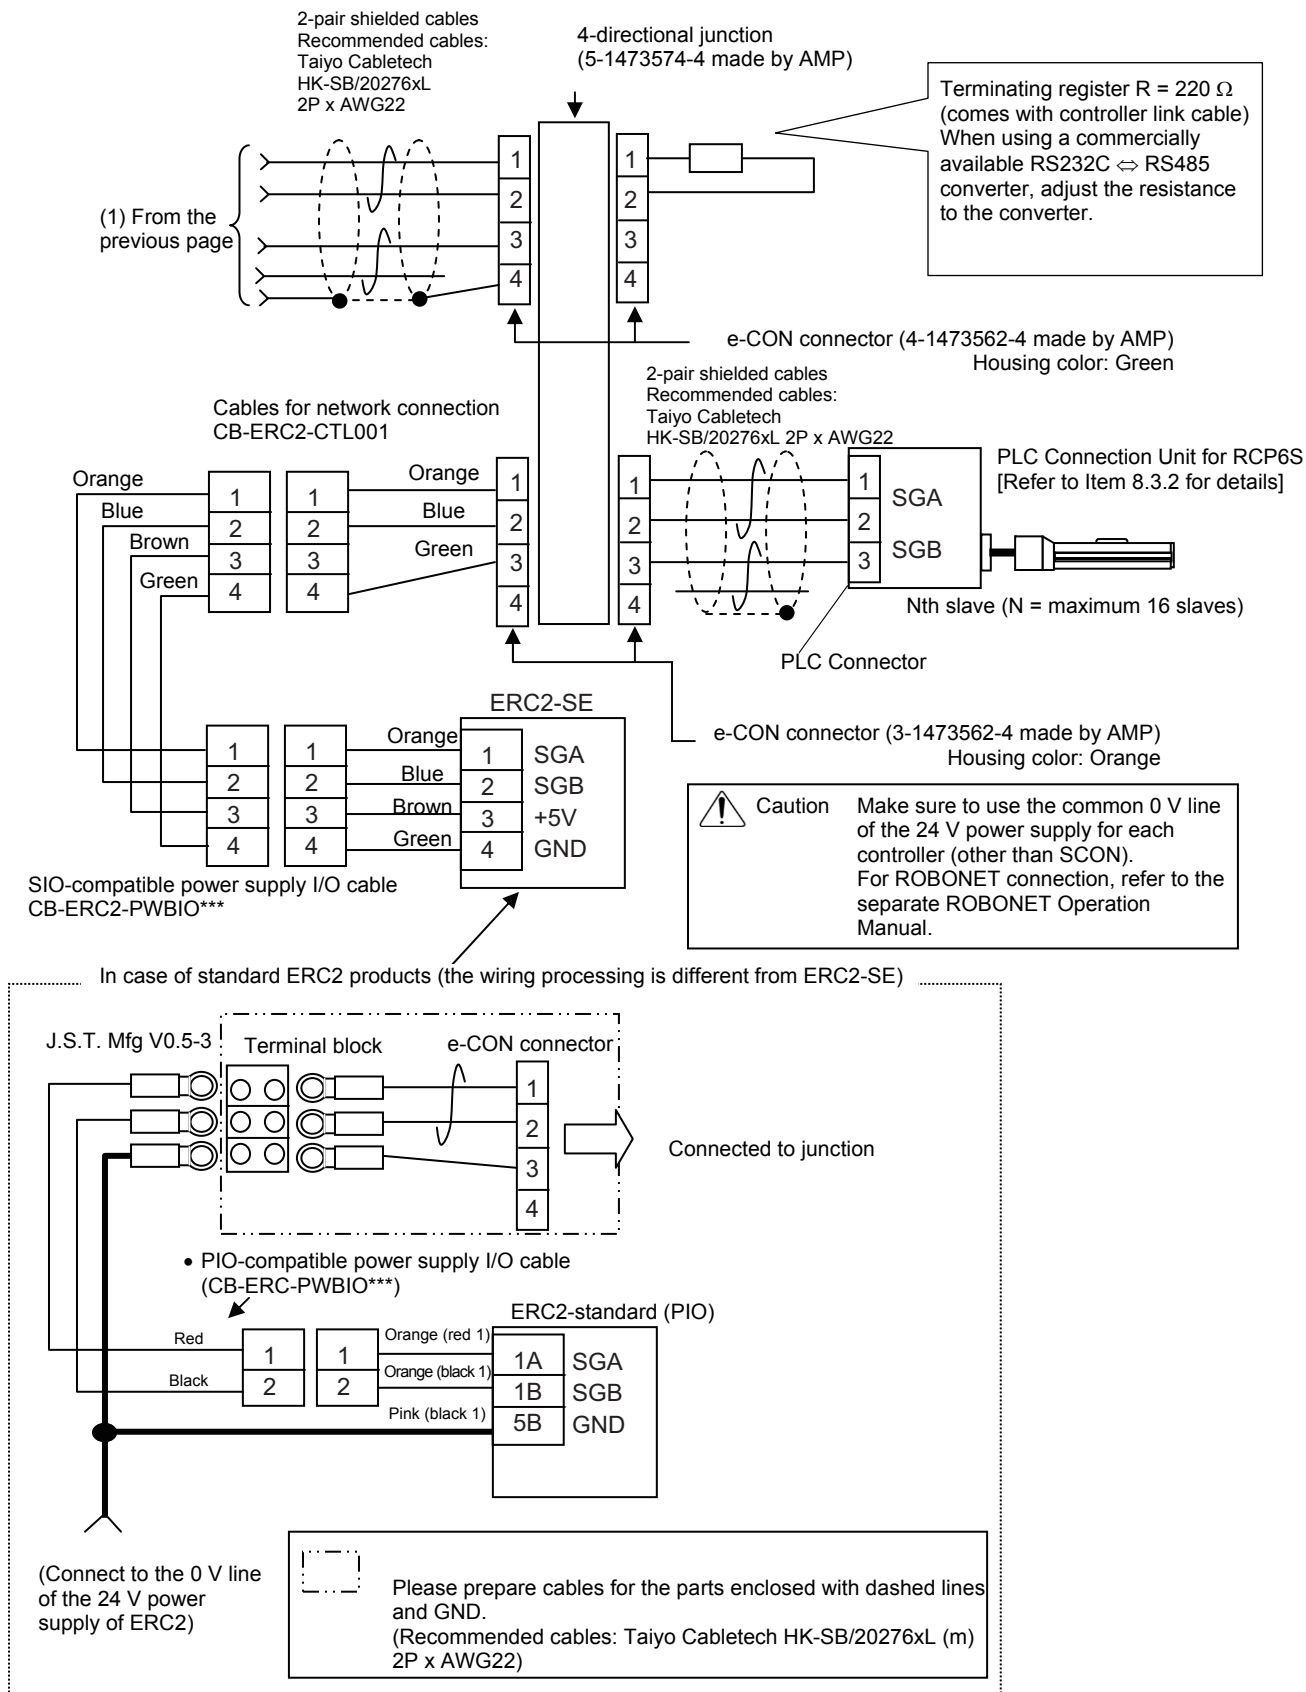


Fig. 3.2_2/2

3.2 In Case the Host Uses RS485 Interface

(1) System configuration

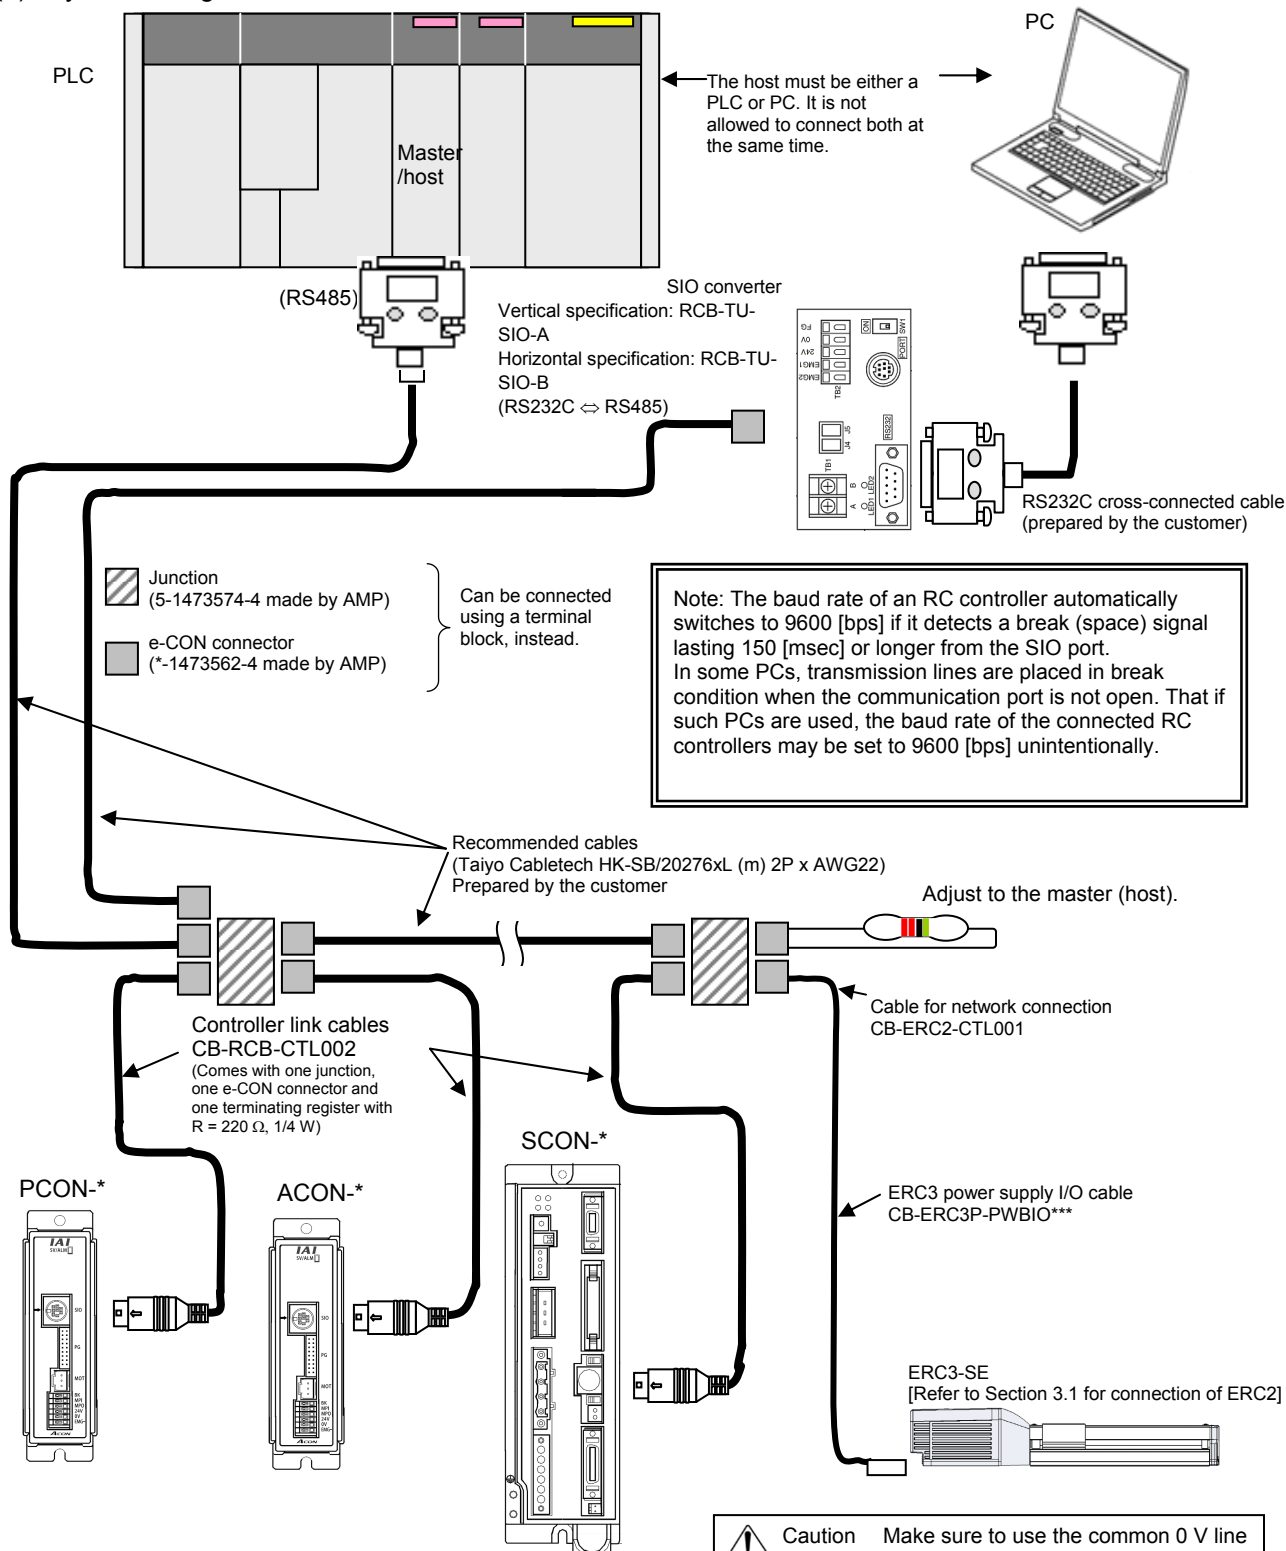


Fig. 3.4

Caution Make sure to use the common 0 V line of the 24 V power supply for each controller (other than SCON). For ROBONET connection, refer to the separate ROBONET Operation Manual.

(2) Wiring


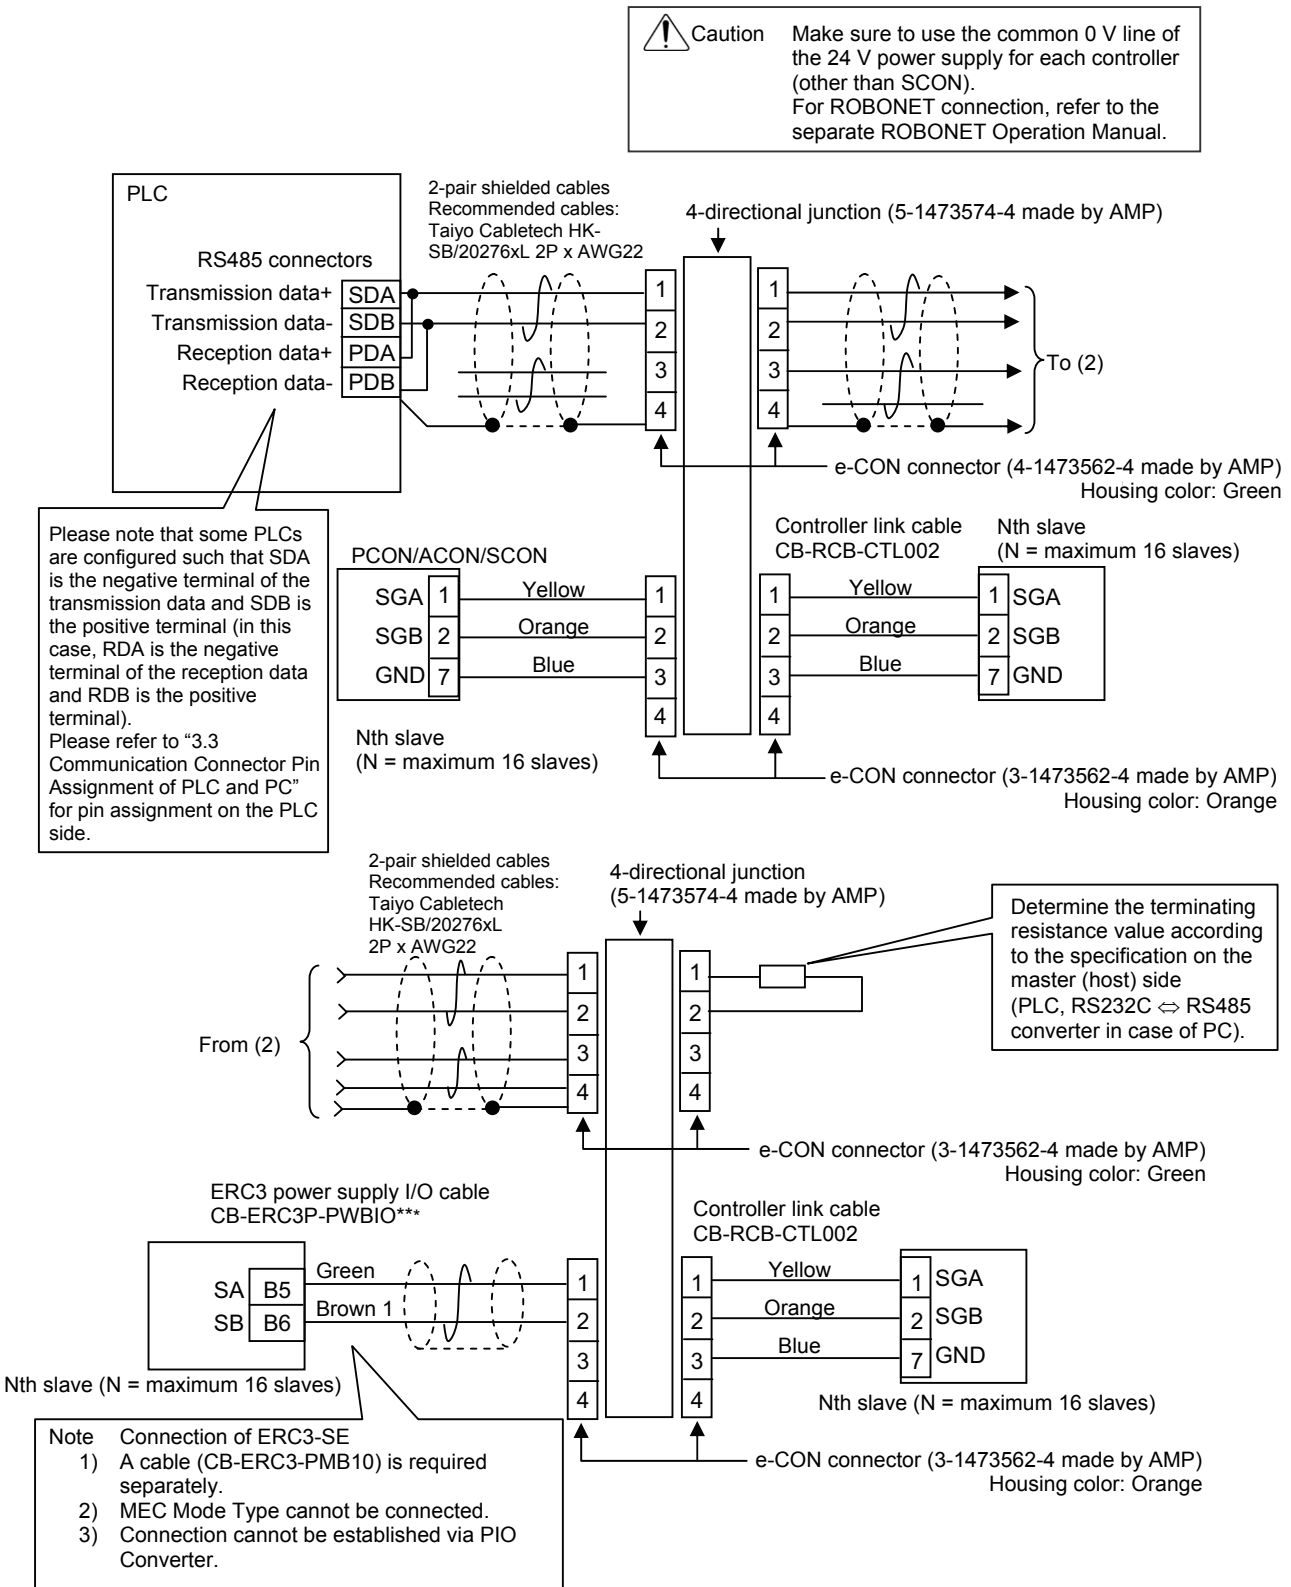


Fig. 3.5


3.3 Communication Connector Pin Assignment of PLC and PC (Reference)

In case of PLC made by Mitsubishi:
QJ71C24 RS232C
D-sub 9-pin connector (male: cable side)

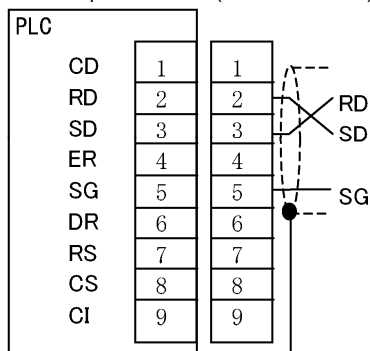


One end of the shielded cable shall be connected to a connector housing or grounded.


In case of PLC made by Omron:
CJ1W-SCB or SCU RS232C
D-sub 9-pin connector (male: cable side)

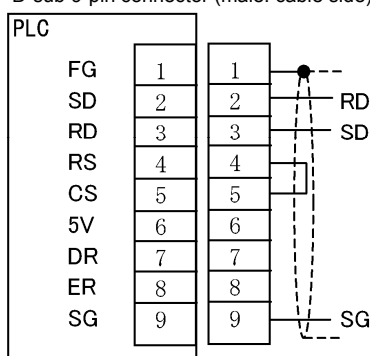

PC: RS232C
D-sub 9-pin connector (female: cable side)

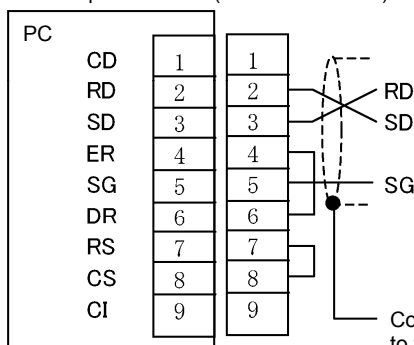

In case of PLC made by Keyence:
KV-L20R RS232C
D-sub 9-pin connector (female: cable side)

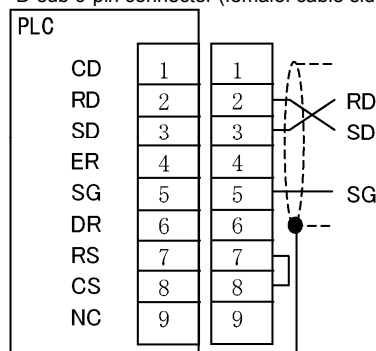


One end of the shielded cable shall be connected to a connector housing or grounded.

To use flow control, connect RS and CS as well as DR and ER.


Connect the shielded cable to the connector housing

In case of PLC made by Omron:
CJ1W-SCB or SCU RS485
D-sub 9-pin connector (male: cable side)

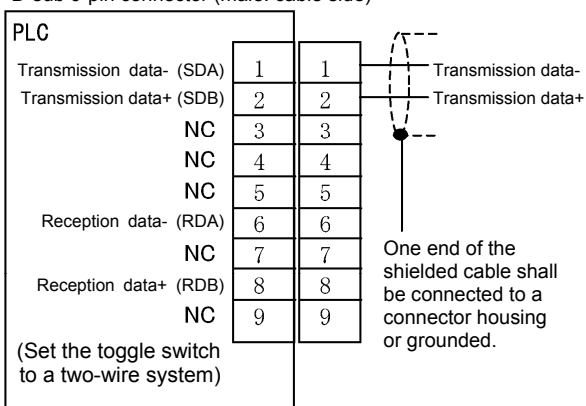


One end of the shielded cable shall be connected to a connector housing or grounded.

In case of PLC made by Mitsubishi:
QJ71C24 RS485
Terminal block

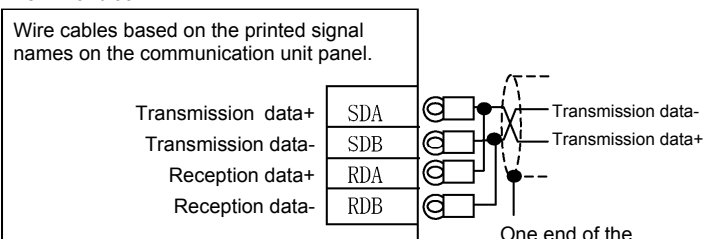

One end of the shielded cable shall be connected to a connector housing or grounded.

In case of PLC made by Keyence:
KV-L20R RS485
Terminal block

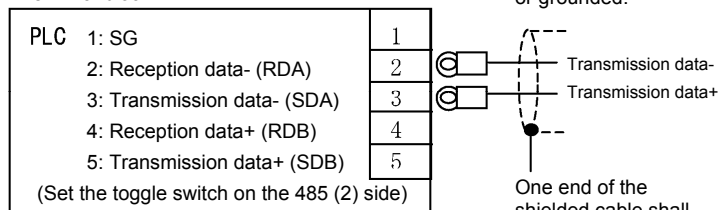

One end of the shielded cable shall be connected to a connector housing or grounded.

[* Please refer to operation manual of each manufacturer for detailed explanations.]

Fig. 3.6

3.4 Various Setting before Starting Communication

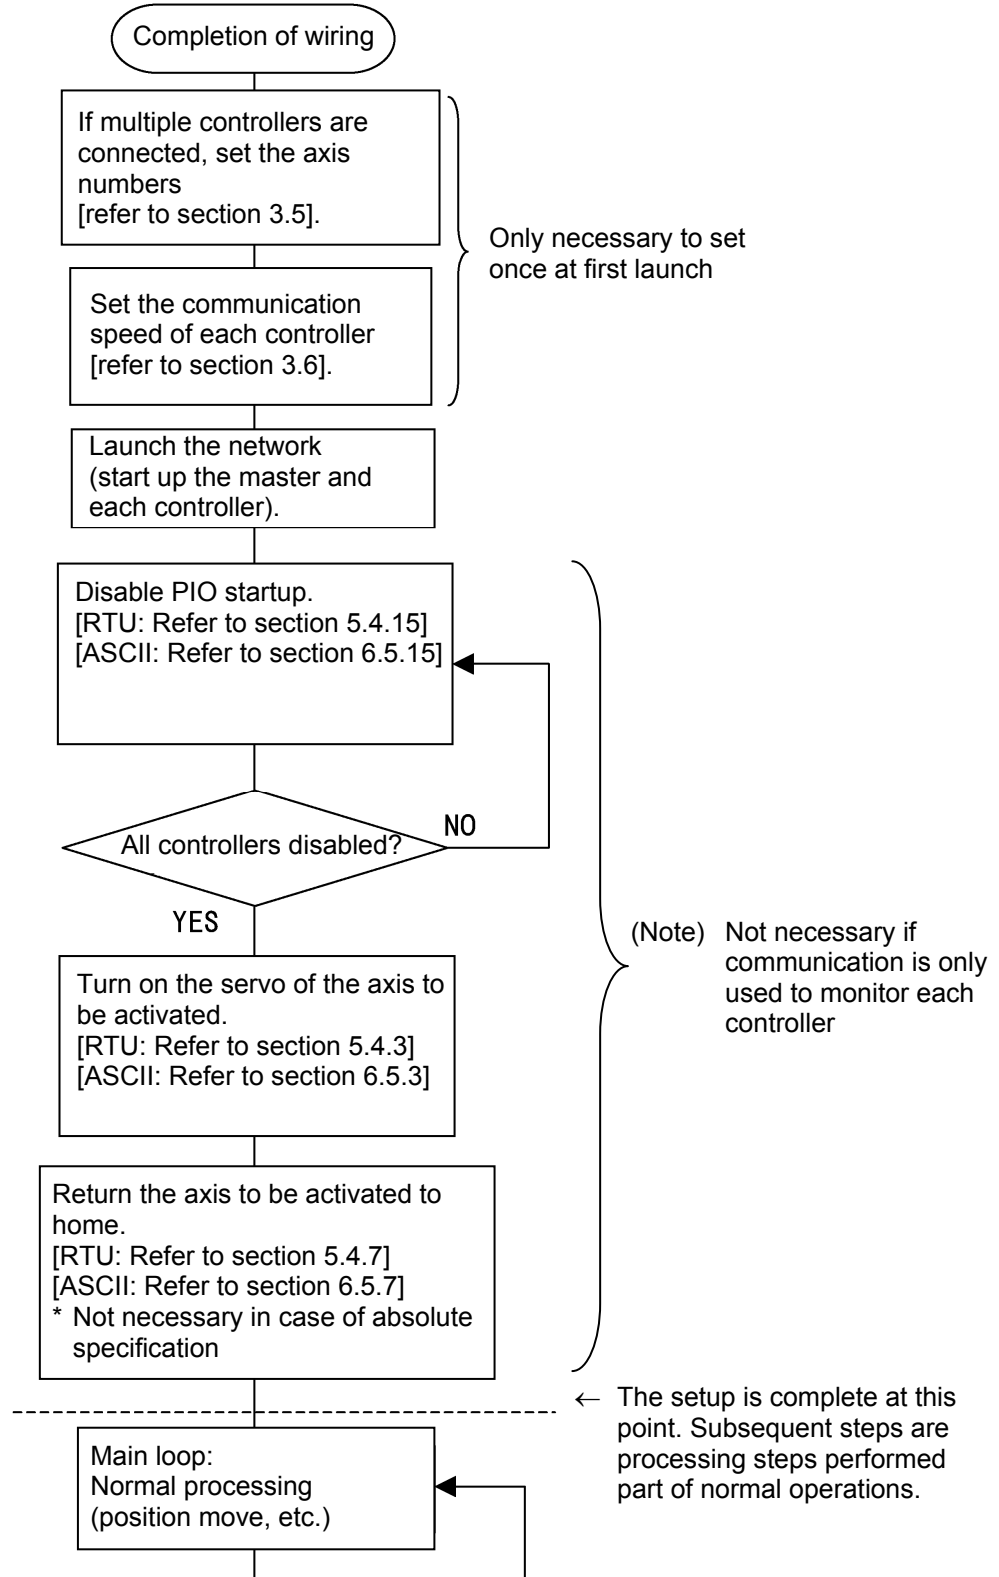


Fig. 3.7

3.5 Setting Axis Numbers

Set an axis number for each RC controller on the SIO link using hexadecimal digits from 0 to F_H, which is the number for the 16th axis.

If the panel surface of an RC controller has an axis number setting switch (ADRS) (PCON-C/CG/CF/CA/CFA/CB/CFB/CGB/CGFB, ACON-C/CG/CA/CB, DCON-CA/CB, SCON-C/CA/CB/CGB and ROBONET), adjust the arrow to point to the axis number using a flat bladed screwdriver (make sure that each axis number is unique).

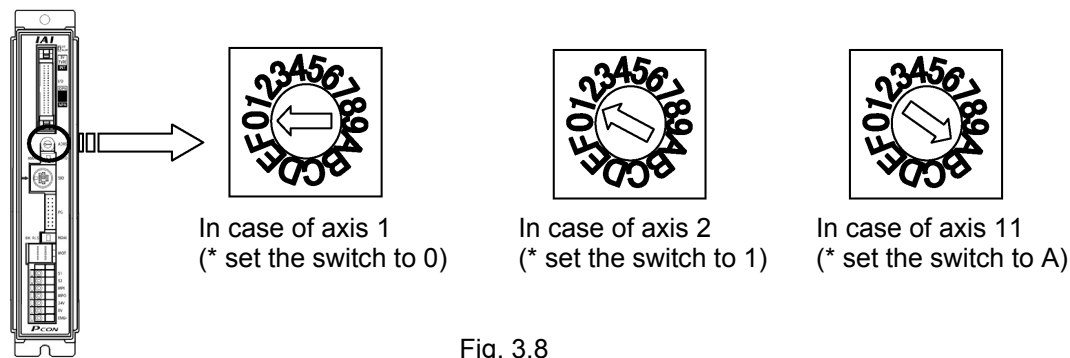


Fig. 3.8

For those RC Controllers other than above that do not have the axis number setting switch, it is necessary that the axis number is set by connecting one unit of the teaching tool such as PC software to each controller. In this example, how to set the axis number using the PC software is explained. For the setting from a teaching pendant, refer to an instruction manual for each model (TB-03/02/01, CON-PTA, CON-PT, CON-T, RCM-E and RCM-T).

Connect the PC to the SIO connector of the RC controller for which an axis number is to be set.

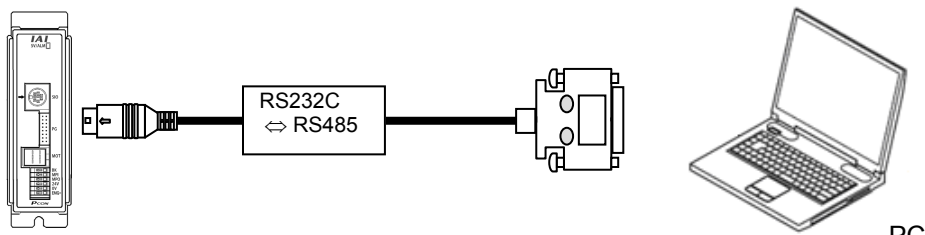


Fig. 3.9

Set the numbers using the following procedure.

- [1] Start the RC connection software and select the [Setting] menu.
- [2] Select the [Controller] menu item.
- [3] Select the [Addressing axis number] menu item.
- [4] Input the axis numbers (0 to 15) to the axis number table with a care not to make duplication.

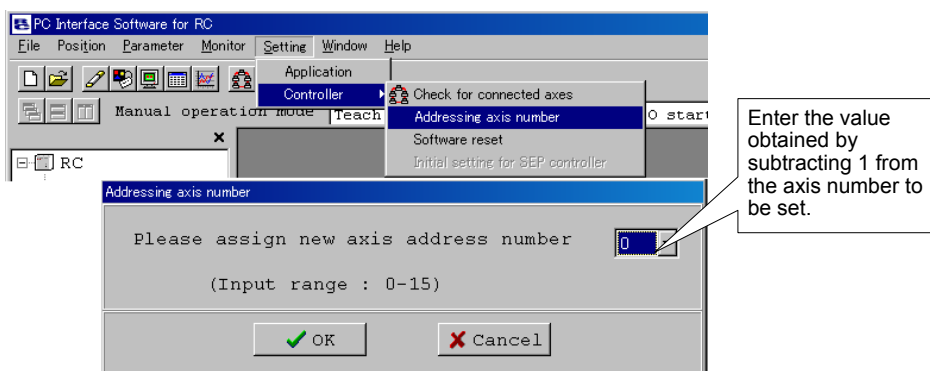


Fig. 3.10

3.6 Setting Controller Communication Speed

In order to perform communication, the communication speed of the PLC and each RC controller must match.

Set the communication speed according to the procedure explained in sections 3.6.1 and 3.6.2.

[For the settings on the host side, refer to the operation manual for your host equipment.]

Please be aware that the wiring is different depending on the system configuration.

3.6.1 Setting Wiring and Hardware for Each System

- (1) In case of using a PC as the master (host) controller
It is possible to make settings without changing the current connection. For those RC controllers that possess the operation mode setting switch, set the switch to MANU.
- (2) In case a PLC is used as the master (host) controller connected via RS232C
Connect a PC as master (host) controller instead of the PLC (refer to Figure 3.1).
At this point, disconnect the PLC from the SIO converter and connect the PC to the teaching port (Mini DIN8 pin connector) of the SIO converter [refer to section 3.1 (3)] using the cable supplied with the PC software. For those RC controllers that possess the operation mode setting switch, set the switch to MANU.
- (3) In case a PLC is used as the master (host) controller connected via RS485
Connect a PC directly to each RC controller in the same way as for setting axis numbers.
For those RC controllers that possess the operation mode setting switch, set the switch to MANU.
- (4) When a ROBONET is connected
To set up your ROBONET, connect the cable supplied with your PC software to the teaching port on the GateWayR unit. Set the MODE selector switch on the GateWayR unit to "MANU."

3.6.2 Setting Communication Speed

Set the communication speed using the following procedure.

(Note) On ROBONET controllers, the baud rate is set using the ROBONET gateway parameter setting tool. [For details, refer to the separate ROBONET Operation Manual.]

- [1] Start the RC connection software and select [Edit] from the [Parameters] menu.

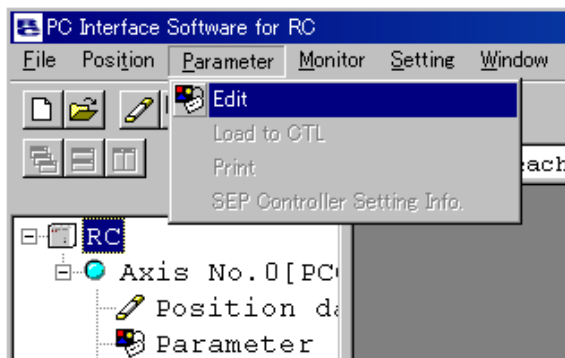


Fig. 3.11

[2] Select the axis number of the controller to be changed.

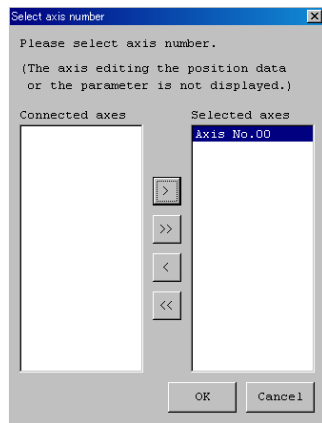


Fig. 3.12

[3] Set parameter No. 16, SIO Baudrate [bps].

| Parameter[Axis No.0] | | |
|----------------------|--------------------------------------------------|--------|
| User | | |
| No | Name | Value |
| 1 | Zone Output Position(1) + [mm] | 100.30 |
| 2 | Zone Output Position(1) - [mm] | -0.30 |
| 3 | Soft limit + [mm] | 100.30 |
| 4 | Soft limit - [mm] | -0.30 |
| 5 | Home direction [0:opposite/1:default] | 1 |
| 6 | Push recognition time [msec] | 255 |
| 7 | Servo gain selection | 8 |
| 8 | Default speed [mm/sec] | 150 |
| 9 | Default ACC [G] | 0.20 |
| 10 | Default position band [mm] | 0.10 |
| 11 | (For future expansion) | 0 |
| 12 | Default positioning current limit [%] | 35 |
| 13 | Default home current limit [%] | 35 |
| 14 | (For future expansion) | 0 |
| 15 | Disable 'STOP' Input[0:Enable/1:Disable] | 0 |
| 16 | SIO Baudrate[bps] | 38400 |
| 17 | Min delay for activating local transmitter[msec] | 5 |

Fig. 3.13

4 Communication

4.1 Message Transmission Timing

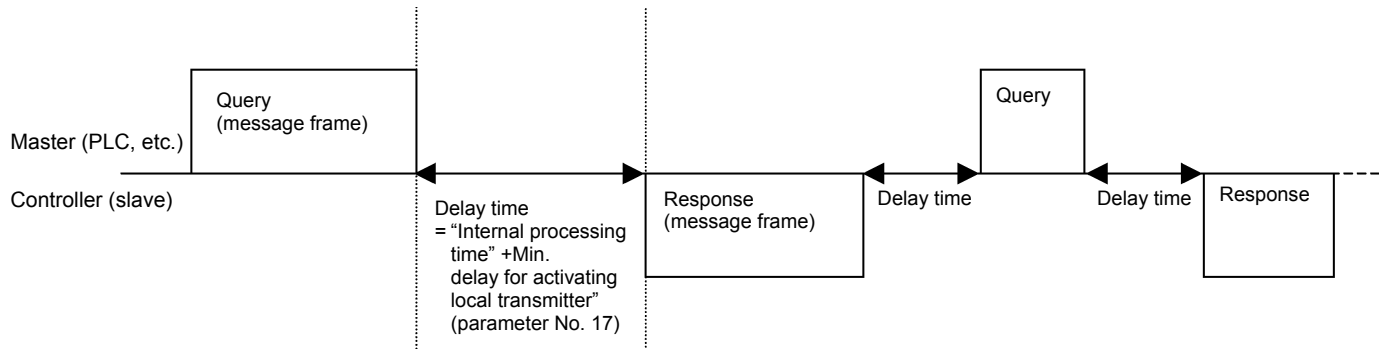


Fig. 4.1

The basic transmission control procedure consists of the master sending a query, and the RC controller that received the query sending a response, which are considered one unit.

The delay time after a query message is received until a response message is sent is calculated as the total sum of parameter No. 17 "Min. delay for activating local transmitter" (default value 5 ms) and the internal processing time (refer to the table below).

After receiving a query message, the RC controller waits for the "min. delay for activating local transmitter." Once this delay time elapses, the controller will activate the transmitter and start sending a response message. The master must enable the receive function of its own station within the aforementioned delay time after sending a query message.

RC controller gets ready for the next query reception in 1ms after a response or a message has sent out.

Internal processing time^(Note 1)

| Item | Time |
|---------------------------------------------------------------------|--------------|
| Read/write a register other than those in the low-speed memory area | 1 msec max. |
| Position data (1 position) Read | 4 msec max. |
| Position data (1 position) Write | 15 msec max. |
| Position data (1 position) Read/write | 18 msec max. |
| Position data (9 positions) Read | 9 msec max. |
| Position data (9 positions) Write | 90 msec max. |
| Position data (9 positions) Read/write | 98 msec max. |

Note 1 Processing duration may differ depending on the category to access and the controller type.

4.2 Timeout and Retry

After sending a query, the host waits for a response from the controller (except when the query that has been sent is a broadcast query).

If the elapsed time after sending a command until a response is received exceeds the timeout value (Tout), the host may send the command again to reestablish communication. If the number of retries exceeds three times, it means that an irremediable communication error has occurred.

The method for calculating the timeout value (Tout) is explained below.

1. Timeout value (Tout)

$$Tout = To + \alpha + (10 \times Bprt/Kbr) [ms]$$

To : Internal processing time* × Safety factor (3)

α : Min. delay for activating local transmitter [ms]
(default value of parameter No. 17 is 5 ms)

Kbr : Baud rate [kbps]

Bprt : Response message bytes + 8



Caution The internal processing time varies depending on the category of the register to be accessed. The processing time required for each action is listed in the table below.

| Item | Maximum time [ms] |
|---------------------------------------------------------------------|-------------------|
| Read/write a register other than those in the low-speed memory area | 1 |
| Position data (1 position) Read | 4 |
| Position data (1 position) Write | 15 |
| Position data (1 position) Read/write | 18 |
| Position data (9 positions) Read | 9 |
| Position data (9 positions) Write | 90 |
| Position data (9 positions) Read/write | 98 |

2. Number of Retries

Nrt = 3 (note that setting of the number of retries is mandatory)

4.3 Internal Addresses and Data Structure of RC Controller

The memory area in your RC controller consists of the Modbus register area read/written in units of words and the Modbus status are written in units of bits (coils).

| Memory area | Access unit | Address range | Function | |
|------------------------------------------------|-------------|---------------------------|------------------------|---------------------------------------------------|
| | | | Code ^(Note) | Function |
| Modbus register [Refer to 4.3.1 and 4.3.2.] | Word | 0500 to 9908 _H | 03 _H | Read holding registers |
| | | | 06 _H | Write holding registers |
| | | | 10 _H | Write multiple holding registers at the same time |
| Modbus status [Refer to 4.3.3 and 4.3.4.] | Bit | 0100 to 043F _H | 05 _H | Write coils |

(Note) Function codes explained in this manual.

4.3.1 Structure of Modbus Registers

The layout of the Modbus registers is shown below.

| | |
|-------------------|--------------------------------------------------------------------------------------------------------------------------------|
| 0000 _H | (Reserved for system) ^(Note) |
| 0500 _H | Detailed information of the alarm detected lately |
| 0505 _H | |
| | (Reserved for system) ^(Note) |
| 0D00 _H | I/O control information registers |
| 0D03 _H | |
| | (Reserved for system) ^(Note) |
| 1000 _H | Position table information <<low-speed memory area>> |
| 3FFF _H | |
| | * SCON for servo-pressing and RCP6S series not applicable |
| | (Reserved for system) ^(Note) |
| 8400 _H | Maintenance information * Refer to section for the maintenance information in the following page for the applicable models. |
| 842E _H | |
| | (Reserved for system) ^(Note) |
| 9000 _H | Controller monitor information registers |
| 9015 _H | |
| | (Reserved for system) ^(Note) |
| 9800 _H | Position command registers |
| | (Reserved for system) ^(Note) |
| 9900 _H | Numerical command registers |
| 9908 _H | |
| FFFF _H | (Reserved for system) ^(Note) |

Note Areas reserved for the system cannot be used for communication.
[RCP6S Series: RCP6S, RCM-P6PC, RCM-P6AC, RCM-P6DC]

4.3.2 Details of Modbus Registers

| Address [hex] | Area name | Description | | Symbol | Reference page | | | | |
|--------------------------------------------------------------------------|-----------------------------------------------------------------------|----------------------------------------------------------------------------|-----------------------------|--------|----------------|-----|----------|-----|----|
| | | | | | RTU | | ASCII | | |
| 0000 to 04FF | Reserved for system | | | | | | | | |
| 0500 | Detailed information of the alarm detected lately | Alarm detail code | | ALA0 | 69 | 30 | 219 | 30 | |
| 0501 | | Alarm address | | ALA0 | | 30 | | 30 | |
| 0502 | | Always 0 | | - | | - | | - | |
| 0503 | | Alarm code | | ALC0 | | 31 | | 31 | |
| 0504 | | Alarm occurrence time | | ALT0 | | 32 | | 32 | |
| 0506 to 0CFF | Reserved for system | | | | | | | | |
| 0D00 | I/O control information category | Device control register 1 | | DRG1 | 176 | 33 | 326 | 33 | |
| 0D01 | | Device control register 2 | | DRG2 | | 34 | | 34 | |
| 0D03 | | (Other types than Servo Press Type) Position number specification register | | POSR | | 35 | | | 35 |
| | | (Servo Press Type) Program number specification register | | | | | | | |
| 0D04 to 0FFF | Reserved for system | | | | | | | | |
| 1000 to 3FFF (Note 2) | Position table information (low-speed memory area) | Offset [hex] | | | 198 | 200 | 348 | 350 | |
| | | +0000 _H | Target position | PCMD | | | | | |
| | | +0002 _H | Positioning band | INP | | | | | |
| | | +0004 _H | Speed command | VCMD | | | | | |
| | | +0006 _H | Individual zone boundary + | ZNMP | | | | | |
| | | +0008 _H | Individual zone boundary - | ZNLP | | | | | |
| | | +000A _H | Acceleration command | ACMD | | | | | |
| | | +000B _H | Deceleration command | DCMD | | | | | |
| | | +000C _H | Push-current limiting value | PPOW | | 201 | | 351 | |
| | | +000D _H | Load current threshold | LPOW | | | | | |
| * Detailed addresses can be calculated using the formula to the right. → | * Address = 1000 _H + (16 x Position No.) + Offset | | | | | | | | |
| 4000 to 83FF | Reserved for system | | | | | | | | |
| 8400 | Maintenance information (models applicable to calendar function only) | Total moving count ^(Note 1) | | TLMC | 36 | 74 | 36 | 224 | |
| 8402 | | Total moving distance ^(Note 1) | | ODOM | 37 | 76 | 37 | 226 | |
| 841E | | Current time (SCON-CA/CAL/CB only) | | TIMN | 38 | 78 | 38 | 228 | |
| 8420 | | Current time (PCON-CA/CFA/CB/CFB only) | | TIMN | 38 | 78 | 38 | 228 | |
| 8422 | | Current time (ACON-CA/CB, DCON-CA/CB only) | | TIMN | 38 | 78 | 38 | 228 | |
| 842A | | Total FAN driving time (SCON-CAL, SCON-CB [400W or more] only) | | TFAN | 39 | 81 | 39 | 231 | |
| 842E | | Total FAN driving time (PCON-CFA/CFB only) | | TFAN | 39 | 81 | 39 | 231 | |
| 8430 to 8FFF | | Reserved for system | | | | | | | |
| 9000 | Controller monitor information category | Current position register | | PNOW | (66) | 83 | (216) | 233 | |
| 9002 | | Present alarm code register | | ALMC | | 85 | | 235 | |
| 9003 | | Input port register | | DIPM | | 87 | | 237 | |
| 9004 | | Output port register | | DOPM | | 92 | | 242 | |
| 9005 | | Device status 1 register | | DSS1 | 40 (66) | 97 | 40 (216) | 247 | |
| 9006 | | Device status 2 register | | DSS2 | 41 (66) | 99 | 41 (216) | 249 | |
| 9007 | | Expansion device status register | | DSSE | 42 (66) | 101 | 42 (216) | 251 | |
| 9008 | | System status register | | STAT | 43 (66) | 103 | 43 (216) | 253 | |

Note 1 PCON-CA/CFA/CB/CFB/CYB/PLB/POB, ACON-CA/CB/CYB/PLB/POB, DCON-CA/CB/CYB/PLB/POB, SCON-CA/CAL/CB, ERC3, RCM-P6PC, RCM-P6AC and RCM-P6DC only

Note 2 SCON for servo-pressing, RCP6S, RCM-P6PC, RCM-P6AC and RCM-P6DC not applicable

| Address [hex] | Area name | Description | Symbol | Reference page | | | |
|------------------|--------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------|--------|----------------|-----|----------|-----|
| | | | | RTU | | ASCII | |
| 900A | Controller monitor information category | Current speed monitor register | VNOW | (66) | 105 | (216) | 255 |
| 900C | | Current ampere monitor register | CNOW | | 107 | | 257 |
| 900E | | Deviation monitor register | DEVI | | 109 | | 259 |
| 9010 | | System timer register | STIM | | 111 | | 261 |
| 9012 | | Special input port register | SIPM | 44 (66) | | 113 | |
| 9013 | | Zone status register | ZONS | 45 (66) | | 115 | |
| 9014 | | (Other types than Servo Press Type) Positioning complete position No. register (Servo Press Type) Executed program No. register | POSS | 46 (66) | 117 | 46 (216) | 267 |
| 9015 | | Expansion System status register | SSSE | 47 (66) | 119 | 47 (216) | 269 |
| 9016 to 901D | Reserved for system | | | | | | |
| 901E | Controller monitor information category | Current load (SCON-CA/CB only) | FBFC | (66) | 121 | (216) | 271 |
| 9020 | Controller monitor information category (Servo Press Type only) | Overload level monitor | OLLV | 48 | 123 | 48 | 273 |
| 9022 | | Press program alarm code | ALMP | 49 | 125 | 49 | 275 |
| 9023 | | Press program alarm generated program No. | ALMP | 50 | 127 | 50 | 277 |
| 9024 | | Press program status register | PPST | 51 | 129 | 51 | 279 |
| 9025 | | Press program judgement status register | PPJD | 52 | 131 | 52 | 281 |
| 9026 to 97FF | Reserved for system | | | | | | |
| 9800 | Position command category | Position movement command register | POSR | 35 | 176 | 35 | 326 |
| 9801 to 98FF | Reserved for system | | | | | | |
| 9900 | Numerical value command category | Target position coordinate specification register | PCMD | 180 | 182 | 330 | 332 |
| 9902 | | Positioning band specification register | INP | | | | |
| 9904 | | Speed specification register | VCMD | | | | |
| 9906 | | Acceleration/deceleration speed specification register | ACMD | | 183 | | 333 |
| 9907 | | Push-current limiting value | PPOW | | | | |
| 9908 | | Control flag specification register | CTLF | | 184 | | 334 |
| 9909 to FFFF | Reserved for system | | | | | | |

(1) Data of alarm detail code (Address = 0500_H) (ALA0)

| Bit | Symbol | Name | Function |
|-----|--------|-------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 15 | - | Alarm detail code 32768 | <p>It shows the alarm detail code numbers.</p> <p>It is output when an alarm is issued that possesses an alarm detail code. It shows 0_H when either there is no alarm generated or an alarm is generated but it possesses no alarm detail code.</p> <p>Alarm detail codes are read out in binary codes.</p> <p>Check in the operation manual for the controller for the content of an alarm detail code as well as an alarm code.</p> |
| 14 | - | Alarm detail code 16384 | |
| 13 | - | Alarm detail code 8192 | |
| 12 | - | Alarm detail code 4096 | |
| 11 | - | Alarm detail code 2048 | |
| 10 | - | Alarm detail code 1024 | |
| 9 | - | Alarm detail code 512 | |
| 8 | - | Alarm detail code 256 | |
| 7 | - | Alarm detail code 128 | |
| 6 | - | Alarm detail code 64 | |
| 5 | - | Alarm detail code 32 | |
| 4 | - | Alarm detail code 16 | |
| 3 | - | Alarm detail code 8 | |
| 2 | - | Alarm detail code 4 | |
| 1 | - | Alarm detail code 2 | |
| 0 | - | Alarm detail code 1 | |

(2) Data of alarm address (Address = 0501_H) (ALA0)

| Bit | Symbol | Name | Function |
|-----|--------|---------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 15 | - | Alarm address 32768 | <p>It shows the alarm address.</p> <p>The stored virtual address is output when a value stored in the virtual domain is the cause of the generated alarm. It shows FFFF_H when either there is no alarm generated or an alarm is generated but the virtual domain is not the cause of it.</p> <p>Alarm address are read out in binary codes.</p> |
| 14 | - | Alarm address 16384 | |
| 13 | - | Alarm address 8192 | |
| 12 | - | Alarm address 4096 | |
| 11 | - | Alarm address 2048 | |
| 10 | - | Alarm address 1024 | |
| 9 | - | Alarm address 512 | |
| 8 | - | Alarm address 256 | |
| 7 | - | Alarm address 128 | |
| 6 | - | Alarm address 64 | |
| 5 | - | Alarm address 32 | |
| 4 | - | Alarm address 16 | |
| 3 | - | Alarm address 8 | |
| 2 | - | Alarm address 4 | |
| 1 | - | Alarm address 2 | |
| 0 | - | Alarm address 1 | |

(3) Data of alarm code (Address = 0503_H) (ALC0)

| Bit | Symbol | Name | Function |
|-----|--------|------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 15 | - | Alarm code 32768 | <p>It shows the alarm code numbers of each level (cold start, operation cancellation, message). It is output when an alarm is issued. When any alarm is not issued, it is "0_H". Alarm code are read out in binary codes. For the detail of an alarm code, check in the operation manual of the controller.</p> <p>(Note) There some controllers that do not issue the message level alarms. [For more details refer to the troubleshooting of each controller]</p> <p>(Reference) If changing from a controller that does not issue the message level alarms from one which does (Example PCON-C ⇒ PCON-CA), consider the operation patterns when the message level alarms are issued.</p> |
| 14 | - | Alarm code 16384 | |
| 13 | - | Alarm code 8192 | |
| 12 | - | Alarm code 4096 | |
| 11 | - | Alarm code 2048 | |
| 10 | - | Alarm code 1024 | |
| 9 | - | Alarm code 512 | |
| 8 | - | Alarm code 256 | |
| 7 | - | Alarm code 128 | |
| 6 | - | Alarm code 64 | |
| 5 | - | Alarm code 32 | |
| 4 | - | Alarm code 16 | |
| 3 | - | Alarm code 8 | |
| 2 | - | Alarm code 4 | |
| 1 | - | Alarm code 2 | |
| 0 | - | Alarm code 1 | |

Note Address = 0502_H always returns 0.

(4) Data of alarm occurrence time (Address = 0504_H) (ALT0)

| Bit | Symbol | Name | Function |
|-----|--------|----------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 31 | - | Alarm occurrence time 2147202832 | It outputs the time of the alarm issuance. [1] For the models that are equipped with the calendar function (RTC), when RTC is set effective, it shows the time of alarm issuance. [2] When RTC is set ineffective or for the models that is not equipped with RTC, it shows the passed time [sec] since the power to the controller is turned on. |
| 30 | - | Alarm occurrence time 1073601416 | |
| 29 | - | Alarm occurrence time 536800708 | • How alarm issuance time is calculated in 1) The data of alarm issuance time shows the seconds passed from the origin time (00hr:00min:00sec 1January2000). Passed second from the origin time is expressed with S, passed minute with M, passed hour with H, passed day with D and passed year with Y, and the calculation is conducted with a formula as shown below: S= Data of read alarm issuance time M= S/60 (decimal fraction to be rounded down) H= M/60 (decimal fraction to be rounded down) D= H/24 (decimal fraction to be rounded down) Y= D/365.25 (decimal fraction to be rounded down) L (Leap year) = Y/4 (decimal fraction to be rounded up) |
| 28 | - | Alarm occurrence time 268400354 | |
| 27 | - | Alarm occurrence time 134200177 | Assuming the second of alarm issuance time is SA, minute is MA, hour is HA, passed day in this year is DA and year is YA, the time can be calculated with a formula as shown below: SA= Remainder of S/60 MA= Remainder of M/60 HA= Remainder of H/24 DA= D-(Y×365+L) Year and day can be figured out by subtracting the number of days in each month from DA. YA= Y+2000 (A.D.) |
| 26 | - | Alarm occurrence time 67108864 | |
| 25 | - | Alarm occurrence time 33554432 | Example) Assuming alarm issuance time data is 172C1B8B _H ; (1) Convert into decimal number: S= 172C1B8B _H ⇒ 388766603 (2) Calculate M, H, D, Y and L. M= 388766603/60= 6479443 H= 6479443/60= 107990 D= 107990/24= 4499 Y= 4499/365.25= 12 L= 12/4= 3 |
| 24 | - | Alarm occurrence time 16777216 | |
| 23 | - | Alarm occurrence time 8388608 | (3) Figure out SA, MA, HA and DA. SA= Remainder of 388766603/60= 23 MA= Remainder of 6479443/60= 43 HA= Remainder of 107990/24= 14 DA= 4499- (12×365+3) = 116 (116 days has passed in this year and the time of alarm issuance is on the day 117.) Year and day = 117 – {31 (Jan) – 29 (Feb) – 31 (Mar)} = 26 (since the number becomes a negative if days in April is subtracted, the time of alarm issuance is on 26April) YA= 12+2000= 2012 As figured out with the calculation above, the time of alarm issuance is 14:43:23 26 Apr 2012. |
| 22 | - | Alarm occurrence time 4194304 | |
| 21 | - | Alarm occurrence time 2097152 | |
| 20 | - | Alarm occurrence time 1048576 | |
| 19 | - | Alarm occurrence time 524288 | |
| 18 | - | Alarm occurrence time 262144 | |
| 17 | - | Alarm occurrence time 131072 | |
| 16 | - | Alarm occurrence time 65536 | |
| 15 | - | Alarm occurrence time 32768 | |
| 14 | - | Alarm occurrence time 16384 | |
| 13 | - | Alarm occurrence time 8192 | |
| 12 | - | Alarm occurrence time 4096 | |
| 11 | - | Alarm occurrence time 2048 | |
| 10 | - | Alarm occurrence time 1024 | |
| 9 | - | Alarm occurrence time 512 | |
| 8 | - | Alarm occurrence time 256 | |
| 7 | - | Alarm occurrence time 128 | |
| 6 | - | Alarm occurrence time 64 | |
| 5 | - | Alarm occurrence time 32 | |
| 4 | - | Alarm occurrence time 16 | |
| 3 | - | Alarm occurrence time 8 | |
| 2 | - | Alarm occurrence time 4 | |
| 1 | - | Alarm occurrence time 2 | |
| 0 | - | Alarm occurrence time 1 | |

(5) Data of device control register 1 (Address = 0D00_H) (DRG1)

| Bit | Symbol | Name | Function |
|---------|--------|------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 15 | EMG | EMG operation specification | 0: Emergency stop not actuated 1: Emergency stop actuated Changing this bit to 1 will switch the controller to the emergency stop mode. Take note that the drive source will not be cut off. (The ALM LED on the controller will not illuminate.) |
| 14 | SFTY | Safety speed command | 0: Disable safety speed 1: Enable safety speed Changing this bit to 1 will limit the speeds of all movement commands to the speed specified by user parameter No. 35, "Safety speed." |
| 13 | - | Cannot be used | |
| 12 | SON | Servo ON command | 0: Servo OFF 1: Servo ON Changing this bit to 1 will turn the servo ON. However, the following conditions must be satisfied: <ul style="list-style-type: none"> • Device status register 1 (5.3.11 or 6.4.11): The EMG status bit is 0. • Device status register 1 (5.3.11 or 6.4.11): The major failure status is 0. • Device status register 2 (5.3.12 or 6.4.12): The enable status bit is 1. • System status register (5.3.9 or 6.4.9): The auto servo OFF status is 0. |
| 11 to 9 | | Cannot be used | |
| 8 | ALRS | Alarm reset command | 0: Normal 1: Alarm will reset Present alarms will be reset upon detection of a rising edge for this bit (this bit: 0 → 1). Note, however, that if any of the causes for the alarm has not been removed, the same alarm will be generated again. If a rising edge is detected for this bit (this bit: 0 → 1) during a pause, the remaining travel will be canceled. |
| 7 | BKRL | Brake forced-release command | 0: Normal 1: Forcibly release brake You can forcibly release the brake by setting this bit to 1. |
| 6 | - | Cannot be used | |
| 5 | STP | Pause command | 0: Normal 1: Pause command All motor movement is inhibited while this bit is 1. If this bit turns 1 while the actuator is moving, the actuator will decelerate to a stop. When the bit is set to 0 again thereafter, the actuator will resume the remaining travel. If this bit is turned 1 while the actuator is performing a home return, the movement command is held until the actuator reverses upon contact. When the bit turns 0 thereafter, the actuator will complete the remaining home return operation automatically. However, make sure you perform a home return again after the actuator reverses upon contact. |
| 4 | HOME | Home return command | 0: Normal 1: Home return command Home return will start when a rising edge is detected for this bit (this bit: 0 → 1). Once the home return is completed, the HEND bit will become 1. You can input a home return command again even if the actuator has already completed a home return. |
| 3 | CSTR | Positioning start command | 0: Normal 1: Position start command When a rising edge is detected for this bit (this bit: 0 → 1), the actuator will move to the target position of the position number stored in the position number specification register (POSR:0D03 _H). If this bit remains 1, a position complete will not be output even when the actuator enters the positioning band (return to the normal status by writing 0 to this bit). If this command is executed before home return has been performed at least once after the power was turned on (the HEND bit is 0), the actuator will perform home return and then start moving to the target position. * Set the target position, speed, etc., in the position table of the controller beforehand. |
| 2 to 0 | - | Cannot be used | |

(6) Data of device control register 2 (Address = 0D01_H) (DRG2)

| Bit | Symbol | Name | Function |
|-----|--------|----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 15 | - | Cannot be used | |
| 14 | JISL | Jog/inch switching | 0: Jog 1: Inching When this bit is 0, the jog operation is selected. When this bit is 1, the inching operation is selected. If this bit turns 1 while the actuator is jogging, the actuator will accelerate to a stop. While the actuator is inching, turning this bit 0 will have no effect and the actuator will continue with the inching operation. The setting of this bit is not reflected in any jog/inching operation set from the teaching tool. |
| 13 | - | Cannot be used | |
| 12 | - | Cannot be used | |
| 11 | MOD | Teaching mode command | 0: Normal operation mode 1: Teaching mode Changing this bit to 1 will switch the controller to the teaching mode. |
| 10 | TEAC | Position data load command | 0: Normal 1: Position data load command The current position data will be written to the position number specified by the position number specification register if 1 is written to this bit while the 11th bit of the teach mode command is 1 (teaching mode). The current position data is loaded to the position data line specified by the position number specification register. If the position number under which the data is loaded is an empty position, meaning that no data is currently set, the data fields other than target position (such as positioning band, etc.) will be automatically populated by the default values of the respective parameters. Make sure that after this bit is set to 1, it will remain 1 for at least 20 ms. |
| 9 | JOG+ | Jog+ command | 0: Normal 1: Jog+ command • The actuator jogs in the direction opposite home as long as this bit is 1 if the 14th JISL bit is 0. The speed and acceleration/deceleration match the specifications in user parameter No. 26 "PIO jog speed" and rated acceleration/deceleration speed. If this bit is set to 0 or the 8th bit of the jog-command is changed to 1, the actuator will decelerate to a stop. • If a positive edge (this bit: 0 → 1) is detected for the jog+ command while the 14th JISL bit is 0, the actuator inches in the direction opposite home. The speed, travel and acceleration/deceleration speed match the specifications in user defined parameter No. 26 (PIO jog speed), user parameter No. 48 (PIO inching distance) and rated jog acceleration/deceleration, respectively. |
| 8 | JOG- | Jog- command | 0: Normal 1: Jog- command • The actuator jogs in the direction of home as long as this bit is 1 if the 14th JISL bit is 0. The speed and acceleration/deceleration speed match the specifications in user parameter No. 26 "PIO jog speed" and rated acceleration/deceleration speed. If this bit is set to 0 or the 9th bit of the jog-command is changed to 1, the actuator will decelerate to a stop. • If a positive edge (this bit: 0 → 1) is detected for the jog+ command while the 14th JISL bit is 0, the actuator inches in the direction of home. The speed, travel and acceleration/deceleration speed match the specifications in user defined parameter No. 26 (PIO jog speed), user parameter No. 48 (PIO inching distance) and rated jog acceleration/deceleration, respectively. |
| 7 | ST7 | Start position 7 | (If either of these bits is enabled) The actuator moves to the position of the specified position number. These bits are only valid when solenoid valve mode is selected. The move is started if either of the ST0 to ST7 bits is set to 1 (this bit: 0 → 1). If a position other than the enabled start position is selected, the alarm "085 Position No. error at moving" is generated. You can select the signal input method as "Level" or "Edge" in user parameter No. 27, "Movement command type." If multiple positions are entered at the same time, the smallest number takes the priority. |
| 6 | ST6 | Start position 6 | |
| 5 | ST5 | Start position 5 | |
| 4 | ST4 | Start position 4 | |
| 3 | ST3 | Start position 3 | |
| 2 | ST2 | Start position 2 | |
| 1 | ST1 | Start position 1 | |
| 0 | ST0 | Start position 0 | |

- (7) Data of position number command registers (Address = 0D03_H) (POSR)
 Position movement command register details (Address = 9800_H) (POSR)
 Data of program number command registers (Address = 0D03_H) (POSR)
 ...For SCON Servo Press type

| Bit | Symbol | Name | Function |
|-----|--------|----------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 15 | - | Cannot be used | |
| 14 | - | Cannot be used | |
| 13 | - | Cannot be used | |
| 12 | - | Cannot be used | |
| 11 | - | Cannot be used | |
| 10 | - | Cannot be used | |
| 9 | PC512 | Position command bit 512 | <p>* Position command bit : For other types than Servo Press Type Program command bit: For Servo Press Type (Max: 63)</p> <p>These bits indicate position numbers to be moved using binary codes. Note that the maximum position number varies depending on the model and PIO pattern.</p> <p>[When address = 0D03_H is used] After specifying a position number, set the CSTR (start signal) of device control register 1 to 1, and the actuator will move to the specified position. [Refer to 5.5.1 or 6.6.1.]</p> <p>[When address = 9800_H is used] This register is such that once a position number is specified, the actuator will move to the specified position. You need not set the CSTR (start signal).</p> <p>[For Servo Press Type] After indicating the press program number in this register, set PSTR (start signal) in the press program control register to 1, and the program gets executed. After indicating the press program number in this register, set PHOM (program home-return movement signal) in the press program control register to 1, and movement gets made to the program home position set in the indicated program number.</p> |
| 8 | PC256 | Position command bit 256 | |
| 7 | PC128 | Position command bit 128 | |
| 6 | PC64 | Position command bit 64 | |
| 5 | PC32 | Position command bit 32 Position command bit 32 | |
| 4 | PC16 | Position command bit 16 Position command bit 16 | |
| 3 | PC8 | Position command bit 8 Position command bit 8 | |
| 2 | PC4 | Position command bit 4 Position command bit 4 | |
| 1 | PC2 | Position command bit 2 Position command bit 2 | |
| 0 | PC1 | Position command bit 1 Position command bit 1 | |

(8) Data of total moving count (Address = 8400_H) (TLMC)

| Bit | Symbol | Name | Function |
|-----|--------|-------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 31 | - | Total moving count 2147202832 | It shows the total moving count. Total moving count are read out in binary codes. * Corresponding Model: PCON-CA/CFA/CB/CFB/CYB/PLB/POB, ACON-CA/CB/CYB/PLB/POB, DCON-CA/CB/CYB/PLB/POB, SCON-CA/CAL/CB, ERC3, RCP6S, RCM-P6PC, RCM-P6AC and RCM-P6DC |
| 30 | - | Total moving count 1073601416 | |
| 29 | - | Total moving count 536800708 | |
| 28 | - | Total moving count 268400354 | |
| 27 | - | Total moving count 134200177 | |
| 26 | - | Total moving count 67108864 | |
| 25 | - | Total moving count 33554432 | |
| 24 | - | Total moving count 16777216 | |
| 23 | - | Total moving count 8388608 | |
| 22 | - | Total moving count 4194304 | |
| 21 | - | Total moving count 2097152 | |
| 20 | - | Total moving count 1048576 | |
| 19 | - | Total moving count 524288 | |
| 18 | - | Total moving count 262144 | |
| 17 | - | Total moving count 131072 | |
| 16 | - | Total moving count 65536 | |
| 15 | - | Total moving count 32768 | |
| 14 | - | Total moving count 16384 | |
| 13 | - | Total moving count 8192 | |
| 12 | - | Total moving count 4096 | |
| 11 | - | Total moving count 2048 | |
| 10 | - | Total moving count 1024 | |
| 9 | - | Total moving count 512 | |
| 8 | - | Total moving count 256 | |
| 7 | - | Total moving count 128 | |
| 6 | - | Total moving count 64 | |
| 5 | - | Total moving count 32 | |
| 4 | - | Total moving count 16 | |
| 3 | - | Total moving count 8 | |
| 2 | - | Total moving count 4 | |
| 1 | - | Total moving count 2 | |
| 0 | - | Total moving count 1 | |

(9) Data of total moving distance (Address = 8402_H) (ODOM)

| Bit | Symbol | Name | Function |
|-----|--------|----------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 31 | - | Total moving distance 2147202832 | It shows the total moving distance. Total moving distance are read out in binary codes. * Corresponding Model: PCON-CA/CFA/CB/CFB/CYB/PLB/POB, ACON-CA/CB/CYB/PLB/POB, DCON-CA/CB/CYB/PLB/POB, SCON-CA/CAL/CB, ERC3, RCP6S, RCM-P6PC, RCM-P6AC and RCM-P6DC |
| 30 | - | Total moving distance 1073601416 | |
| 29 | - | Total moving distance 536800708 | |
| 28 | - | Total moving distance 268400354 | |
| 27 | - | Total moving distance 134200177 | |
| 26 | - | Total moving distance 67108864 | |
| 25 | - | Total moving distance 33554432 | |
| 24 | - | Total moving distance 16777216 | |
| 23 | - | Total moving distance 8388608 | |
| 22 | - | Total moving distance 4194304 | |
| 21 | - | Total moving distance 2097152 | |
| 20 | - | Total moving distance 1048576 | |
| 19 | - | Total moving distance 524288 | |
| 18 | - | Total moving distance 262144 | |
| 17 | - | Total moving distance 131072 | |
| 16 | - | Total moving distance 65536 | |
| 15 | - | Total moving distance 32768 | |
| 14 | - | Total moving distance 16384 | |
| 13 | - | Total moving distance 8192 | |
| 12 | - | Total moving distance 4096 | |
| 11 | - | Total moving distance 2048 | |
| 10 | - | Total moving distance 1024 | |
| 9 | - | Total moving distance 512 | |
| 8 | - | Total moving distance 256 | |
| 7 | - | Total moving distance 128 | |
| 6 | - | Total moving distance 64 | |
| 5 | - | Total moving distance 32 | |
| 4 | - | Total moving distance 16 | |
| 3 | - | Total moving distance 8 | |
| 2 | - | Total moving distance 4 | |
| 1 | - | Total moving distance 2 | |
| 0 | - | Total moving distance 1 | |

- (10) Data of present time (Address = 841E_H (SCON-CA/CAL/CB),
8420_H (PCON-CA/CFA/CB/CFB),
8422_H (ACON-CA/CB, DCON-CA/CB) (TIMN))

| Bit | Symbol | Name | Function |
|-----|--------|-------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 31 | - | Present time 2147202832 | <p>It outputs the time of the present time issuance.</p> <p>[1] For the models that are equipped with the calendar function (RTC), when RTC is set effective, it shows the time of alarm issuance.</p> <p>[2] When RTC is set ineffective or for the models that is not equipped with RTC, it shows the passed time [sec] since the power to the controller is turned on.</p> <p>• How present time is calculated in 1) The data of present time shows the seconds passed from the origin time (00hr:00min:00sec 1January2000). Passed second from the origin time is expressed with S, passed minute with M, passed hour with H, passed day with D and passed year with Y, and the calculation is conducted with a formula as shown below:</p> <p>S= Data of read alarm issuance time M= S/60 (decimal fraction to be rounded down) H= M/60 (decimal fraction to be rounded down) D= H/24 (decimal fraction to be rounded down) Y= D/365.25 (decimal fraction to be rounded down) L (Leap year)= Y/4 (decimal fraction to be rounded up)</p> <p>Assuming the second of time is SA, minute is MA, hour is HA, passed day in this year is DA and year is YA, the time can be calculated with a formula as shown below:</p> <p>SA= Remainder of S/60 MA= Remainder of M/60 HA= Remainder of H/24 DA= D- (Y×365+L) Year and day can be figured out by subtracting the number of days in each month from DA. YA= Y+2000 (A.D.)</p> <p>Example) Assuming present time data is 172C1B8B_H; (1) Convert into decimal number: S= 172C1B8B_H ⇒ 388766603 (2) Calculate M, H, D, Y and L. M= 388766603/60= 6479443 H= 6479443/60= 107990 D= 107990/24= 4499 Y= 4499/365.25= 12 L= 12/4= 3 (3) Figure out SA, MA, HA and DA. SA= Remainder of 388766603/60= 23 MA= Remainder of 6479443/60= 43 HA= Remainder of 107990/24= 14 DA= 4499- (12×365+3) = 116 (116 days has passed in this year and the time of alarm issuance is on the day 117.) Year and day = 117 – {31 (Jan) – 29 (Feb) – 31 (Mar)} = 26 (since the number becomes a negative if days in April is subtracted, the time of present is on 26April) YA= 12+2000= 2012 As figured out with the calculation above, the present time is 14:43:23 26Apr2012.</p> |
| 30 | - | Present time 1073601416 | |
| 29 | - | Present time 536800708 | |
| 28 | - | Present time 268400354 | |
| 27 | - | Present time 134200177 | |
| 26 | - | Present time 67108864 | |
| 25 | - | Present time 33554432 | |
| 24 | - | Present time 16777216 | |
| 23 | - | Present time 8388608 | |
| 22 | - | Present time 4194304 | |
| 21 | - | Present time 2097152 | |
| 20 | - | Present time 1048576 | |
| 19 | - | Present time 524288 | |
| 18 | - | Present time 262144 | |
| 17 | - | Present time 131072 | |
| 16 | - | Present time 65536 | |
| 15 | - | Present time 32768 | |
| 14 | - | Present time 16384 | |
| 13 | - | Present time 8192 | |
| 12 | - | Present time 4096 | |
| 11 | - | Present time 2048 | |
| 10 | - | Present time 1024 | |
| 9 | - | Present time 512 | |
| 8 | - | Present time 256 | |
| 7 | - | Present time 128 | |
| 6 | - | Present time 64 | |
| 5 | - | Present time 32 | |
| 4 | - | Present time 16 | |
| 3 | - | Present time 8 | |
| 2 | - | Present time 4 | |
| 1 | - | Present time 2 | |
| 0 | - | Present time 1 | |

(11) Data of total FAN driving time (Address = 842A_H (SCON-CAL, SCON-CB [400W or more]), 842E_H (PCON-CFA/CFB) (TFAN))

| Bit | Symbol | Name | Function |
|-----|--------|-----------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 31 | - | Total FAN driving time 2147202832 | It shows the total FAN driving time [sec]. Total FAN driving time are read out in binary codes. * Corresponding Model: PCON-CFA/CFB, SCON-CAL, SCON-CB [400W or more] |
| 30 | - | Total FAN driving time 1073601416 | |
| 29 | - | Total FAN driving time 536800708 | |
| 28 | - | Total FAN driving time 268400354 | |
| 27 | - | Total FAN driving time 134200177 | |
| 26 | - | Total FAN driving time 67108864 | |
| 25 | - | Total FAN driving time 33554432 | |
| 24 | - | Total FAN driving time 16777216 | |
| 23 | - | Total FAN driving time 8388608 | |
| 22 | - | Total FAN driving time 4194304 | |
| 21 | - | Total FAN driving time 2097152 | |
| 20 | - | Total FAN driving time 1048576 | |
| 19 | - | Total FAN driving time 524288 | |
| 18 | - | Total FAN driving time 262144 | |
| 17 | - | Total FAN driving time 131072 | |
| 16 | - | Total FAN driving time 65536 | |
| 15 | - | Total FAN driving time 32768 | |
| 14 | - | Total FAN driving time 6384 | |
| 13 | - | Total FAN driving time 8192 | |
| 12 | - | Total FAN driving time 4096 | |
| 11 | - | Total FAN driving time 2048 | |
| 10 | - | Total FAN driving time 1024 | |
| 9 | - | Total FAN driving time 512 | |
| 8 | - | Total FAN driving time 256 | |
| 7 | - | Total FAN driving time 128 | |
| 6 | - | Total FAN driving time 64 | |
| 5 | - | Total FAN driving time 32 | |
| 4 | - | Total FAN driving time 16 | |
| 3 | - | Total FAN driving time 8 | |
| 2 | - | Total FAN driving time 4 | |
| 1 | - | Total FAN driving time 2 | |
| 0 | - | Total FAN driving time 1 | |

(12) Data of device status register 1 (Address = 9005_H) (DSS1)

| Bit | Symbol | Name | Function |
|-----|--------|-------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 15 | EMGS | EMG status | 0: Emergency stop not actuated 1: Emergency stop actuated This bit indicates whether or not the controller is currently in the emergency stop mode due to an emergency stop input, cutoff of the drive source, etc. |
| 14 | SFTY | Safety speed enabled status | 0: Safety status disabled 1: Safety status enabled Enable/disable the safety speed of the controller using the "safety speed command bit" of device control register 1. |
| 13 | PWR | Controller ready status | 0: Controller busy 1: Controller ready This bit indicates whether or not the controller can be controlled externally. Normally this bit does not become 0 (busy). |
| 12 | SV | Servo ON status | 0: Servo OFF 1: Servo ON The servo ON status is indicated. After a servo ON command is issued, this bit will remain 0 until the servo ON delay time set by a parameter elapses. If the servo cannot be turned ON for some reason even after a servo ON command is received, this bit will remain 0. The RC controller does not accept any movement command while this bit is 0. |
| 11 | PSFL | Missed work part in push-motion operation | 0: Normal 1: Missed work part in push-motion operation This bit turns 1 when the actuator has moved to the end of the push band without contacting the work part (= the actuator has missed the work part) according to a push-motion operation command. Operation commands other than push-motion do not change this bit. |
| 10 | ALMH | Major failure status | 0: Normal 1: Major failure alarm present This bit will turn 1 if any alarm at the cold start level or operation cancellation level is generated. Alarms at the operation cancellation level can be reset by using an alarm reset command, but resetting alarms at the cold start level requires turning the power supply off and then on again. |
| 9 | ALML | Minor failure status | 0: Normal 1: Minor failure alarm present This bit will turn 1 when a message level alarm is generated. |
| 8 | ABER | Absolute error status | 0: Normal 1: Absolute error present This bit will turn 1 if an absolute error occurs in case the absolute specification is set. |
| 7 | BKRL | Brake forced-release status | 0: Brake actuated 1: Brake released This bit indicates the status of brake operation. Normally the bit remains 1 while the servo is ON. Even when the servo is OFF, changing the "brake forced-release command bit" in device control register 1 to 1 will change this bit to 1. |
| 6 | - | Cannot be used | |
| 5 | STP | Pause status | 0: Normal 1: Pause command active This bit remains 1 while a pause command is input. If the PIO/Modbus Switch Setting (5.4.16 or 6.5.16) is PIO enabled, paused PIO signals are monitored (For those RC controllers that possess the operation mode setting switch, set the switch to AUTO.). If Modbus is enabled, the Pause Commands (5.4.6 or 6.5.6) are monitored. |
| 4 | HEND | Home return completion status | 0: Home return not yet complete 1: Home return complete This bit will become 1 when home return is completed. In case the absolute specification is set, the bit is set to 1 from the startup if absolute reset has been completed. If a movement command is issued while this bit is 0, an alarm will generate. |
| 3 | PEND | Position complete status | 0: Positioning not yet complete 1: Position complete This bit turns 1 when the actuator has moved close enough the target position and entered the positioning band. It also turns 1 when the servo turns on after the actuator has started, because the controller recognizes that the actuator has completed a positioning to the current position. This bit will also become 1 during the push-motion operation as well as at the completion. |
| 2 | CEND | Load cell calibration complete | 0: Calibration not yet complete 1: Calibration complete This bit turns 1 when the load cell calibration command (CLBR) has been successfully executed. |
| 1 | CLBS | Load cell calibration status | 0: Calibration not yet complete 1: Calibration complete Regardless of whether or not a load cell calibration command has been issued, this bit is 1 as long as a calibration has completed in the past. |
| 0 | - | Cannot be used | |

(13) Data of device status register 2 (Address = 9006_H) (DSS2)

| Bit | Symbol | Name | Function |
|-----|--------|-----------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 15 | ENBS | Enable | 0: Disable condition (Operation Stop, Servo OFF) 1: Enable condition (normal operation) It shows the condition of the enable switch when a teaching tool that is equipped with an enable switch (dead man's switch) is connected to a model that has the enable function equipped. (Note) It is fixed to 1 when in AUTO Mode or for a model without the enable function being equipped. |
| 14 | - | Cannot be used | |
| 13 | LOAD | Load output judgment status | 0: Normal 1: Load output judgment If a load current threshold or check range (individual zone boundaries: only supported by PCON-CF) is set when a movement command is issued, this bit indicates whether or not the motor current has reached the threshold inside the check range. This bit maintains the current value until the next position command is received. |
| 12 | TRQS | Torque level status | 0: Normal 1: Torque level achieved This bit turns 1 when the current has reached a level corresponding to the specified push torque during a push-motion operation. Since this bit indicates a level, its status will change when the current level changes. |
| 11 | MODS | Teaching mode status | 0: Normal operation mode 1: Teaching mode This bit becomes 1 when the teaching mode is selected by the "teach mode command bit" of device control register 2. |
| 10 | TEAC | Position-data load command status | 0: Normal 1: Position data load complete Setting the "position-data load command bit" in device control register 2 to 1 will change this bit to 0. This bit will turn 1 once position data has been written to the EEPROM successfully. |
| 9 | JOG+ | Jog+ status | 0: Normal 1: "Jog+" command active This bit becomes 1 while the "jog+ command bit" of device control register 2 is selected. |
| 8 | JOG- | Jog- status | 0: Normal 1: "Jog-" command active This bit becomes 1 while the "jog- command bit" of device control register 2 is selected. |
| 7 | PE7 | Position complete 7 | These bits output a position complete number as a binary value in solenoid valve mode. Each of these bits turns 1 when the actuator has completed a position movement and become close enough to the target position by entering the positioning band according to a position movement command (ST0 to ST7 in device control register 2). Although the bit turns 0 once the servo is turned OFF, when the servo is turned ON again the bit will turn 1 if the actuator is still within the positioning band of the specified command position data. Moreover, they will become 1 when push-motion is completed or missed in push-motion operation. |
| 6 | PE6 | Position complete 6 | |
| 5 | PE5 | Position complete 5 | |
| 4 | PE4 | Position complete 4 | |
| 3 | PE3 | Position complete 3 | |
| 2 | PE2 | Position complete 2 | |
| 1 | PE1 | Position complete 1 | |
| 0 | PE0 | Position complete 0 | |

(14) Data of expansion device status register (Address = 9007_H) (DSSE)

| Bit | Symbol | Name | Function |
|-----|--------|-----------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 15 | EMGP | Emergency stop status | 0: Emergency stop input OFF 1: Emergency stop input ON This bit indicates the status of the emergency stop input port. |
| 14 | MPUV | Motor voltage low status | 0: Normal 1: Motor drive source cut off This bit becomes 1 if there is no input from the motor drive power supply. |
| 13 | RMDS | Operation mode status | 0: AUTO mode 1: MANU mode This bit becomes 1 when the RC controller is in the MANU mode. However, for those with no operation mode setting switch equipped, it should always be set to MANU mode. |
| 12 | - | Cannot be used | |
| 11 | GHMS | Home return status | 0: Normal 1: Home return This bit remains 1 for as long as home return is in progress. This bit will be 0 in other cases. |
| 10 | PUSH | Push-motion operation in progress | 0: Normal 1: Push-motion operation in progress This bit remains 1 while the actuator is performing a push-motion operation (excluding an approach operation. It will turn 0 under the following conditions: 1. The actuator has missed the push motion operation. 2. The actuator has paused. 3. The next movement command has been issued. 4. The servo has turned OFF. |
| 9 | PSNS | Excitation detection status | 0: Excitation detection not yet complete 1: Excitation detection complete PCON/ERC2, ERC3 Series controllers perform excitation detection at the first servo ON command received after the controller has started. This bit becomes 1 when excitation detection is completed. This bit remains 0 if the excitation detection has failed. Even after a successful detection, the bit will return to 0 when a software reset is performed. This bit becomes 1 if pole sensing is performed with the first servo ON command after startup and the operation is completed in case of ACON series controllers. On SCON Series controllers, this bit is always 0. |
| 8 | PMSS | PIO/Modbus switching status | 0: PIO commands enabled 1: PIO command disabled The result of switching according to the PIO/Modbus switching setting explained in 5.4.16 or 6.5.16, or the current status, is indicated. |
| 7 | - | Cannot be used | |
| 6 | - | Cannot be used | |
| 5 | MOVE | Moving signal | 0: Stopped 1: Moving This bit indicates whether or not the actuator is moving (conditions during home return and push-motion operation included). This bit remains 0 while the actuator is paused. |
| 4 | - | Cannot be used | |
| 3 | - | Cannot be used | |
| 2 | - | Cannot be used | |
| 1 | - | Cannot be used | |
| 0 | - | Cannot be used | |

(15) Data of system status registers (Address = 9008_H) (STAT)

| Bit | Symbol | Name | Function |
|----------|--------|--------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 31 | BATL | Absolute Battery Voltage Drop (for SCON only) | 0: In normal condition 1: Battery voltage drop It becomes 1 once the voltage of the absolute battery reaches below the alarm level. The operation of the axes can be held even if this bit is showing 1 as far as Critical Failure Status Bit in Device Status Register 1 is showing 0. |
| 30 to 18 | - | Cannot be used | |
| 17 | ASOF | Auto servo OFF | 0: Normal 1: Auto servo OFF If "Auto servo OFF delay time" is set with a parameter of the RC controller, this bit becomes 1 when the servo is turned OFF automatically after the specified time has elapsed following the position complete. |
| 16 | AEEP | Nonvolatile memory being accessed | 0: Normal 1: Nonvolatile memory being accessed This bit turns 1 as soon as the nonvolatile memory in the RC controller is accessed to read or write the controller's parameter position table, etc. The bit becomes 0 when the access is completed or a timeout error occurs. |
| 15 to 5 | - | Cannot be used | |
| 4 | RMDS | Operation mode status | 0: AUTO mode 1: MANU mode This bit becomes 1 when the RC controller is in the MANU mode. However, for those with no operation mode setting switch equipped, it should always be set to MANU mode. |
| 3 | HEND | Home return completion status | 0: Home return not yet complete 1: Home return completion This bit will become 1 when home return is completed. In case the absolute specification is set, the bit is set to 1 from the startup if absolute reset has been completed. If a movement command is issued while this bit is 0, an alarm will generate. |
| 2 | SV | Servo status | 0: Servo OFF 1: Servo ON The servo ON status is indicated. After a servo ON command is issued, this bit will remain 0 until the servo ON delay time set by a parameter elapses. If the servo cannot be turned ON for some reason even after a servo ON command is received, this bit will remain 0. The RC controller does not accept any movement command while this bit is 0. |
| 1 | SON | Servo command status | 0: Servo OFF 1: Servo ON This bit indicates the servo ON/OFF command status. This bit will turn 1 when the following conditions are met: <ul style="list-style-type: none"> • The EMG status bit in device status register 1 is 0. [Refer to 5.3.12 or 6.4.12.] • The major failure status bit in device status register 1 is 0. [Refer to 5.3.12 or 6.4.12.] • The enable status bit in device status register 2 is 1. [Refer to 5.3.13 or 6.4.13.] • The auto servo OFF status in the system status register is 0. [Refer to 5.3.15 or 6.4.15.] |
| 0 | MPOW | Drive source ON | 0: Drive source cut off 1: Normal This bit will turn 0 when the motor drive-source cutoff terminal is released. |

(16) Data of special port monitor registers (Address = 9012_H) (SIPM)

| Bit | Symbol | Name | Function |
|-----|--------|----------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 15 | - | Cannot be used | |
| 14 | NP | Command pulse NP signal status | This bit indicates the status of the command pulse NP signal. |
| 13 | - | Cannot be used | |
| 12 | PP | Command pulse PP signal status | This bit indicates the status of the command pulse PP signal. |
| 11 | - | Cannot be used | |
| 10 | - | Cannot be used | |
| 9 | - | Cannot be used | |
| 8 | MDSW | Mode switch status | 0: AUTO mode 1: MANU mode This bit becomes 1 when the RC controller is in the MANU mode. However, for those with no operation mode setting switch equipped, it should always be set to MANU mode. |
| 7 | - | Cannot be used | |
| 6 | - | Cannot be used | |
| 5 | - | Cannot be used | |
| 4 | BLCT | Belt breakage sensor (SCON only) | 0: Belt broken 1: Normal |
| 3 | HMCK | Home-check sensor monitor | 0: Sensor OFF 1: Sensor ON On a model equipped with a home-check sensor function, this bit indicates the status of sensor input. It is always 0 on any other model. |
| 2 | OT | Overtravel sensor monitor | 0: Sensor OFF 1: Sensor ON This bit indicates the status of the overtravel sensor signal in the encoder connector. It is always 0 on a model not equipped with an overtravel sensor. |
| 1 | CREP | Creep sensor monitor | 0: Sensor OFF 1: Sensor ON This bit indicates the status of the creep sensor signal in the encoder connector. It is always 0 on a model not equipped with a creep sensor. |
| 0 | LS | Limit sensor monitor | 0: Sensor OFF 1: Sensor ON This bit indicates the status of the limit sensor signal in the encoder connector. It is always 0 on a model not equipped with a limit sensor. |

(17) Data of zone status register (Address = 9013_H) (ZONS)

| Bit | Symbol | Name | Function |
|-----|--------|-----------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 15 | - | Cannot be used | |
| 14 | LS2 | Limit sensor output monitor 2 (When in Electromagnetic Valve Mode 2, Single Solenoid Mode or Double Solenoid Mode for PCON, ACON, DCON and SCON) | 0: Out of range 1: In range The negative boundary of the positioning band is obtained by subtracting the positioning band size from target position No. 2 while the positive boundary of the positioning band is obtained by adding the positioning band size to target position No. 2. This bit will become 1 when the current position is within the band and 0 when it is outside the band. This bit becomes effective upon home return completion. It remains effective even while the servo is OFF. |
| 13 | LS1 | Limit sensor output monitor 1 (When in Electromagnetic Valve Mode 2, Single Solenoid Mode or Double Solenoid Mode for PCON, ACON, DCON and SCON) | 0: Out of range 1: In range The negative boundary of the positioning band is obtained by subtracting the positioning band size from target position No. 1 while the positive boundary of the positioning band is obtained by adding the positioning band size to target position No. 1. This bit remains 1 as long as the current position is within these boundaries. This bit will become 1 when the current position is within the band and 0 when it is outside the band. This bit becomes effective upon home return completion. It remains effective even while the servo is OFF. |
| 12 | LS0 | Limit sensor output monitor 0 (When in Electromagnetic Valve Mode 2, Single Solenoid Mode or Double Solenoid Mode for PCON, ACON, DCON and SCON) | 0: Out of range 1: In range The negative boundary of the positioning band is obtained by subtracting the positioning band size from target position No. 0 while the positive boundary of the positioning band is obtained by adding the positioning band size to target position No. 0. This bit remains 1 as long as the current position is within these boundaries. This bit will become 1 when the current position is within the band and 0 when it is outside the band. This bit becomes effective upon home return completion. It remains effective even while the servo is OFF. |
| 11 | - | Cannot be used | |
| 10 | - | Cannot be used | |
| 9 | - | Cannot be used | |
| 8 | ZP | Position zone output monitor | 0: Out of range 1: In range This bit remains 1 while the current position is within the zone range specified for each position and becomes 0 when it is outside the range. This bit becomes effective upon home return completion. It remains effective even while the servo is OFF. |
| 7 | - | Cannot be used | |
| 6 | - | Cannot be used | |
| 5 | - | Cannot be used | |
| 4 | - | Cannot be used | |
| 3 | - | Cannot be used | |
| 2 | - | Cannot be used | |
| 1 | Z2 | Zone output monitor 2 | 0: Out of range 1: In range This bit remains 1 while the current position is within the range where the zone boundary 2 parameter is set and becomes 0 when it is outside the range. This bit becomes effective upon home return completion. It remains effective even while the servo is OFF. |
| 0 | Z1 | Zone output monitor 1 | 0: Out of range 1: In range This bit remains 1 while the current position is within the range where the zone boundary 1 parameter is set and becomes 0 when it is outside the range. This bit becomes effective upon home return completion. It remains effective even while the servo is OFF. |

(18) Data of position number status register (Address = 9014_H) (POSS)Exected program number registers (Address = 9014_H) (PSOR) · For SCON Servo Press Type

| Bit | Symbol | Name | Function |
|-----|--------|------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 15 | — | Cannot be used | |
| 14 | — | Cannot be used | |
| 13 | — | Cannot be used | |
| 12 | — | Cannot be used | |
| 11 | — | Cannot be used | |
| 10 | — | Cannot be used | |
| 9 | PM512 | Position complete number status bit 512 | <p>These bits indicate position numbers for which positioning has been completed (Valid in cases other than solenoid valve mode). The position complete is read as binary code.</p> <p>It becomes possible to read position complete numbers when the current position gets close to the target position (within the positioning band in either the positive or negative directions). 0 is read in other cases. Although all the bits will change to 0 once the servo turns OFF, the position complete becomes valid again if the current position is still inside the positioning band when the servo is turned ON subsequently. In push-motion, the position complete numbers can be read at both the completion and miss of push-motion.</p> <p>[For Servo Press Type] Shown below is the exected press program number. The value is maintained after press program is complete till the servo gets turned OFF or another movement command gets issued. Also, it shows FFFF_H during the program is stopped.</p> |
| 8 | PM256 | Position complete number status bit 256 | |
| 7 | PM128 | Position complete number status bit 128 | |
| 6 | PM64 | Position complete number status bit 64 | |
| 5 | PM32 | Position complete number status bit 32 Exected program No. 32 | |
| 4 | PM16 | Position complete number status bit 16 Exected program No. 16 | |
| 3 | PM8 | Position complete number status bit 8 Exected program No. 8 | |
| 2 | PM4 | Position complete number status bit 4 Exected program No. 4 | |
| 1 | PM2 | Position complete number status bit 2 Exected program No. 2 | |
| 0 | PM1 | Position complete number status bit 1 Exected program No. 1 | |

(19) Data of expansion system status registers (Address = 9015_H) (SSSE)

| Bit | Symbol | Name | Function |
|-----|--------|-----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 15 | — | Cannot be used | |
| 14 | — | Cannot be used | |
| 13 | — | Cannot be used | |
| 12 | — | Cannot be used | |
| 11 | ALMC | Cold start level alarm | 0: Normal 1: Cold level start alarm in occurrence It becomes 1 when the cold start level alarm is being occurred. It is necessary to cancel the cause of the alarm issuance and reboot the power in order to resume the operation. |
| 10 | — | Cannot be used | |
| 9 | — | Cannot be used | |
| 8 | RTC | RTC (calendar) function use | 0: RTC (calendar) function not in use 1: RTC (calendar) function use * Corresponding Model: ERC3, PCON-CA/CFA/CB/CFB, ACON-CA/CB, DCON-CA/CB and SCON-CA/CAL/CB |
| 7 | — | Cannot be used | |
| 6 | — | Cannot be used | |
| 5 | — | Cannot be used | |
| 4 | — | Cannot be used | |
| 3 | — | Cannot be used | |
| 2 | — | Cannot be used | |
| 1 | — | Cannot be used | |
| 0 | — | Cannot be used | |

(20) Overload level monitors (Address = 9020_H) (OLLV)

| Bit | Symbol | Name | Function |
|-----|--------|--------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------|
| 31 | — | Overload level monitor 214720832 | It shows the current load status [%]. The overload level monitor is read out in the binary code. * Corresponding Model: SCON-CA/CAL/CB |
| 30 | — | Overload level monitor 1073601416 | |
| 29 | — | Overload level monitor 536800708 | |
| 28 | — | Overload level monitor 268400354 | |
| 27 | — | Overload level monitor 134200177 | |
| 26 | — | Overload level monitor 67108864 | |
| 25 | — | Overload level monitor 33554432 | |
| 24 | — | Overload level monitor 16777216 | |
| 23 | — | Overload level monitor 8388608 | |
| 22 | — | Overload level monitor 4194304 | |
| 21 | — | Overload level monitor 2097152 | |
| 20 | — | Overload level monitor 1048576 | |
| 19 | — | Overload level monitor 524288 | |
| 18 | — | Overload level monitor 262144 | |
| 17 | — | Overload level monitor 131072 | |
| 16 | — | Overload level monitor 65536 | |
| 15 | — | Overload level monitor 32768 | |
| 14 | — | Overload level monitor 16384 | |
| 13 | — | Overload level monitor 8192 | |
| 12 | — | Overload level monitor 4096 | |
| 11 | — | Overload level monitor 2048 | |
| 10 | — | Overload level monitor 1024 | |
| 9 | — | Overload level monitor 512 | |
| 8 | — | Overload level monitor 256 | |
| 7 | — | Overload level monitor 128 | |
| 6 | — | Overload level monitor 64 | |
| 5 | — | Overload level monitor 32 | |
| 4 | — | Overload level monitor 16 | |
| 3 | — | Overload level monitor 8 | |
| 2 | — | Overload level monitor 4 | |
| 1 | — | Overload level monitor 2 | |
| 0 | — | Overload level monitor 1 | |

(21) Press program alarm codes (Address = 9022_H) (ALMP) · SCON Servo Press Type only

| Bit | Symbol | Name | Function |
|-----|--------|------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 15 | — | Alarm code 32768 | <p>It shows the alarm code numbers of press program. It gets output when an alarm is generated. It is 0_H when there is no alarm generated. The alarm codes are read out in the binary code. Check in the controller instruction manual for the details of the alarm codes.</p> |
| 14 | — | Alarm code 16384 | |
| 13 | — | Alarm code 8192 | |
| 12 | — | Alarm code 4096 | |
| 11 | — | Alarm code 2048 | |
| 10 | — | Alarm code 1024 | |
| 9 | — | Alarm code 512 | |
| 8 | — | Alarm code 256 | |
| 7 | — | Alarm code 128 | |
| 6 | — | Alarm code 64 | |
| 5 | — | Alarm code 32 | |
| 4 | — | Alarm code 16 | |
| 3 | — | Alarm code 8 | |
| 2 | — | Alarm code 4 | |
| 1 | — | Alarm code 2 | |
| 0 | — | Alarm code 1 | |

(22) Alarm generated press program No. (Address = 9023_H) (ALMP)**•SCON Servo Press Type only**

| Bit | Symbol | Name | Function |
|-----|--------|-------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 15 | — | Alarm generated press program 32768 | <p>The press program number that an alarm is issued gets displayed.</p> <p>It gets output when an alarm is generated.</p> <p>It is 0_H when there is no alarm generated.</p> |
| 14 | — | Alarm generated press program 16384 | |
| 13 | — | Alarm generated press program 8192 | |
| 12 | — | Alarm generated press program 4096 | |
| 11 | — | Alarm generated press program 2048 | |
| 10 | — | Alarm generated press program 1024 | |
| 9 | — | Alarm generated press program 512 | |
| 8 | — | Alarm generated press program 256 | |
| 7 | — | Alarm generated press program 128 | |
| 6 | — | Alarm generated press program 64 | |
| 5 | — | Alarm generated press program 32 | |
| 4 | — | Alarm generated press program 16 | |
| 3 | — | Alarm generated press program 8 | |
| 2 | — | Alarm generated press program 4 | |
| 1 | — | Alarm generated press program 2 | |
| 0 | — | Alarm generated press program 1 | |

(23) Press program status registers (Address = 9024_H) (PPST)

•SCON Servo Press Type only

| Bit | Symbol | Name | Function |
|-----|--------|-----------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 15 | — | Cannot be used | |
| 14 | WAIT | Waiting | It turns to 1 during the waiting of the press program. |
| 13 | RTRN | While in returning operation | It turns to 1 during the returning of the press program. |
| 12 | DCMP | While in depression operation | It turns to 1 during the depression operation of the press program. |
| 11 | PSTP | Pressurize during the stop | It turns to 1 during the pressurize the stop of the press program. |
| 10 | PRSS | While in pressurizing operation | It turns to 1 during the pressurizing operation of the press program. |
| 9 | SERC | While in probing operation | It turns to 1 during the probing operation of the press program. |
| 8 | APRC | While in approaching operation | It turns to 1 during the approaching operation of the press program. |
| 7 | — | Cannot be used | |
| 6 | — | Cannot be used | |
| 5 | — | Cannot be used | |
| 4 | MPHM | Program home return during the movement | It turns to 1 during the program home-return movement, program depressurizing stage and return stage by the program home-return movement command, and during the program home position retract movement by the program alarm, and program home position retract movement by the program compulsory complete command. |
| 3 | PALM | Program alarm | It turns to 1 when the program alarm generated. The program alarm can be cancelled by the alarm reset as it is the movement cancellation level. |
| 2 | PCMP | Program finished in normal condition | It turns to 1 once it has transited to the standby period after a program is finished in the normal condition. It remains to 0 when the program is interrupted or finished in an error. Also, it remains to 0 when the program home-return movement completed. It is remained till the next program start command or movement command or servo OFF command gets issued even after a program is finished. |
| 1 | PRUN | While in executing program | It show the press program is in exection. It is 1 from the program start till the standby period finishes. It is not included during the program home-return movement. Program alarm gets issued when another program start command or axis movement command is executed while this bit is 1. |
| 0 | PORG | Program home position | It shows 1 when it is on the program home position coordinates of the indicated program number while a program is executed or during the program home-return movement. It is remained after program complete or program home-return movement complete till the next program start command, movement command or servo OFF command is issued. |

(24) Press program judgements status registers (Address = 9025_H) (PPJD)

•SCON Servo Press Type only

| Bit | Symbol | Name | Function |
|-----|--------|----------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 15 | — | Cannot be used | |
| 14 | — | Cannot be used | |
| 13 | — | Cannot be used | |
| 12 | — | Cannot be used | |
| 11 | — | Cannot be used | |
| 10 | — | Cannot be used | |
| 9 | — | Cannot be used | |
| 8 | — | Cannot be used | |
| 7 | — | Cannot be used | |
| 6 | — | Cannot be used | |
| 5 | LJNG | Load judgement NG | 0: Load judgment not conducted 1: Load judgement NG Load judgment is conducted during the period from the pressurizing operation finish in the normal condition till the end of stop status. It turns to 1 when NG is detected in the load judgment during the judgment period. It shows 0 while in a period out of the judgment period, when the load judgment is not activated and when the load judgment is OK. |
| 4 | LJOK | Load judgement OK | 0: Load judgment not conducted 1: Load judgement OK Load judgment is conducted during the period from the pressurizing operation finish in the normal condition till the end of stop status. It turns to 1 when OK is detected in the load judgment during the judgment period. It shows 0 while in a period out of the judgment period, when the load judgment is not activated and when the load judgment is NG. |
| 3 | PJNG | Position (distance) judgement NG | 0: Position (distance) not conducted 1: Position (distance) judgement NG Position (distance) judgement is conducted during the period from the pressurizing operation finish in the normal condition till the end of stop status. It turns to 1 when NG is detected in the load judgment during the judgment period. It shows 0 while in a period out of the judgment period, when the load judgment is not activated and when the load judgment is OK. |
| 2 | PJOK | Position (distance) judgement OK | 0: Position (distance) not conducted 1: Position (distance) judgement OK Position (distance) judgement is conducted during the period from the pressurizing operation finish in the normal condition till the end of stop status. It turns to 1 when OK is detected in the load judgment during the judgment period. It shows 0 while in a period out of the judgment period, when the load judgment is not activated and when the load judgment is NG. |
| 1 | JDNG | Total judgement NG | 0: Total judgement not conducted 1: Total judgement NG It turns to 1 when failure is detected in either of the position (distance) judgment or the load judgment at the end of the judgment period. It shows 0 while in a period out of the judgment period or when no NG is detected in both of the position (distance) judgment and the load judgment. |
| 0 | JDOK | Total judgement OK | 0: Total judgement not conducted 1: Total judgement OK It shows 1 when the load judgment is passed in both of the position (distance) judgment and the load judgment at the end of the judgment period, or either of them is judged passed and the other is inactivated. It shows 0 while in a period out of the judgment period or when no OK is detected in both of the position (distance) judgment and the load judgment. |

4.3.3 Structure of Modbus Status Registers

The layout of the Modbus status registers is shown below.

| | | | |
|------------------------|----------------------------------------------------------------------------------------------------|------------------------|-----------------------------------------------------------------------------------------------------|
| 0000 _H | (Reserved for system) ^(Note) | 0400 _H | (Reserved for system) ^(Note) |
| 0100 _H ⌋ | Device status register 1 [DSS1] | 0400 _H ⌋ | Device control register 1 [DRG1] |
| 010F _H | | 040F _H | |
| 0110 _H ⌋ | Device status register 2 [DSS2] | 0410 _H ⌋ | Device control register 2 [DRG2] |
| 011F _H | | 041F _H | |
| 0120 _H ⌋ | Expansion device status register [DSSE] | 0420 _H ⌋ | Expansion device control register [DRGE] |
| 012F _H | | 042F _H | |
| 0130 _H ⌋ | Position number status register Exected program number register (Servo press only) [POSS] | 0430 _H ⌋ | Position number command register Program number command register (Servo press only) [POSR] |
| 013F _H | | 043F _H | |
| 0140 _H ⌋ | Zone status register [ZONS] | 0490 _H ⌋ | Press program control register [PPCT] |
| 014F _H | | 049F _H | |
| 0150 _H ⌋ | Input port monitor register [DIPM] | FFFF _H | (Reserved for system) ^(Note) |
| 015F _H | | | |
| 0160 _H ⌋ | Output port monitor register [DOPM] | | |
| 016F _H | | | |
| 0170 _H ⌋ | Special input port register [SIPM] | | |
| 017F _H | | | |
| 0180 _H ⌋ | Expansion system status register [SSSE] | | |
| 018F _H | | | |
| 0190 _H ⌋ | Press program status register [PPST] | | |
| 019F _H | | | |
| 01A0 _H ⌋ | Program judgement status register [PPJD] | | |
| 01AF _H | | | |

Note Areas reserved for the system cannot be used for communication.


4.3.4 Detail of Modbus Status Registers

| Address [HEX] | Area name | Description | Symbol | Reference page | | | | |
|------------------|-----------------------------------------|-------------------------------------------|--------|----------------|-------|-------|----|--|
| | | | | RTU | | ASCII | | |
| 0000 to 0CFF | Reserved for system | | | | | | | |
| 0100 | Device status register 1 (DSS1) | EMG status | EMGS | (97) | 40 | (247) | 40 | |
| 0101 | | Safety speed enabled status | SFTY | | | | | |
| 0102 | | Controller ready status | PWR | | | | | |
| 0103 | | Servo ON status | SV | | | | | |
| 0104 | | Missed work part in push-motion operation | PSFL | | | | | |
| 0105 | | Major failure status | ALMH | | | | | |
| 0106 | | Minor failure status | ALML | | | | | |
| 0107 | | Absolute error status | ABER | | | | | |
| 0108 | | Brake forced-release status | BKRL | | | | | |
| 0109 | | Cannot be used | | | | | | |
| 010A | | Pause status | STP | | 40 | | 40 | |
| 010B | | Home return status | HEND | | | | | |
| 010C | | Position complete status | PEND | | | | | |
| 010D | | Load cell calibration complete | CEND | | | | | |
| 010E | | Load cell calibration status | CLBS | | | | | |
| 010F | | Cannot be used | | | | | | |
| 0110 | Device status register 2 (DSS2) | Cannot be used | | (99) | (249) | | | |
| 0111 | | Cannot be used | | | | | | |
| 0112 | | Load output judgment status | LOAD | | | 41 | 41 | |
| 0113 | | Torque level status | TRQS | | | | | |
| 0114 | | Teaching mode status | MODS | | | | | |
| 0115 | | Position-data load command status | TEAC | | | | | |
| 0116 | | Jog+ status | JOG+ | | | | | |
| 0117 | | Jog- status | JOG- | | | | | |
| 0118 | | Position complete 7 | PE7 | | | | | |
| 0119 | | Position complete 6 | PE6 | | | | | |
| 011A | | Position complete 5 | PE5 | | | | | |
| 011B | | Position complete 4 | PE4 | | | | | |
| 011C | | Position complete 3 | PE3 | | | | | |
| 011D | | Position complete 2 | PE2 | | | | | |
| 011E | | Position complete 1 | PE1 | | | | | |
| 011F | | Position complete 0 | PE0 | | | | | |
| 0120 | Expansion device status register (DSSE) | Emergency stop status | EMGP | (101) | 42 | (251) | 42 | |
| 0121 | | Motor voltage low status | MPUV | | | | | |
| 0122 | | Operation mode status | RMDS | | | | | |
| 0123 | | Cannot be used | | | | | | |
| 0124 | | Home return status | GHMS | | 42 | | 42 | |
| 0125 | | Push-motion operation in progress | PUSH | | | | | |
| 0126 | | Excitation detection status | PSNS | | | | | |
| 0127 | | PIO/Modbus switching status | PMSS | | | | | |
| 0128 | | Cannot be used | | | | | | |
| 0129 | | Cannot be used | | | | | | |
| 012A | | Moving signal | MOVE | | 42 | | 42 | |
| 012B to 012F | | Cannot be used | | | | | | |

| Address [HEX] | Area name | Description | Symbol | Reference page | | | |
|------------------|--------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------|--------|----------------|----|-------|----|
| | | | | RTU | | ASCII | |
| 0130 to 0135 | Position number status register, Exected program number register (Servo Press) (POSS) | Cannot be used | | (117) | | (267) | |
| 0136 | | Position complete number status bit 512 | PM512 | | 46 | | 46 |
| 0137 | | Position complete number status bit 256 | PM256 | | | | |
| 0138 | | Position complete number status bit 128 | PM128 | | | | |
| 0139 | | Position complete number status bit 64 | PM64 | | | | |
| 013A | | Position complete number status bit 32 | PM32 | | | | |
| | | Exected program number status bit 32 | | | | | |
| 013B | | Position complete number status bit 16 | PM16 | | | | |
| | | Exected program number status bit 16 | | | | | |
| 013C | | Position complete number status bit 8 | PM8 | | | | |
| | | Exected program number status bit 8 | | | | | |
| 013D | | Position complete number status bit 4 | PM4 | | | | |
| | | Exected program number status bit 4 | | | | | |
| 013E | | Position complete number status bit 2 | PM2 | | | | |
| | | Exected program number status bit 2 | | | | | |
| 013F | | Position complete number status bit 1 | PM1 | | | | |
| | | Exected program number status bit 1 | | | | | |
| 0140 | Zone status register (ZONS) | Cannot be used | | (115) | | (265) | |
| 0141 | | Limit sensor output monitor 2 | LS2 | | 45 | | 45 |
| 0142 | | Limit sensor output monitor 1 | LS1 | | | | |
| 0143 | | Limit sensor output monitor 0 | LS0 | | | | |
| 0144 to 0146 | | Cannot be used | | | | | |
| 0147 | | Position zone output monitor | ZP | | 45 | | 45 |
| 0148 to 014D | | Cannot be used | | | | | |
| 014E | | Zone output monitor 2 | Z2 | | 45 | | 45 |
| 014F | | Zone output monitor 1 | Z1 | | | | |
| 0150 to 015F | Input port monitor register (DIPM) | PIO connector pin numbers 20A (IN15) to 5A (IN0) | | 87 | | 237 | |
| 0160 to 016F | Output port monitor register (DOPM) | PIO connector pin numbers 16B (OUT15) to 1B (OUT0) | | 92 | | 242 | |
| 0170 | Special input port monitor register (SIPM) | Cannot be used | | (113) | | (263) | |
| 0171 | | Command pulse NP signal status | NP | | 44 | | 44 |
| 0172 | | Cannot be used | | | | | |
| 0173 | | Command pulse PP signal status | PP | | 44 | | 44 |
| 0174 to 0176 | | Cannot be used | | | | | |
| 0177 | | Mode switch status | MDSW | | 44 | | 44 |
| 0178 to 017A | | Cannot be used | | | | | |
| 017B | | Belt breakage sensor monitor | BLCT | | 44 | | 44 |
| 017C | | Home-check sensor monitor | HMCK | | 44 | | 44 |
| 017D | | Overtravel sensor | OT | | | | |
| 017E | | Creep sensor | CREP | | | | |
| 017F | | Limit sensor | LS | | | | |
| 0180 to 0183 | Expansion system status register (SSSE) | Cannot be used | | (119) | | (269) | |
| 0184 | | Cold start level alarm | ALMC | | 47 | | 47 |
| 0185 to 0186 | | Cannot be used | | | | | |
| 0187 | | RTC in use (ERC3, ACON-CA/CB, DCON-CA/CB and PCON-CA/CFA/CB/CFB only) | RTC | | 47 | | 47 |
| 0188 to 018F | | Cannot be used | | | | | |

| Address [HEX] | Area name | Description | Symbol | Reference page | | | |
|------------------|--------------------------------------------------------------------------|-----------------------------------------|--------|----------------|-----|-------|-----|
| | | | | RTU | | ASCII | |
| 0190 | Press program status register (Servo Press) (PPST) | Cannot be used | | (129) | 51 | (279) | 51 |
| 0191 | | Waiting | WAIT | | 51 | | 51 |
| 0192 | | While in returning operation | RTRN | | 51 | | 51 |
| 0193 | | While in depression operation | DCMP | | 51 | | 51 |
| 0194 | | Pressurize during the stop | PSTP | | 51 | | 51 |
| 0195 | | While in pressurizing operation | PRSS | | 51 | | 51 |
| 0196 | | While in probing operation | SERC | | 51 | | 51 |
| 0197 | | While in approaching the operation | APRC | | 51 | | 51 |
| 0198 to 019A | | Cannot be used | | | | | |
| 019B | | Program home return during the movement | MPHM | | 51 | | 51 |
| 019C | | Program alarm | PALM | | 51 | | 51 |
| 019D | | Program finished in normal condition | PCMP | | 51 | | 51 |
| 019E | | While in executing program | PRUN | | 51 | | 51 |
| 019F | | Program home position | PORG | | 51 | | 51 |
| 01A0 to 01A9 | Press program judgement status register (Servo Press) (PPJD) | Cannot be used | | (131) | | (281) | |
| 01AA | | Load judgement NG | LJNG | | 52 | | 52 |
| 01AB | | Load judgement OK | LJOK | | 52 | | 52 |
| 01AC | | Position (distance) judgement NG | PJNG | | 52 | | 52 |
| 01AD | | Position (distance) judgement OK | PJOK | | 52 | | 52 |
| 01AE | | Total judgement NG | JDNG | | 52 | | 52 |
| 01AF | | Total judgement OK | JDOK | | 52 | | 52 |
| 01B0 to 03FF | | Reserved for system | | | | | |
| 0420 to 0425 | Expansion device control register (DRGE) | Cannot be used | | | | | |
| 0426 | | Load cell calibration command | CLBR | | 160 | | 310 |
| 0427 | | PIO/Modbus switching specification | PMSL | | 162 | | 312 |
| 0428 to 042B | | Cannot be used | | | | | |
| 042C | | Deceleration stop | STOP | | 164 | | 314 |
| 042D to 042F | | Cannot be used | | | | | |
| 0430 to 0435 | Position number specification register | Cannot be used | | (176) | | (326) | |
| 0436 | | Position command bit 512 | PC512 | | 35 | | 35 |
| 0437 | | Position command bit 256 | PC256 | | | | |
| 0438 | | Position command bit 128 | PC128 | | | | |
| 0439 | | Position command bit 64 | PC64 | | | | |
| 043A | | Position command bit 32 | PC32 | | | | |
| 043B | | Program number command bit 32 | | | | | |
| 043B | | Position command bit 16 | PC16 | | | | |
| 043B | | Program number command bit 16 | | | | | |
| 043C | | Position command bit 8 | PC8 | | | | |
| 043C | | Program number command bit 8 | | | | | |
| 043D | | Position command bit 4 | PC4 | | | | |
| 043D | | Program number command bit 4 | | | | | |
| 043E | | Position command bit 2 | PC2 | | | | |
| 043E | | Program number command bit 2 | | | | | |
| 043F | | Position command bit 1 | PC1 | | | | |
| 043F | | Program number command bit 1 | | | | | |
| 0440 to 048F | Reserved for system | | | | | | |
| 0490 to 049A | Press program control register (PPCT) | Cannot be used | | | | | |
| 049B | | Axis operation permission | ENMV | | 166 | | 316 |
| 049C | | Program home return movement | PHOM | | 168 | | 318 |
| 049D | | Search stop | SSTP | | 170 | | 320 |
| 049E | | Program compulsoly finish | FPST | | 172 | | 322 |
| 049F | | Program start | PSTR | | 174 | | 324 |
| 04A0 to FFFF | Reserved for system | | | | | | |

5 Modbus RTU

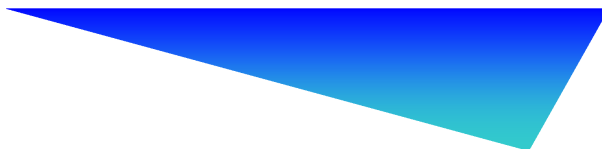

5.1 Message Frames (Query and Response)

| Start | Address | Function code | Data | CRC Check | End |
|-----------------|---------|---------------|--------|-----------|-----------------|
| Silent interval | 1 byte | 1 byte | n byte | 2 byte | Silent interval |

(1) Start

This field contains a silent interval (non communication time) of 3.5 characters or longer.

(1 character = 10 bits)

Example: In case of 9600 bps, $(10 \times 3.5) \text{ bits} \times 1/9600 \text{ bps} = 3.65 \text{ ms}$

Note If the response timeout error occurs, change parameter No. 45, "Silent interval multiplier" or No. 17, "Min. delay for activating local transmitter" using the IAI teaching tool as required.

(2) Address

This field specifies the addresses of connected RC controllers (01_H to 10_H).

Address = axis number + 1



Caution: The address is not equal to the corresponding axis number: be careful when making settings.

(3) Function

The table below summarizes the function codes and functions that can be used with RC controllers.

| Code [Hex] | Name | Function |
|-----------------|---------------------------|-------------------------------------------|
| 01 _H | Read Coil Status | Read coils/DOs. |
| 02 _H | Read Input Status | Read input statuses/DIs. |
| 03 _H | Read Holding Registers | Read holding registers. |
| 04 _H | Read Input Registers | Read input registers. |
| 05 _H | Force Single Coil | Write one coil/DO. |
| 06 _H | Preset Single Register | Write holding register. |
| 07 _H | Read Exception Status | Read exception statuses. |
| 0F _H | Force Multiple Coils | Write multiple coils/DOs at once. |
| 10 _H | Preset Multiple Registers | Write multiple holding registers at once. |
| 11 _H | Report Slave ID | Query a slave's ID. |
| 17 _H | Read / Write Registers | Read/write registers. |

Note This manual explains about  mark function codes.

(Reference) The ROBONET gateway supports three types of function codes (03_H, 06_H and 10_H).

[Please refer to the separate ROBONET Operation Manual.]

(4) Data

Use this field to add data specified by a function code. It is also allowed to omit data if data addition is not specified by a function code.

(5) CRC check

In the RTU mode, an error check field confirming to the CRC method is automatically ^(Note) included in order to check contents of all messages. Moreover, checking is carried out regardless of the parity check method of individual characters in messages.

The CRC check consists of 16-bit binary values. The CRC value is calculated by the sender that appends the CRC field to a message. The recipient recalculates the CRC value again while receiving the message, and compares the calculation result against the actual value received in the CRC field. If the two values do not match, an error will generate.

(Note) When using a PC or a PLC not supporting Modbus are used as the host, it is necessary to create a function for calculating CRC.

Programs written in C language are included in 8.1, "CRC Check Calculation."

Generation polynomial equation: $x^{16} + x^{15} + x^2 + 1$ (CRC-16 method)

(Reference) CRC calculation is automatically carried out with the FINS command supporting Modbus RTU communication of the PLC CJ1 series made by Omron.

(6) End

This field contains a silent interval (non communication time) of 3.5 characters or longer.

(Note) If the response timeout error occurs, change parameter No. 45, "Silent interval multiplier" or No. 17, "Min. delay for activating local transmitter" using the IAI's teaching tools as required.

(7) Broadcast

It is possible to send a query containing same data to all connected axes by specifying the address 00_H. In this case, no response is returned from an RC controller.

Note, however, that the function codes etc. that can be used with this function are limited; care should be taken when using the function. Please check the function codes that can be used in 5.2, "List of RTU Mode Queries."

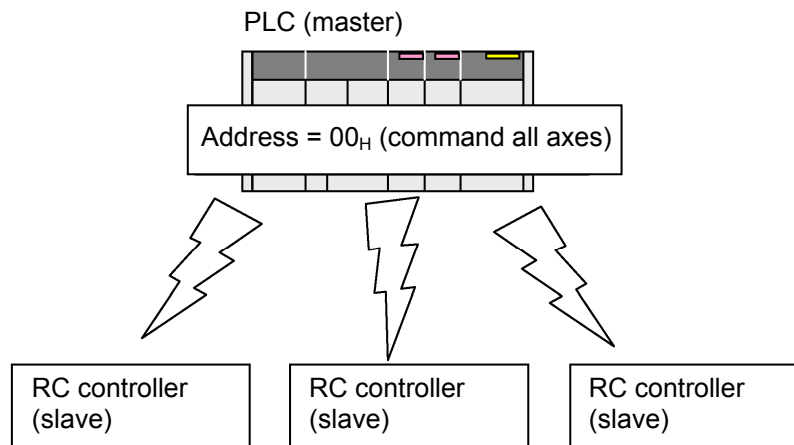


Fig. 5.1



Caution

The sizes of send/receive buffers are set to 256 bytes for an RC controller, respectively. Make sure to keep the messages small enough such that messages sent from the host side do not exceed the receive buffer and data requests do not exceed send buffer.

5.2 List of RTU Mode Queries

FC : Function code

PIO: Parallel I/O (input/output of an I/O connector)

The circle marks in the Combination use with PIO and Broadcast columns indicate queries that can be combined with PIO and in broadcast communication, respectively.

| FC | Function | Symbol | Function Summary | Combination with PIO | Broad- cast | Page |
|----|-------------------------------------------------------------------------------------|----------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------|----------------|------|
| 03 | Multiple FC03 register reading | None | This function can be used to successively read multiple registers that use function 03. | ○ | | 65 |
| 03 | Alarm detail description reading | ALA0 ALC0 ALT0 | This bit reads the alarm codes, alarm addresses, detail codes and alarm occurrence time (passed time) that lately occurred. | ○ | | 69 |
| 03 | Position data ^(Note 1) reading | Refer to right | This bit reads the indicated number in the position data. (PCMD, INP, VCMD, ZNMP, ZNLP, ACMD, DCMD, PPOW, LPOW, CTLF) | ○ | | 71 |
| 03 | Total moving count reading | TLMC | This bit reads the Total moving count. | ○ | | 74 |
| 03 | Total moving distance reading | ODOM | This bit reads the Total moving distance in units of 1 m. | ○ | | 76 |
| 03 | Present time reading | TIMN | This bit reads the present time. (PCON-CA/CFA/CB/CFB, ACON-CA/CB, DCON-CA/CB and SCON-CA/CAL/CB only) | ○ | | 78 |
| 03 | Total FAN driving time reading | TFAN | This bit reads the Total FAN driving time. (PCON-CFA/CFB, SCON-CAL and SCON-CB [400W or more] only) | ○ | | 81 |
| 03 | Current position reading | PNOW | This function reads the current actuator position in units of 0.01 mm. | ○ | | 83 |
| 03 | Present alarm code reading | ALMC | This function reads alarm codes that are presently detected. | ○ | | 85 |
| 03 | I/O port input status reading | DIPM | This function reads the ON/OFF statuses of PIO input ports. | ○ | | 87 |
| 03 | I/O port output status reading | DOPM | This function reads the ON/OFF statuses of PIO output ports. | ○ | | 92 |
| 03 | Controller status signal reading 1 (device status 1) (Operation preparation status) | DSS1 | This function reads the following 12 statuses: [1] Emergency stop [2] Safety speed enabled/disabled [3] Controller ready [4] Servo ON/OFF [5] Missed work part in push-motion operation [6] Major failure [7] Minor failure [8] Absolute error [9] Brake [10] Pause [11] Home return completion [12] Position complete [13] Load cell calibration complete [14] Load cell calibration status | ○ | | 97 |

Note1 Once RCP6S, RCM-P6PC, RCM-P6AC and RCM-P6DC read this address, they return 0_H to all the addresses.

| FC | Function | Symbol | Function Summary | Combination with PIO | Broad-cast | Page |
|----|-------------------------------------------------------------------------------------------------|--------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------|------------|------|
| 03 | Controller status signal reading 2 (device status 2) (Operation preparation 1 status) | DSS2 | This function reads the following 15 statuses: [1] Enable [2] Load output judgment (check-range load current threshold) [3] Torque level (load current threshold) [4] Teaching mode (normal/teaching) [5] Position data load (normal/complete) [6] Jog+ (normal/command active) [7] Jog- (normal/command active) [8] Position complete 7 to 0 | ○ | | 99 |
| 03 | Controller status signal reading 3 (extended device status) (Operation preparation 2 status) | DSSE | This function reads the following 9 statuses: [1] Emergency stop (emergency stop input port) [2] Motor voltage low [3] Operation mode (AUTO/MANU) [4] Home return [5] Push-motion operation in progress [6] Excitation detection [7] PIO/Modbus switching [8] Position-data write completion status [9] Moving | ○ | | 101 |
| 03 | Controller status signal reading 4 (System status) (Controller status) | STAT | This function reads the following 7 statuses: [1] Automatic servo OFF [2] Nonvolatile memory being accessed [3] Operation mode (AUTO/MANU) [4] Home return completion [5] Servo ON/OFF [6] Servo command [7] Drive source ON (normal/cut off) | ○ | | 103 |
| 03 | Current speed reading | VNOW | This function reads the current actuator speed in units of 0.01 mm/sec. | ○ | | 105 |
| 03 | Current ampere reading | CNOW | This function reads the motor-torque current command value of the actuator in mA. | ○ | | 107 |
| 03 | Deviation reading | DEVI | This function reads the deviation over a 1-ms period in pulses. | ○ | | 109 |
| 03 | Total power on time reading | STIM | This function reads the total time in msec since the controller power was turned on. | ○ | | 111 |
| 03 | Special input port input signal status reading (Sensor input status) | SIPM | This function reads the following 8 statuses: [1] Command pulse NP [2] Command pulse PP [3] Mode switch [4] Belt breakage sensor [5] Home check sensor [6] Overtravel sensor [7] Creep sensor [8] Limit sensor | ○ | | 113 |

| FC | Function | Symbol | Function Summary | Combination with PIO | Broad-cast | Page |
|----|-----------------------------------------------|--------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------|------------|------|
| 03 | Zone output signal reading | ZONS | This function reads the following 6 statuses: [1] LS2 (PIO pattern solenoid valve mode [3-point type]) [2] LS1 (PIO pattern solenoid valve mode [3-point type]) [3] LS0 (PIO pattern solenoid valve mode [3-point type]) [4] Position zone [5] Zone 2 [6] Zone 1 | ○ | | 115 |
| 03 | Positioning completed position number reading | POSS | This function reads the following next statuses: Complete position number bit 256 to 1 | ○ | | 117 |
| | Exected program number register reading | | Exected program number bit 32 to1 | | | |
| 03 | Controller status signal reading 5 | SSSE | This function reads the following 2 statuses: [1] Cold start level alarm occurred/not occurred [2] RTC (calendar) function used/not used (ERC3, PCON-CA/CFA/CB/CFB, ACON-CA/CB and DCON-CA/CB only) | ○ | | 119 |
| 03 | Current load reading | FBFC | The current measurement on the load cell is read in units of 0.01 N. | ○ | | 121 |
| 03 | Press program status register reading | PPST | This function reads the following 12 statuses: [1] Waiting [2] While in returning operation [3] While in depression operation [4] Pressurize during the stop [5] While in pressurizing operation [6] While in probing operation [7] While in approaching the operation [8] Program home return during the movement [9] Program alarm [10] Program finished in normal condition [11] While in excecuting program [12] Program home position | ○ | | 129 |
| 03 | Press program judgement status register | PPJD | This function reads the following 6 statuses: [1] Load judgement NG [2] Load judgement OK [3] Position (distance) judgement NG [4] Position (distance) judgement OK [5] Total judgement NG [6] Total judgement OK | ○ | | 131 |
| 05 | Safety speed enable/disable switching | SFTY | This function issues a command to enable/disable the safety speed. | | ○ | 134 |
| 05 | Servo ON/OFF | SON | This function issues a command to turn the servo ON/OFF. | | ○ | 136 |

| FC | Function | Symbol | Function Summary | Combination with PIO | Broad-cast | Page |
|----------------|--------------------------------------------------------|------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------|------------|------|
| 05 | Alarm reset | ALRS | This function issues a command to reset alarms/cancel the remaining travel. | | ○ | 138 |
| 05 | Brake forced release | BKRL | This function issues a command to forcibly release the brake. | | ○ | 140 |
| 05 | Pause | STP | This function issues a pause command. | | ○ | 142 |
| 05 | Home return | HOME | This function issues a home return operation command. | | ○ | 144 |
| 05 | Positioning start command | CSTR | This signal starts a position number specified movement. | | ○ | 146 |
| 05 | Jog/inch switching | JISL | This function switches between the jogging mode and the inching mode | | ○ | 148 |
| 05 | Teaching mode command | MOD | This function switches between the normal mode and the teaching mode | | ○ | 150 |
| 05 | Position data load command | TEAC | This function issues a current position load command in the teaching mode. | | ○ | 152 |
| 05 | Jog+ command | JOG+ | This function issues a jogging/inching command in the direction opposite home. | | ○ | 154 |
| 05 | Jog- command | JOG- | This function issues a jogging/inching command in the direction of home. | | ○ | 156 |
| 05 | Start positions 0 to 7 <<ST0 to ST7>> movement command | ST0 to ST7 | This function specifies position numbers effective only in the solenoid valve mode. The actuator can be operated with this command alone. | | ○ | 158 |
| 05 | Load cell calibration command | CLBR | Calibrate the load cell. | | ○ | 160 |
| 05 | PIO/Modbus switching setting | PMSL | This function issues a command to enable/disable PIO external command signals. | | ○ | 162 |
| 05 | Deceleration stop | STOP | This function can decelerate the actuator to a stop. | | ○ | 164 |
| 05 | Axis operation permission | ENMV | Setting can be made whether to permit the operation of the connected axes. | | ○ | 166 |
| 05 | Program home return movement | PHOM | Movement is made to the program home position set in each press program. | | ○ | 168 |
| 05 | Search stop | SSTP | It can be stopped after search operation is complete. | | ○ | 170 |
| 05 | Program compulsoly finish | FPST | It compulsoly finishes the press program. | | ○ | 172 |
| 05 | Program executed | PSTR | Press program execute it. | | ○ | 174 |
| 06 | Direct writing of control information write | | Change (write) the content of the controller's register. | | ○ | 176 |
| 10 | Numerical value movement command | None | This function can be used to send the target position, positioning band, speed, acceleration/deceleration, push, and control setting in a single message to operate the actuator. Normal movement, relative movement and push-motion operation are supported. | | ○ | 180 |
| 10 | Writing position data table ^(Note 1) | None | This function can be used to change all data of the specified position number for the specified axis. | | ○ | 198 |
| Indeterminable | Exception response | None | This response will be returned when the message contains invalid data. | | | 357 |

Note 1 In RCP6S, RCM-P6PC, RCM-P6AC and RCM-P6DC, writing in this address is not available. They should return an exception response.

5.3 Data and Status Reading (Used function code 03)

5.3.1 Reading Consecutive Multiple Registers

(1) Function

These registers read the contents of registers in a slave.

This function is not supported in broadcast communication.

(2) Start address list

With RC Series controllers, the sizes of send/receive buffers are set to 256 bytes, respectively.

Accordingly, a maximum of 125 registers' worth of data consisting of 251 bytes (one register uses two bytes), except 5 bytes (slave address + function code + number of data bytes + error check) of the above 256 bytes, can be queried in the RTU mode. In other words, all of the data listed below can be queried in a single communication.

It is also available to refer to multiple registers of the addresses in a row at one time of sending and receiving.

| Address [H] | Symbol | Name | Sign | Register size | Byte |
|--------------------------------------------------------------------------------|--------|-------------------------------------------------------------------|------|---------------|------|
| 0500 | ALA0 | Alarm detail code | | 1 | 2 |
| 0501 | ALA0 | Alarm address | | 1 | 2 |
| 0502 | - | Always 0 | - | 1 | 2 |
| 0503 | ALC0 | Alarm code | | 1 | 2 |
| 0504,0505 | ALT0 | Alarm occurrence time | | 2 | 4 |
| (Note) Assignment is made in order from small position numbers. | PCMD | Target position | ○ | 2 | 4 |
| | INP | Positioning band | ○ | 2 | 4 |
| | VCMD | Speed command | | 2 | 4 |
| | ZNMP | Individual zone boundary + | ○ | 2 | 4 |
| | ZNLP | Individual zone boundary - | ○ | 2 | 4 |
| | ACMD | Acceleration command | | 1 | 2 |
| | DCMD | Deceleration command | | 1 | 2 |
| | PPOW | Push-current limiting value | | 1 | 2 |
| | LPOW | Load current threshold | | 1 | 2 |
| | CTLF | Control flag specification | | 1 | 2 |
| 8400, 8401 | TLMC | Total moving count ^(Note1) | | 2 | 4 |
| 8402, 8403 | ODOM | Total moving distance ^(Note1) | | 2 | 4 |
| 841E, 841F | TIMN | Present time (SCON-CA/CAL/CB only) | | 2 | 4 |
| 8420, 8421 | TIMN | Present time (PCON-CA/CFA/CB/CFB only) | | 2 | 4 |
| 8422, 8423 | TIMN | Present time (ACON-CA/CB, DCON-CA/CB only) | | 2 | 4 |
| 842A, 842B | TFAN | Total FAN driving time (SCON-CAL, SCON-CB [400W or more] only) | | 2 | 4 |
| 842E, 842F | TFAN | Total FAN driving time (PCON-CFA/CFB only) | | 2 | 4 |

| Address [H] | Symbol | Name | Sign | Register size | Byte |
|-------------|--------|----------------------------------------------------------------------------------------------|------|---------------|------|
| 9000, 9001 | PNOW | Current position monitor | ○ | 2 | 4 |
| 9002 | ALMC | Present alarm code query | | 1 | 2 |
| 9003 | DIPM | Input port query | | 1 | 2 |
| 9004 | DOPM | Output port monitor query | | 1 | 2 |
| 9005 | DSS1 | Device status query 1 | | 1 | 2 |
| 9006 | DSS2 | Device status query 2 | | 1 | 2 |
| 9007 | DSSE | Expansion device status query | | 1 | 2 |
| 9008, 9009 | STAT | System status query | | 2 | 4 |
| 900A, 900B | VNOW | Current speed monitor | ○ | 2 | 4 |
| 900C, 900D | CNOW | Current ampere monitor | ○ | 2 | 4 |
| 900E, 900F | DEVI | Deviation monitor | ○ | 2 | 4 |
| 9010, 9011 | STIM | System timer query | | 2 | 4 |
| 9012 | SIPM | Special input port query | | 1 | 2 |
| 9013 | ZONS | Zone status query | | 1 | 2 |
| 9014 | POSS | Positioning complete position No. status query Exected program No. register (Servo Press) | | 1 | 2 |
| 9015 | SSSE | Expansion system status register | | 1 | 2 |
| 901E | FBFC | Current load data monitor | ○ | 2 | 4 |
| 9020 | OLLV | Overload level monitor | | 1 | 2 |
| 9022 | ALMP | Press program alarm code | | 1 | 2 |
| 9023 | ALMP | Alarm generated press program No. | | 1 | 2 |
| 9024 | PPST | Pres program status register | | 1 | 2 |
| 9025 | PPJD | Press program status judgements register | | 1 | 2 |

Note 1 PCON-CA/CFA/CB/CFB/CYB/PLB/POB, ACON-CA/CB/CYB/PLB/POB, DCON-CA/CB/CYB/PLB/POB, SCON-CA/CAL/CB, ERC3, RCP6S, RCM-P6PC, RCM-P6AC and RCM-P6DC only

(3) Query format

In a query message, specify the address of the register from which to start reading data, and number of bytes in registers to be read.

1 register (1 address) = 2 bytes = 16-bit data

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|-------------------------|-------------------------------------------|------------------------|----------------------------------------------------|
| Start | | None | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis No. + 1 (01 _H to 10 _H) |
| Function code [H] | 1 | 03 | Register reading code |
| Start address [H] | 2 | Arbitrary | Refer to 5.3.1 (2), "Start address list" |
| Number of registers [H] | 2 | Arbitrary | Refer to the start address list. |
| Error check [H] | 2 | CRC (16 bits) | |
| End | | None | Silent interval |
| Total number of bytes | 8 | | |

(4) Response format

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|--------------------------|----------------------------------------------------------|------------------------|--------------------------------------------------------------|
| Start | | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis No. + 1 (01 _H to 10 _H) |
| Function code [H] | 1 | 03 | Register reading code |
| Number of data bytes [H] | 1 | | Total number of bytes of registers specified in the query |
| Data 1 [H] | Number of bytes of register specified in the query | | |
| Data 2 [H] | Number of bytes of register specified in the query | | |
| Data 3 [H] | Number of bytes of register specified in the query | | |
| Data 4 [H] | Number of bytes of register specified in the query | | |
| : | : | | |
| : | : | | |
| Error check [H] | 2 | CRC (16 bits) | Silent interval |
| End | | None | |
| Total number of bytes | Up to 256 | | |

(5) Query sample

A sample query that queries addresses 9000_H to 9009_H of a controller of axis No. 0 is shown below.

- Query (silent intervals are inserted before and after the query)

01 03 90 00 00 0A E8 CD

| Field | RTU mode 8-bit data |
|-------------------------|----------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 03 |
| Start address [H] | 9000 |
| Number of registers [H] | 000A (10 registers) |
| Error check [H] | E8CD (in accordance with CRC calculation) |
| End | Silent interval |

The response to the query is as follows.

- Response (silent intervals are inserted before and after the response)

01 03 14 00 00 00 00 00 00 00 00 00 6E 00 60 18 80 00 23 C7 00 00 00 19 18 A6

| Field | RTU mode 8-bit data |
|--------------------------|-------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 03 |
| Number of data bytes [H] | 14 (20 bytes = 10 registers) |
| Data 1 [H] | 00 00 00 00 (current position monitor) |
| Data 2 [H] | 00 00 (present alarm code query) |
| Data 3 [H] | 00 00 (input port query) |
| Data 4 [H] | 6E 00 (output port query) |
| Data 5 [H] | 60 18 (device status 1 query) |
| Data 6 [H] | 80 00 (device status 2 query) |
| Data 7 [H] | 23 C7 (expansion device status query) |
| Data 8 [H] | 00 00 00 19 (system status query) |
| Error check [H] | 18A6 (in accordance with CRC calculation) |
| End | Silent interval |

Note If the response example is simply an example and will vary depending on various conditions.

5.3.2 Alarm Detail Description Reading <<ALA0, ALC0, ALT0>>

(1) Function

This bit reads the alarm codes, alarm detail codes and alarm occurrence time that lately occurred. When any alarm is not issued, it is "0_H". [Refer to 4.3.2 (1) to (3) for detail]

(2) Query format

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|-------------------------|-------------------------------------------|------------------------|-------------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 1 | 03 | Register reading |
| Start address [H] | 2 | 0500 | Alarm detail code |
| Number of registers [H] | 2 | 0006 | Reading addresses 0500 _H to 0505 _H |
| Error check [H] | 2 | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | 8 | | |

(3) Response format

A response message contains 16 bits of data per register.

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|--------------------------|-------------------------------------------|---------------------------------------------|------------------------------------------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 1 | 03 | Register reading |
| Number of data bytes [H] | 1 | 0C | Reading 6 registers = 12 bytes |
| Data 1 [H] | 4 | Alarm detail code Alarm address | Alarm detail code (0500 _H) [Hex] Alarm address (0501 _H) [Hex] |
| Data 2 [H] | 4 | Alarm code | Alarm code [Hex] |
| Data 3 [H] | 4 | Alarm occurrence time ^(Note1) | Alarm occurrence time [Hex] |
| Error check [H] | 2 | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | 17 | | |

Note 1 The contents of data differ for the case when the model is equipped with RTC (calendar) function and RTC is effective [1] and the case when RTC is ineffective or the model is not equipped with RTC [2].

[1] It shows the alarm occurrence time.

[2] It shows the time [msec] passed since the power was turned on.

(4) Query sample

A sample query that reads the contents of last occurred alarm (addresses 0500_H to 0505_H) of a controller with axis No. 0 is shown below.

- Query (silent intervals are inserted before and after the query)

01 03 05 00 00 06 C5 04

| Field | RTU mode 8-bit data |
|-------------------------|----------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 03 |
| Start address [H] | 0500 |
| Number of registers [H] | 0006 |
| Error check [H] | C504 (in accordance with CRC calculation) |
| End | Silent interval |

The response to the query is as follows.

- Response (silent intervals are inserted before and after the response)

01 03 0C 00 00 FF FF 00 00 00 E8 17 2C 64 3F 2D CD

| Field | RTU mode 8-bit data |
|--------------------------|-------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 03 |
| Number of data bytes [H] | 0C (12 bytes = 6 registers) |
| Data 1 [H] | 00 00 (Alarm detail code) |
| Data 2 [H] | FF FF (Alarm address) |
| Data 3 [H] | 00 00 00 E8 (Alarm code) |
| Data 4 [H] | 17 2C 64 3F (Alarm occurrence time) |
| Error check [H] | 2DCD (in accordance with CRC calculation) |
| End | Silent interval |

Alarm detail code: 0000_H...No detail code

Alarm address: FFFF_H...Disable (no detail code)

Alarm code: 00E8_H=0E8...Encoder AB phase break error

Alarm occurrence time: 172C643F_H (conversion) ⇒ 2012/04/26 19:53:35 [Conversion is refer to the Section 4.3.2(3)]

Note 1 The data of the response example is simply an example and will vary depending on various conditions.

Note 2 For the detail of an alarm code, check in the instruction manual of the each controller.

5.3.3 Position Data Description Reading

<<PCMD, INP, VCMD, ZNMP, ZNLP, ACMD, DCMD, PPOW, LPOW, CTLF>>

(1) Function

This reads the value set in the indicated position number.

(2) Start address list

With RC Series controllers, the sizes of send/receive buffers are set to 256 bytes, respectively. Accordingly, a maximum of 125 registers' worth of data consisting of 251 bytes (one register uses two bytes), except 5 bytes (slave address + function code + number of data bytes + error check) of the above 256 bytes, can be queried in the RTU mode. In other words, all of the data listed below can be queried in a single communication.

It is also available to refer to multiple registers of the addresses in a row at one time of sending and receiving.

| Address [H] | Top Address of Each Position Number [H] | Offset from Top Address [H] | Symbol | Registers name | sign | Register size | Byte | Unit |
|--------------|----------------------------------------------------------|-----------------------------|--------|-----------------------------|------|---------------|------|-------------------------------|
| 1000 to 3FFF | Top Address = $1000_H + (16 \times \text{position No.})$ | +0 | PCMD | Target position | ○ | 2 | 4 | 0.01mm |
| | | +2 | INP | Positioning band | ○ | 2 | 4 | 0.01mm |
| | | +4 | VCMD | Speed command | | 2 | 4 | 0.01mm/s |
| | | +6 | ZNMP | Individual zone boundary + | ○ | 2 | 4 | 0.01mm |
| | | +8 | ZNLP | Individual zone boundary - | ○ | 2 | 4 | 0.01mm |
| | | +A | ACMD | Acceleration command | | 1 | 2 | 0.01G |
| | | +B | DCMD | Deceleration command | | 1 | 2 | 0.01G |
| | | +C | PPOW | Push-current limiting value | | 1 | 2 | % (100%= FF _H) |
| | | +D | LPOW | Load current threshold | | 1 | 2 | % (100%= FF _H) |
| | | +E | CTLF | Control flag specification | | 1 | 2 | |

In a query input, each address is calculated using the formula below:
 $1000_H + (16 \times \text{Position number})_H + \text{Address (Offset)}_H$

Example Change the speed command register for position No. 200

$$1000_H + (16 \times 200 = 3200)_H + 4_H$$

$$= 1000_H + C80_H + 4_H$$

$$= 1C84_H$$

"1C84" becomes the input value for the start address field of this query.

Note The maximum position number varies depending on the controller model and the PIO pattern currently specified.

Note RCP6S, RCM-P6PC, RCM-P6AC and RCM-P6DC returns 0_H in all the addresses once it reads this address.

(3) Query format

In a query message, specify the address of the register from which to start reading data, and number of bytes in registers to be read.

1 register (1 address) = 2 bytes = 16-bit data

| Field | RTU mode 8-bit data | Number of data items (number of bytes) | Remarks |
|-------------------------|------------------------|-------------------------------------------|----------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | Arbitrary | 1 | Axis No. + 1 (01 _H to 10 _H) |
| Function code [H] | 03 | 1 | Register reading code |
| Start address [H] | Arbitrary | 2 | Refer to (2), "Start address list" |
| Number of registers [H] | Arbitrary | 2 | Refer to the start address list. |
| Error check [H] | CRC (16 bits) | 2 | |
| End | None | | Silent interval |
| Total number of bytes | | 8 | |

(4) Response format

| Field | RTU mode 8-bit data | Number of data items (number of bytes) | Remarks |
|--------------------------|------------------------|----------------------------------------------------------|--------------------------------------------------------------|
| Start | | | Silent interval |
| Slave address [H] | Arbitrary | 1 | Axis No. + 1 (01 _H to 10 _H) |
| Function code [H] | 03 | 1 | Register reading code |
| Number of data bytes [H] | | 1 | Total number of bytes of registers specified in the query |
| Data 1 [H] | | Number of bytes of register specified in the query | |
| Data 2 [H] | | Number of bytes of register specified in the query | |
| Data 3 [H] | | Number of bytes of register specified in the query | |
| Data 4 [H] | | Number of bytes of register specified in the query | |
| : | | : | |
| : | | : | |
| Error check [H] | CRC (16 bits) | 2 | Silent interval |
| End | None | | |
| Total number of bytes | | 256 max. | |

(5) Query sample

Shown below is an example for a use referring to the target position, positioning band and speed command in Position No. 1 (Address 1010_H to 1015_H) on Axis No. 0 controller.

- Query (silent intervals are inserted before and after the query)

01 03 10 10 00 06 C0 CD

| Field | RTU mode 8-bit data |
|-------------------------|-------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 03 |
| Start address [H] | 1010 |
| Number of registers [H] | 0006 (6 registers) |
| Error check [H] | C0CD (in accordance with CRC calculation) |
| End | Silent interval |

The response to the query is as follows.

- Response (silent intervals are inserted before and after the response)

01 03 0C 00 00 07 D0 00 00 1F 40 00 00 3A 98 AF C5

| Field | RTU mode 8-bit data |
|--------------------------|--------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 03 |
| Number of data bytes [H] | 0C (12 bytes = 6 registers) |
| Data 1 [H] | 00 00 07 D0 (target position query) |
| Data 2 [H] | 00 00 1F 40 (positioning band query) |
| Data 3 [H] | 00 00 3A 98 (speed command query) |
| Error check [H] | AF C5 (in accordance with CRC calculation) |
| End | Silent interval |

Target position "7D0_H" → Convert into decimal number → 2000×[unit 0.01mm]= 20.00[mm]

Positioning band "1F40_H" → Convert into decimal number → 8000×[unit 0.01mm]= 80.00[mm]

Speed command "3A98_H" → Convert into decimal number → 15000×[unit 0.01mm]= 150.00[mm]

Note If the response example is simply an example and will vary depending on various conditions.

5.3.4 Total moving count Reading <<TLMC>>

(1) Function

This bit reads the total moving count.
[Refer to Section 4.3.2(8)]

(2) Query format

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|-------------------------|-------------------------------------------|------------------------|-------------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 1 | 03 | Register reading |
| Start address [H] | 2 | 8400 | Total moving count |
| Number of registers [H] | 2 | 0002 | Reading addresses 8400 _H to 8401 _H |
| Error check [H] | 2 | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | 8 | | |

(3) Response format

A response message contains 16 bits of data per register.

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|--------------------------|-------------------------------------------|------------------------|---------------------------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 1 | 03 | Register reading |
| Number of data bytes [H] | 1 | 04 | Reading 2 registers = 4 bytes |
| Data 1 [H] | 2 | Total moving count | Total moving count(0500 _H) [Hex] (most significant digit) |
| Data 2 [H] | 2 | Total moving count | Total moving count(0501 _H) [Hex] (least significant digit) |
| Error check [H] | 2 | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | 9 | | |

(4) Query sample

A sample query that reads the total moving count (addresses 8400_H to 8401_H) of a controller with axis No. 0 is shown below.

- Query (silent intervals are inserted before and after the query)

01 03 84 00 00 02 EC FB

| Field | RTU mode 8-bit data |
|-------------------------|-------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 03 |
| Start address [H] | 8400 |
| Number of registers [H] | 0002 |
| Error check [H] | ECFB (in accordance with CRC calculation) |
| End | Silent interval |

The response to the query is as follows.

- Response (silent intervals are inserted before and after the response)

01 03 04 00 00 02 1F BA 9B

| Field | RTU mode 8-bit data |
|--------------------------|-------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 03 |
| Number of data bytes [H] | 04 (4 bytes = 2 registers) |
| Data 1 [H] | 00 00 |
| Data 2 [H] | 02 1F |
| Error check [H] | BA9B (in accordance with CRC calculation) |
| End | Silent interval |

The Total moving count is "21F_H" → Convert into decimal number → 543[times]

Note The data of the response example is simply an example and will vary depending on various conditions.

5.3.5 Total moving distance Reading <<ODOM>> (in 1 mm units)

(1) Function

This bit reads the total moving distance in units of 1m.

(2) Query format

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|-------------------------|-------------------------------------------|------------------------|-------------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 1 | 03 | Register reading |
| Start address [H] | 2 | 8402 | Total moving distance |
| Number of registers [H] | 2 | 0002 | Reading addresses 8402 _H to 8403 _H |
| Error check [H] | 2 | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | 8 | | |

(3) Response format

A response message contains 16 bits of data per register.

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|--------------------------|-------------------------------------------|------------------------|----------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 1 | 03 | Register reading |
| Number of data bytes [H] | 1 | 04 | Reading 2 registers = 4 bytes |
| Data 1 [H] | 2 | Total moving distance | Total moving distance [Hex] (most significant digit) |
| Data 2 [H] | 2 | Total moving distance | Total moving distance [Hex] (least significant digit) |
| Error check [H] | 2 | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | 9 | | |

(4) Query sample

A sample query that reads the total moving distance (addresses 8402_H to 8403_H) of a controller with axis No. 0 is shown below.

- Query (silent intervals are inserted before and after the query)

01 03 84 02 00 02 4D 3B

| Field | RTU mode 8-bit data |
|-------------------------|-------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 03 |
| Start address [H] | 8402 |
| Number of registers [H] | 0002 |
| Error check [H] | 4D3B (in accordance with CRC calculation) |
| End | Silent interval |

The response to the query is as follows.

- Response (silent intervals are inserted before and after the response)

01 03 04 00 00 40 9E 4A 5B

| Field | RTU mode 8-bit data |
|--------------------------|-------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 03 |
| Number of data bytes [H] | 04 (4 bytes = 2 registers) |
| Data 1 [H] | 00 00 |
| Data 2 [H] | 40 9E |
| Error check [H] | 4A5B (in accordance with CRC calculation) |
| End | Silent interval |

The Total moving distance is "0000409E_H" → Convert into decimal number → 16542 m

Note The data of the response example is simply an example and will vary depending on various conditions.

5.3.6 Present Time Reading <<TIMN>>

(1) Function

This bit reads the present time.

[PCON-CA/CFA/CB/CFB, ACON-CA/CB, DCON-CA/CB and SCON-CA/CAL/CB only]

(2) Query format

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|-------------------------|-------------------------------------------|------------------------|-------------------------------------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 1 | 03 | Register reading |
| Start address [H] | 2 | Refer to remarks | 841E: SCON-CA/CAL/CB 8420: PCON-CA/CFA/CB/CFB 8422: ACON-CA/CB, DCON-CA/CB |
| Number of registers [H] | 2 | 0002 | Reading addresses 8402 _H to 8403 _H |
| Error check [H] | 2 | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | 8 | | |

(3) Response format

A response message contains 16 bits of data per register.

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|--------------------------|-------------------------------------------|------------------------|-------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 1 | 03 | Register reading |
| Number of data bytes [H] | 1 | 04 | Reading 2 registers = 4 bytes |
| Data [H] | 4 | Present Time | Refer to (4) for conversion at time. |
| Error check [H] | 2 | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | 9 | | |

(4) Conversion of Read Data into Time

The read data output the current time by the setting on the controller.

- 1) For the models that are equipped with the calendar function (RTC), when RTC is set effective, it shows the time of alarm issuance.
- 2) When RTC is set ineffective or for the models that is not equipped with RTC, it shows the passed time [sec] since the power to the controller is turned on.

- 1) How present time is calculated

The data of present time shows the seconds passed from the origin time (00hr:00min:00sec 1January2000).

Passed second from the origin time is expressed with S, passed minute with M, passed hour with H, passed day with D and passed year with Y, and the calculation is conducted with a formula as shown below:

S= Data of read alarm issuance time
 M= $S/60$ (decimal fraction to be rounded down)
 H= $M/60$ (decimal fraction to be rounded down)
 D= $H/24$ (decimal fraction to be rounded down)
 Y= $D/365.25$ (decimal fraction to be rounded down)
 L (Leap year)= $Y/4$ (decimal fraction to be rounded up)

Assuming the second of time is SA, minute is MA, hour is HA, passed day in this year is DA and year is YA, the time can be calculated with a formula as shown below:

SA= Remainder of $S/60$
 MA= Remainder of $M/60$
 HA= Remainder of $H/24$
 DA= $D - (Y \times 365 + L)$

Year and day can be figured out by subtracting the number of days in each month from DA.

YA= $Y + 2000$ (A.D.)

Example) Assuming present time data is 172C1B8B_H;

[Procedure 1] Convert into decimal number: $S = 172C1B8B_H \Rightarrow 388766603$

[Procedure 2] Calculate M, H, D, Y and L.

M= $388766603/60 = 6479443$
 H= $6479443/60 = 107990$
 D= $107990/24 = 4499$
 Y= $4499/365.25 = 12$
 L= $12/4 = 3$

[Procedure 3] Figure out SA, MA, HA and DA.

SA= Remainder of $388766603/60 = 23$
 MA= Remainder of $6479443/60 = 43$
 HA= Remainder of $107990/24 = 14$
 DA= $4499 - (12 \times 365 + 3)$
 = 116 (116 days has passed in this year and the time of alarm issuance is on the day 117.)

Year and day= $117 - \{31 \text{ (Jan)} - 29 \text{ (Feb)} - 31 \text{ (Mar)}\} = 26$ (since the number becomes a negative if days in April is subtracted, the time of present is on 26April)

YA= $12 + 2000 = 2012$

As figured out with the calculation above, the present time is 14:43:23 26Apr2012.

- 2) How to Calculate Passed Time

Example) Assuming the current time data is E1B8B_H;

Convert into decimal number: $E1B8B_H \Rightarrow 924555$

Therefore, it means 924555sec (15min. 49sec. 256h) has passed since the power was turned on.

(5) Query sample

A sample query that reads the present time of PCON-CA (addresses 8420_H to 8421_H) of a controller with axis No. 0 is shown below.

- Query (silent intervals are inserted before and after the query)

01 03 84 20 00 02 ED 31

| Field | RTU mode 8-bit data |
|-------------------------|----------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 03 |
| Start address [H] | 8420 |
| Number of registers [H] | 0002 |
| Error check [H] | ED31 (in accordance with CRC calculation) |
| End | Silent interval |

The response to the query is as follows.

- Response (silent intervals are inserted before and after the response)

01 03 04 17 2C 1B 8B 74 D9

| Field | RTU mode 8-bit data |
|--------------------------|-------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 03 |
| Number of data bytes [H] | 04 (4 bytes = 2 registers) |
| Data 1 [H] | 17 2C 1B 8B |
| Error check [H] | 74D9 (in accordance with CRC calculation) |
| End | Silent interval |

Current time is 14h:43m:23s April 26, 2012.

Note The data of the response example is simply an example and will vary depending on various conditions.

5.3.7 Total FAN Driving Time Reading <<TFAN>>

(1) Function

This bit reads the Total FAN driving time (in 1 sec units)

[PCON-CFA/CFB, SCON-CAL, SCON-CB [400W or more] only]

(2) Query format

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|-------------------------|-------------------------------------------|------------------------|-----------------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 1 | 03 | Register reading |
| Start address [H] | 2 | 842E | 842A: SCON-CAL, SCON-CB [400W or more] 842E: PCON-CFA/CFB |
| Number of registers [H] | 2 | 0002 | Reading addresses 842E _H to 842F _H |
| Error check [H] | 2 | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | 8 | | |

(3) Response format

A response message contains 16 bits of data per register.

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|--------------------------|-------------------------------------------|------------------------|-----------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 1 | 03 | Register reading |
| Number of data bytes [H] | 1 | 04 | Reading 2 registers = 4 bytes |
| Data 1 [H] | 2 | Total FAN driving time | Total FAN driving time [Hex] (most significant digit) |
| Data 2 [H] | 2 | Total FAN driving time | Total FAN driving time [Hex] (least significant digit) |
| Error check [H] | 2 | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | 9 | | |

(4) Query sample

A sample query that reads the total FAN driving time (addresses 842E_H to 842F_H) of a controller with axis No. 0 is shown below.

- Query (silent intervals are inserted before and after the query)

01 03 84 2E 00 02 8C F2

| Field | RTU mode 8-bit data |
|-------------------------|-------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 03 |
| Start address [H] | 842E |
| Number of registers [H] | 0002 |
| Error check [H] | 8CF2 (in accordance with CRC calculation) |
| End | Silent interval |

The response to the query is as follows.

- Response (silent intervals are inserted before and after the response)

01 03 04 00 00 02 AF BB 2F

| Field | RTU mode 8-bit data |
|--------------------------|-------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 03 |
| Number of data bytes [H] | 04 (4 bytes = 2 registers) |
| Data 1 [H] | 00 00 |
| Data 2 [H] | 02 AF |
| Error check [H] | BB2F (in accordance with CRC calculation) |
| End | Silent interval |

The total FAN driving time is "000002AF_H" → Convert into decimal number → 687[sec]

Note The data of the response example is simply an example and will vary depending on various conditions.

5.3.8 Current Position Reading <<PNOW>> (in 0.01 mm units)

(1) Function

This bit reads the current position in units of 0.01 mm. The sign is effective.

(2) Query format

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|-------------------------|-------------------------------------------|------------------------|-------------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 1 | 03 | Register reading |
| Start address [H] | 2 | 9000 | Current position monitor |
| Number of registers [H] | 2 | 0002 | Reading addresses 9000 _H to 9001 _H |
| Error check [H] | 2 | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | 8 | | |

(3) Response format

A response message contains 16 bits of data per register.

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|--------------------------|-------------------------------------------|-------------------------------------------------|----------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 1 | 03 | Register reading |
| Number of data bytes [H] | 1 | 04 | Reading 2 registers = 4 bytes |
| Data 1 [H] | 2 | In accordance with the current position data | Current position data [Hex] (most significant digit) |
| Data 2 [H] | 2 | In accordance with the current position data | Current position data [Hex] (least significant digit) |
| Error check [H] | 2 | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | 9 | | |

(4) Query sample

A sample query that reads the current position (addresses 9000_H to 9001_H) of a controller with axis No. 0 is shown below.

- Query (silent intervals are inserted before and after the query)

01 03 90 00 00 02 E9 0B

| Field | RTU mode 8-bit data |
|-------------------------|-------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 03 |
| Start address [H] | 9000 |
| Number of registers [H] | 0002 |
| Error check [H] | E90B (in accordance with CRC calculation) |
| End | Silent interval |

The response to the query is as follows.

- Response (silent intervals are inserted before and after the response)

01 03 04 00 00 0B FE 7C 83

| Field | RTU mode 8-bit data |
|--------------------------|-------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 03 |
| Number of data bytes [H] | 04 (4 bytes = 2 registers) |
| Data 1 [H] | 00 00 |
| Data 2 [H] | 0B FE |
| Error check [H] | 7C83 (in accordance with CRC calculation) |
| End | Silent interval |

The current position is "00000BFE_H" → Convert into decimal number → 3070 (× 0.01 mm) →

The current position is 30.7 mm.

Example 2) : If the current position is read "FFFFFFF5_H" (negative position) →

FFFFFFF_H – FFFFFFF5_H + 1 (make sure to add 1) →

Convert into decimal number → 11 (× 0.01 mm) →

The current position is -0.11 mm

Note The data of the response example is simply an example and will vary depending on various conditions.

5.3.9 Present Alarm Code Reading <<ALMC>>

(1) Function

This query reads the code indicating the normal status or alarm status (cold start level, operation cancellation level and message level) of the controller.

In the normal status, 00_H is stored.

[For details on alarm codes, refer to the operation manual for each controller.]

(2) Query format

| Field | Number of data items (number of bytes) | RTU mode 8-bits data | Remarks |
|-------------------------|-------------------------------------------|-------------------------|-------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 1 | 03 | Register reading |
| Start address [H] | 2 | 9002 | Present alarm code |
| Number of registers [H] | 2 | 0001 | Reading address 9002 _H |
| Error check [H] | 2 | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | 8 | | |

(3) Response format

A response message contains 16 bits of data per register.

| Field | Number of data items (number of bytes) | RTU mode 8-bits data | Remarks |
|--------------------------|-------------------------------------------|-------------------------|-------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 1 | 03 | Register reading |
| Number of data bytes [H] | 1 | 02 | Reading 1 register = 2 bytes |
| Data 1 [H] | 2 | Alarm code | Alarm code [Hex] |
| Error check [H] | 2 | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | 7 | | |

(4) Query sample

A sample query that reads the alarm code (address 9002_H) of a controller with axis No. 0 is shown below.

- Query (silent intervals are inserted before and after the query)

01 03 90 02 00 01 08 CA

| Field | RTU mode 8-bit data |
|-------------------------|-------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 03 |
| Start address [H] | 9002 |
| Number of registers [H] | 0001 |
| Error check [H] | 08CA (in accordance with CRC calculation) |
| End | Silent interval |

The response to the query is as follows.

- Response (silent intervals are inserted before and after the response)

01 03 02 00 E8 B8 0A

| Field | RTU mode 8-bit data |
|--------------------------|-------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 03 |
| Number of data bytes [H] | 02 (2 bytes = 1 register) |
| Data 1 [H] | 00 E8 |
| Error check [H] | B80A (in accordance with CRC calculation) |
| End | Silent interval |

The most important alarm presently detected is "0E8"_H, which is a phase A/B open alarm. [For details on alarm codes, refer to the operation manual that comes with each controller.]

Note The data of the response example is simply an example and will vary depending on various conditions.

5.3.10 I/O Port Input Signal Status Reading <<DIPM>>

(1) Function

This query reads the port input value of the RC controller regardless of the PIO pattern.
The status of the port to which a signal is currently input as recognized by the RC controller is read.

(2) Query format

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|-------------------------|-------------------------------------------|------------------------|-------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 1 | 03 | Register reading |
| Start address [H] | 2 | 9003 | Input port monitor register |
| Number of registers [H] | 2 | 0001 | Reading address 9003 _H |
| Error check [H] | 2 | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | 8 | | |

(3) Response format

A response message contains 16 bits of data per address.

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|--------------------------|-------------------------------------------|------------------------|-------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 1 | 03 | Register reading |
| Number of data bytes [H] | 1 | 02 | Reading 1 register = 2 bytes |
| Data 1 [H] | 2 | Port input value | Port input value [Hex] |
| Error check [H] | 2 | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | 7 | | |

(4) Query sample

A sample query that reads the current position (address 9003_H) of a controller with axis No. 0 is shown below.

- Query (silent intervals are inserted before and after the query)

01 03 90 03 00 01 59 0A

| Field | RTU mode 8-bit data |
|-------------------------|----------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 03 |
| Start address [H] | 9003 |
| Number of registers [H] | 0001 |
| Error check [H] | 590A (in accordance with CRC calculation) |
| End | Silent interval |

The response to the query is as follows.

- Response (silent intervals are inserted before and after the response)

01 03 02 90 00 D4 44

| Field | RTU mode 8-bit data |
|--------------------------|-------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 03 |
| Number of data bytes [H] | 02 (2 bytes = 1 register) |
| Data 1 [H] | 90 00 |
| Error check [H] | D444 (in accordance with CRC calculation) |
| End | Silent interval |

The input data area address is "9000"_H, → Convert into binary number

“1001000000000000.”

↑ ↑
INT15 ----- INT 1

Note The data of the response example is simply an example and will vary depending on various conditions.

- (5) **Port assignment** [For details, refer to the operation manual that comes with each RC controller]
 Write the port assignment of PIO patterns to each RC controller.
 0 indicates that response data is always 0.

| | PCON-C/CF/CA/CFA/CB/CFB | | | | | | Other than PCON-C/CF | |
|------|-------------------------|---------------|-------|-------|------|------|----------------------|------|
| | PIO pattern | | | | | | (Pulse Train Mode) | |
| Port | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 |
| IN0 | PC1 | PC1 | PC1 | PC1 | ST0 | ST0 | SON | SON |
| IN1 | PC2 | PC2 | PC2 | PC2 | ST1 | ST1 | RES | RES |
| IN2 | PC4 | PC4 | PC4 | PC4 | ST2 | ST2 | HOME | HOME |
| IN3 | PC8 | PC8 | PC8 | PC8 | ST3 | 0 | TL | TL |
| IN4 | PC16 | PC16 | PC16 | PC16 | ST4 | 0 | CSTP | CSTP |
| IN5 | PC32 | PC32 | PC32 | PC32 | ST5 | 0 | DCLR | DCLR |
| IN6 | 0 | MODE | PC64 | PC64 | ST6 | 0 | BKRL | BKRL |
| IN7 | 0 | JISL | PC128 | PC128 | 0 | 0 | RMOD | RMOD |
| IN8 | 0 | JOG+ | 0 | PC256 | 0 | 0 | 0 | RSTR |
| IN9 | BKRL | JOG- | BKRL | BKRL | BKRL | BKRL | 0 | 0 |
| IN10 | RMOD | RMOD | RMOD | RMOD | RMOD | RMOD | 0 | 0 |
| IN11 | HOME | HOME | HOME | HOME | HOME | 0 | 0 | 0 |
| IN12 | *STP | *STP | *STP | *STP | *STP | 0 | 0 | 0 |
| IN13 | CSTR | CSTR/ PWRT | CSTR | CSTR | 0 | 0 | 0 | 0 |
| IN14 | RES | RES | RES | RES | RES | RES | 0 | 0 |
| IN15 | SON | SON | SON | SON | SON | SON | 0 | 0 |

| | PCON-CYB | | | | | | PCON-PLB/POB | | PCON-PL/PO | |
|-------------------|-------------|-----|-----|------|------|-------------------------------|--------------|------|-------------|--------------|
| | PIO pattern | | | | | | PIO pattern | | PIO pattern | |
| Port | 0 | 1 | 2 | 3 | 4 | 5 | 0 | 1 | 0 | 1 |
| IN0 | PC1 | ST0 | ST0 | ST0 | ST0 | A Selected Number (Note 1) | SON | SON | SON | SON |
| IN1 | PC2 | ST1 | ST1 | 0 | ST1 | | RES | RES | TL | TL |
| IN2 | PC4 | ST2 | ST2 | 0 | ASTR | | HOME | HOME | HOME | HOME |
| IN3 | PC8 | ST3 | 0 | 0 | 0 | | TL | TL | RES | RES/ DCLR |
| IN4 | HOME | ST4 | SON | SON | SON | | CSTP | CSTP | 0 | 0 |
| IN5 | *STR | ST5 | 0 | *STR | *STR | | DCLR | DCLR | 0 | 0 |
| IN6 | CSTR | ST6 | 0 | 0 | 0 | | BKRL | BKRL | 0 | 0 |
| IN7 | RES | RES | RES | RES | RES | | 0 | RSTR | 0 | 0 |
| IN8 to IN15 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |

(Note 1) Any number can be selected for those except for Command Position Number Signal and CSTR Signal.

[Refer to PCON-CYB/PLB/POB Operation Manual (ME0353).]

| | ACON-C/CA/CB, DCON-C/CA/CB | | | | | | Other than ACON-C/CF | |
|------|----------------------------|---------------|-------|-------|------|------|-------------------------|------|
| | PIO pattern | | | | | | (Pulse Train Mode) | |
| Port | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 |
| IN0 | PC1 | PC1 | PC1 | PC1 | ST0 | ST0 | SON | SON |
| IN1 | PC2 | PC2 | PC2 | PC2 | ST1 | ST1 | RES | RES |
| IN2 | PC4 | PC4 | PC4 | PC4 | ST2 | ST2 | HOME | HOME |
| IN3 | PC8 | PC8 | PC8 | PC8 | ST3 | 0 | TL | TL |
| IN4 | PC16 | PC16 | PC16 | PC16 | ST4 | 0 | CSTP | CSTP |
| IN5 | PC32 | PC32 | PC32 | PC32 | ST5 | 0 | DCLR | DCLR |
| IN6 | 0 | MODE | PC64 | PC64 | ST6 | 0 | BKRL | BKRL |
| IN7 | 0 | JISL | PC128 | PC128 | 0 | 0 | RMOD | RMOD |
| IN8 | 0 | JOG+ | 0 | PC256 | 0 | 0 | 0 | RSTR |
| IN9 | BKRL | JOG- | BKRL | BKRL | BKRL | BKRL | 0 | 0 |
| IN10 | RMOD | RMOD | RMOD | RMOD | RMOD | RMOD | 0 | 0 |
| IN11 | HOME | HOME | HOME | HOME | HOME | 0 | 0 | 0 |
| IN12 | *STP | *STP | *STP | *STP | *STP | 0 | 0 | 0 |
| IN13 | CSTR | CSTR/ PWRT | CSTR | CSTR | 0 | 0 | 0 | 0 |
| IN14 | RES | RES | RES | RES | RES | RES | 0 | 0 |
| IN15 | SON | SON | SON | SON | SON | SON | 0 | 0 |

| | ACON-CYB, DCON-CYB | | | | | | ACON, DCON -PLB/POB | | ACON-PL/PO | |
|-------------------|--------------------|-----|-----|------|------|-------------------------------|------------------------|------|-------------|--------------|
| | PIO pattern | | | | | | PIO pattern | | PIO pattern | |
| Port | 0 | 1 | 2 | 3 | 4 | 5 | 0 | 1 | 0 | 1 |
| IN0 | PC1 | ST0 | ST0 | ST0 | ST0 | A Selected Number (Note 1) | SON | SON | SON | SON |
| IN1 | PC2 | ST1 | ST1 | 0 | ST1 | | RES | RES | TL | TL |
| IN2 | PC4 | ST2 | ST2 | 0 | ASTR | | HOME | HOME | HOME | HOME |
| IN3 | PC8 | ST3 | 0 | 0 | 0 | | TL | TL | RES | RES/ DCLR |
| IN4 | HOME | ST4 | SON | SON | SON | | CSTP | CSTP | 0 | 0 |
| IN5 | *STR | ST5 | 0 | *STR | *STR | | DCLR | DCLR | 0 | 0 |
| IN6 | CSTR | ST6 | 0 | 0 | 0 | | BKRL | BKRL | 0 | 0 |
| IN7 | RES | RES | RES | RES | RES | | 0 | RSTR | 0 | 0 |
| IN8 to IN15 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |

(Note 1) Any number can be selected for those except for Command Position Number Signal and CSTR Signal.

[Refer to ACON-CYB/PLB/POB and DCON-CYB/PLB/POB Operation Manual (ME0354).]

| | SCON-C/CA/CAL/CB | | | | | | SCON-CA/CB | | SCON-C/CA/CB | |
|------|------------------|---------------|-------|-------|------|------|------------|------|--------------------|-----------------------|
| | PIO pattern | | | | | | | | (Pulse Train Mode) | |
| Port | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 0 | 1 ^(Note 1) |
| IN0 | PC1 | PC1 | PC1 | PC1 | ST0 | ST0 | PC1 | ST0 | SON | SON |
| IN1 | PC2 | PC2 | PC2 | PC2 | ST1 | ST1 | PC2 | ST1 | RES | RES |
| IN2 | PC4 | PC4 | PC4 | PC4 | ST2 | ST2 | PC4 | ST2 | HOME | HOME |
| IN3 | PC8 | PC8 | PC8 | PC8 | ST3 | 0 | PC8 | ST3 | TL | TL |
| IN4 | PC16 | PC16 | PC16 | PC16 | ST4 | 0 | PC16 | ST4 | CSTP | CSTP |
| IN5 | PC32 | PC32 | PC32 | PC32 | ST5 | 0 | 0 | 0 | DCLR | DCLR |
| IN6 | 0 | MODE | PC64 | PC64 | ST6 | 0 | 0 | 0 | BKRL | BKRL |
| IN7 | 0 | JISL | PC128 | PC128 | 0 | 0 | 0 | 0 | RMOD | RMOD |
| IN8 | 0 | JOG+ | 0 | PC256 | 0 | 0 | CLBR | CLBR | 0 | RSTR |
| IN9 | BKRL | JOG- | BKRL | BKRL | BKRL | BKRL | BKRL | BKRL | 0 | 0 |
| IN10 | RMOD | RMOD | RMOD | RMOD | RMOD | RMOD | RMOD | RMOD | 0 | 0 |
| IN11 | HOME | HOME | HOME | HOME | HOME | 0 | HOME | HOME | 0 | 0 |
| IN12 | *STP | *STP | *STP | *STP | *STP | 0 | *STP | *STP | 0 | 0 |
| IN13 | CSTR | CSTR/ PWRT | CSTR | CSTR | 0 | 0 | CSTR | 0 | 0 | 0 |
| IN14 | RES | RES | RES | RES | RES | RES | RES | RES | 0 | 0 |
| IN15 | SON | SON | SON | SON | SON | SON | SON | SON | 0 | 0 |

(Note 1) This mode is not equipped in SCON-C/CA.

| | SCON-CB | ERC2 (PIO Type) | | | | ERC3 (PIO Type) | | |
|------|----------------|-----------------|------|------|------|-----------------|------|------|
| | Servo press | PIO pattern | | | | PIO pattern | | |
| Port | - | 0 | 1 | 2 | 3 | 0 | 1 | 2 |
| IN0 | PC1 | PC1 | ST0 | PC1 | PC1 | PC1 | ST0 | PC1 |
| IN1 | PC2 | PC2 | ST1 | PC2 | PC2 | PC2 | ST1 | PC2 |
| IN2 | PC4 | PC4 | ST2 | PC4 | PC4 | PC4 | ST2 | PC4 |
| IN3 | PC8 | HOME | 0 | PC8 | PC8 | HOME | 0 | PC8 |
| IN4 | PC16 | CSTR | RES | CSTR | CSTR | CSTR | RES | CSTR |
| IN5 | PC32 | *STP | *STP | *STP | *STP | *STP | *STP | *STP |
| IN6 | PSTR | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| IN7 | RHOM | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| IN8 | ENMV | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| IN9 | FPST | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| IN10 | CLBR | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| IN11 | BKRL | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| IN12 | RMOD | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| IN13 | HOME | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| IN14 | RES | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| IN15 | SON | 0 | 0 | 0 | 0 | 0 | 0 | 0 |

5.3.11 I/O Port Output Signal Status Reading<<DOPM>>

(1) Function

This query reads the port output value of the RC controller regardless of the PIO pattern.

(2) Query format

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|-------------------------|-------------------------------------------|------------------------|-------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 1 | 03 | Register reading |
| Start address [H] | 2 | 9004 | Output port monitor register |
| Number of registers [H] | 2 | 0001 | Reading addresses 9004 _H |
| Error check [H] | 2 | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | 8 | | |

(3) Response format

A response message contains 16 bits of data per register.

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|--------------------------|-------------------------------------------|------------------------|-------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 1 | 03 | Register reading |
| Number of data bytes [H] | 1 | 02 | Reading 1 register = 2 bytes |
| Data 1 [H] | 2 | D0 output value | Port output value [Hex] |
| Error check [H] | 2 | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | 7 | | |

(4) Query sample

A sample query that output port (address 9004_H) of a controller of axis No. 0 is shown below.

- Query (silent intervals are inserted before and after the query)

01 03 90 04 00 01 E8 CB

| Field | RTU mode 8-bit data |
|-------------------------|----------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 03 |
| Start address [H] | 9004 |
| Number of registers [H] | 0001 |
| Error check [H] | E8CB (in accordance with CRC calculation) |
| End | Silent interval |

The response to the query is as follows.

- Response (silent intervals are inserted before and after the response)

01 03 02 68 00 97 84

| Field | RTU mode 8-bit data |
|--------------------------|-------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 03 |
| Number of data bytes [H] | 02 (2 bytes = 1 register) |
| Data 1 [H] | 68 00 |
| Error check [H] | 9784 (in accordance with CRC calculation) |
| End | Silent interval |

The input data area address is "6800"_H, → Convert into binary number

“0110100000000000.”

↑ ↑

INT15 ----- INT 1

Note The data of the response example is simply an example and will vary depending on various conditions.

- (5) **Port assignment** [For details, refer to the operation manual that comes with each RC controller.]
Write the port assignment of PIO patterns to each RC controller.
0 indicates that response data is always 0.

| | PCON-C/CF/CA/CFA/CB/CFB | | | | | | Other than PCON-C/CF | |
|-------------------|-------------------------|-----------------|-------------------------|-------------------------|-------------------------|-----------------|----------------------|-------|
| | PIO pattern | | | | | | (Pulse Train Mode) | |
| Port | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 |
| OUT0 | PM1 | PM1 | PM1 | PM1 | PE0 | LS0 | PWR | PWR |
| OUT1 | PM2 | PM2 | PM2 | PM2 | PE1 | LS1 | SV | SV |
| OUT2 | PM4 | PM4 | PM4 | PM4 | PE2 | LS2 | INP | INP |
| OUT3 | PM8 | PM8 | PM8 | PM8 | PE3 | 0 | HEND | HEND |
| OUT4 | PM16 | PM16 | PM16 | PM16 | PE4 | 0 | TLR | TLR |
| OUT5 | PM32 | PM32 | PM32 | PM32 | PE5 | 0 | *ALM | *ALM |
| OUT6 | MOVE | MOVE | PM64 | PM64 | PE6 | 0 | *EMGS | *EMGS |
| OUT7 | ZONE1 | MODES | PM128 | PM128 | ZONE1 | ZONE1 | RMDS | RMDS |
| OUT8 | PZONE/ ZONE2 | PZONE/ ZONE1 | PZONE/ ZONE1 | PM256 | PZONE/ ZONE2 | PZONE/ ZONE2 | ALM1 | ALM1 |
| OUT9 | RMDS | RMDS | RMDS | RMDS | RMDS | RMDS | ALM2 | ALM2 |
| OUT10 | HEND | HEND | HEND | HEND | HEND | HEND | ALM4 | ALM4 |
| OUT11 | PEND | PEND/ WEND | PEND | PEND | PEND | 0 | ALM8 | ALM8 |
| OUT12 | SV | SV | SV | SV | SV | SV | *ALML | *ALML |
| OUT13 | *EMGS | *EMGS | *EMGS | *EMGS | *EMGS | *EMGS | 0 | REND |
| OUT14 | *ALM | *ALM | *ALM | *ALM | *ALM | *ALM | ZONE1 | ZONE1 |
| OUT15 (Note 1) | LOAD/ TRQS/ *ALML | *ALML | LOAD/ TRQS/ *ALML | LOAD/ TRQS/ *ALML | LOAD/ TRQS/ *ALML | *ALML | ZONE2 | ZONE2 |

(Note 1) Signals available for output may differ depending on models.
Refer to an instruction manual for each controller for detail.

| | PCON-CYB | | | | | | PCON-PLB/POB | | PCON-PL/PO | |
|---------------------|-----------------|------|-----------------|-----------------|-----------------|-------------------------------|--------------|-----------|-------------|-------------|
| | PIO pattern | | | | | | PIO pattern | | PIO pattern | |
| Port | 0 | 1 | 2 | 3 | 4 | 5 | 0 | 1 | 0 | 1 |
| OUT0 | PM1 | PE0 | LS0 | LS0/ PE0 | LS0/ PE0 | A Selected Number (Note 2) | PWR | PWR | SV | SV |
| OUT1 | PM2 | PE1 | LS1 | LS1/ PE1 | LS1/ PE1 | | SV | SV | INP | INP/ TLR |
| OUT2 | PM4 | PE2 | LS2 | PSFL | PSFL | | INP | INP | HEND | HEND |
| OUT3 | PM8 | PE3 | HEND | HEND | HEND | | HEND | HEND | *ALM | *ALM |
| OUT4 | HEND | PE4 | SV | SV | SV | | TLR | TLR | 0 | 0 |
| OUT5 | PZONE/ ZONE1 | PE5 | PZONE/ ZONE1 | PZONE/ ZONE1 | PZONE/ ZONE1 | | ZONE 1 | ZONE 1 | 0 | 0 |
| OUT6 | PEND | PE6 | *ALML | *ALML | *ALML | | *ALML | REND | 0 | 0 |
| OUT7 | *ALM | *ALM | *ALM | *ALM | *ALM | | *ALM | *ALM | 0 | 0 |
| OUT8 to OUT15 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |

(Note 2) Any number can be selected for those except for Complete Position Number Signal and PEND Signal.

[Refer to PCON-CYB/PLB/POB Operation Manual (ME0353).]

| | ACON-C/CA/CB, DCON-C/CA/CB | | | | | | Other than ACON-C/CF | |
|-------------------|----------------------------|-----------------|-----------------|-----------------|-----------------|-----------------|-------------------------|-------|
| | PIO pattern | | | | | | (Pulse Train Mode) | |
| Port | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 |
| OUT0 | PM1 | PM1 | PM1 | PM1 | PE0 | LS0 | PWR | PWR |
| OUT1 | PM2 | PM2 | PM2 | PM2 | PE1 | LS1 | SV | SV |
| OUT2 | PM4 | PM4 | PM4 | PM4 | PE2 | LS2 | INP | INP |
| OUT3 | PM8 | PM8 | PM8 | PM8 | PE3 | 0 | HEND | HEND |
| OUT4 | PM16 | PM16 | PM16 | PM16 | PE4 | 0 | TLR | TLR |
| OUT5 | PM32 | PM32 | PM32 | PM32 | PE5 | 0 | *ALM | *ALM |
| OUT6 | MOVE | MOVE | PM64 | PM64 | PE6 | 0 | *EMGS | *EMGS |
| OUT7 | ZONE1 | MODES | PM128 | PM128 | ZONE1 | ZONE1 | RMDS | RMDS |
| OUT8 | PZONE/ ZONE2 | PZONE/ ZONE1 | PZONE/ ZONE1 | PM256 | PZONE/ ZONE2 | PZONE/ ZONE2 | ALM1 | ALM1 |
| OUT9 | RMDS | RMDS | RMDS | RMDS | RMDS | RMDS | ALM2 | ALM2 |
| OUT10 | HEND | HEND | HEND | HEND | HEND | HEND | ALM4 | ALM4 |
| OUT11 | PEND | PEND/ WEND | PEND | PEND | PEND | 0 | ALM8 | ALM8 |
| OUT12 | SV | SV | SV | SV | SV | SV | *ALML | *ALML |
| OUT13 | *EMGS | *EMGS | *EMGS | *EMGS | *EMGS | *EMGS | 0 | REND |
| OUT14 | *ALM | *ALM | *ALM | *ALM | *ALM | *ALM | ZONE1 | ZONE1 |
| OUT15 (Note 1) | *BALM/ *ALML | *BALM/ *ALML | *BALM/ *ALML | *BALM/ *ALML | *BALM/ *ALML | *BALM/ *ALML | ZONE2 | ZONE2 |

(Note 1) Signals available for output may differ depending on models.
Refer to an instruction manual for each controller for detail.

| | ACON-CYB, DCON-CYB | | | | | | ACON, DCON -PLB/POB | | ACON-PL/PO | |
|---------------------|--------------------|------|-----------------|-----------------|-----------------|-------------------------------|------------------------|-----------|-------------|-------------|
| | PIO pattern | | | | | | PIO pattern | | PIO pattern | |
| Port | 0 | 1 | 2 | 3 | 4 | 5 | 0 | 1 | 0 | 1 |
| OUT0 | PM1 | PE0 | LS0 | LS0/ PE0 | LS0/ PE0 | A Selected Number (Note 2) | PWR | PWR | SV | SV |
| OUT1 | PM2 | PE1 | LS1 | LS1/ PE1 | LS1/ PE1 | | SV | SV | INP | INP/ TLR |
| OUT2 | PM4 | PE2 | LS2 | PSFL | PSFL | | INP | INP | HEND | HEND |
| OUT3 | PM8 | PE3 | HEND | HEND | HEND | | HEND | HEND | *ALM | *ALM |
| OUT4 | HEND | PE4 | SV | SV | SV | | TLR | TLR | 0 | 0 |
| OUT5 | PZONE/ ZONE1 | PE5 | PZONE/ ZONE1 | PZONE/ ZONE1 | PZONE/ ZONE1 | | ZONE 1 | ZONE 1 | 0 | 0 |
| OUT6 | PEND | PE6 | *ALML | *ALML | *ALML | | *ALML | REND | 0 | 0 |
| OUT7 | *ALM | *ALM | *ALM | *ALM | *ALM | | *ALM | *ALM | 0 | 0 |
| OUT8 to OUT15 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |

(Note 2) Any number can be selected for those except for Complete Position Number Signal and PEND Signal.

[Refer to ACON-CYB/PLB/POB and DCON-CYB/PLB/POB Operation Manual (ME0354).]

| | SCON-C/CA/CAL/CB | | | | | | SCON-CA/CB | | SCON-C/CA/CB | |
|-------|------------------|-----------------|-----------------|-------|-----------------|-----------------|-----------------|-----------------|----------------------------------------|-----------------------|
| | PIO pattern | | | | | | | | (Pulse Train Mode) | |
| Port | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 0 | 1 ^(Note 1) |
| OUT0 | PM1 | PM1 | PM1 | PM1 | PE0 | LS0 | PM1 | PE0 | PWR | PWR |
| OUT1 | PM2 | PM2 | PM2 | PM2 | PE1 | LS1 | PM2 | PE1 | SV | SV |
| OUT2 | PM4 | PM4 | PM4 | PM4 | PE2 | LS2 | PM4 | PE2 | INP | INP |
| OUT3 | PM8 | PM8 | PM8 | PM8 | PE3 | 0 | PM8 | PE3 | HEND | HEND |
| OUT4 | PM16 | PM16 | PM16 | PM16 | PE4 | 0 | PM16 | PE4 | TLR | TLR |
| OUT5 | PM32 | PM32 | PM32 | PM32 | PE5 | 0 | TRQS | TRQS | *ALM | *ALM |
| OUT6 | MOVE | MOVE | PM64 | PM64 | PE6 | 0 | LOAD | LOAD | *EMGS | *EMGS |
| OUT7 | ZONE1 | MODES | PM128 | PM128 | ZONE1 | ZONE1 | CEND | CEND | RMDS | RMDS |
| OUT8 | PZONE/ ZONE2 | PZONE/ ZONE1 | PZONE/ ZONE1 | PM256 | PZONE/ ZONE2 | PZONE/ ZONE2 | PZONE/ ZONE1 | PZONE/ ZONE1 | ALM1 | ALM1 |
| OUT9 | RMDS | RMDS | RMDS | RMDS | RMDS | RMDS | RMDS | RMDS | ALM2 | ALM2 |
| OUT10 | HEND | HEND | HEND | HEND | HEND | HEND | HEND | HEND | ALM4 | ALM4 |
| OUT11 | PEND | PEND/ WEND | PEND | PEND | PEND | 0 | PEND | PEND | ALM8 | ALM8 |
| OUT12 | SV | SV | SV | SV | SV | SV | SV | SV | *OVLW/ *ALML ^(Note 2) | *OVLW/ *ALML |
| OUT13 | *EMGS | *EMGS | *EMGS | *EMGS | *EMGS | *EMGS | *EMGS | *EMGS | 0 | REND |
| OUT14 | *ALM | *ALM | *ALM | *ALM | *ALM | *ALM | *ALM | *ALM | ZONE1 | ZONE1 |
| OUT15 | *BALM | *BALM | *BALM | *BALM | *BALM | *BALM | *BALM | *BALM | ZONE2 | ZONE2 |

(Note 1) This mode is not equipped in SCON-C/CA.

(Note 2) SCON-C is not equipped with *OVLW and *ALML outputs.

| | SCON-CB | ERC2 (PIO Type) | | | | ERC3 (PIO Type) | | |
|-------|-----------------|-----------------|------|------|------|-----------------|------|-----------------|
| | Servo press | PIO pattern | | | | PIO pattern | | |
| Port | - | 0 | 1 | 2 | 3 | 0 | 1 | 2 |
| OUT0 | PCMP | PEND | PE0 | PEND | PEND | PEND | PE0 | PEND |
| OUT1 | PRUN | HEND | PE1 | HEND | HEND | HEND | PE1 | HEND |
| OUT2 | PORG | ZONE | PE2 | ZONE | ZONE | ZONE1 | PE2 | PZONE/ ZONE1 |
| OUT3 | APRC | *ALM | *ALM | *ALM | *ALM | *ALM | *ALM | *ALM |
| OUT4 | SERC | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| OUT5 | PRSS | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| OUT6 | PSTP | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| OUT7 | MPHM | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| OUT8 | JDOK | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| OUT9 | JDNG | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| OUT10 | CEND | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| OUT11 | RMDS | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| OUT12 | HEND | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| OUT13 | SV | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| OUT14 | *ALM | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| OUT15 | *ALML (Note) | 0 | 0 | 0 | 0 | 0 | 0 | 0 |

5.3.12 Controller Status Signal Reading 1 <<DSS1>>

(1) Function

This bit reads the internal status of the controller.

[Refer to 4.3.2 (12), "Data of device status register 1."]

(2) Query format

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|-------------------------|-------------------------------------------|------------------------|-------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 1 | 03 | Register reading |
| Start address [H] | 2 | 9005 | Device status register 1 |
| Number of registers [H] | 2 | 0001 | Reading address 9005 _H |
| Error check [H] | 2 | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | 8 | | |

(3) Response format

A response message contains 16 bits of data per address.

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|--------------------------|-------------------------------------------|------------------------|-------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 1 | 03 | Register reading |
| Number of data bytes [H] | 1 | 02 | Reading 1 register = 2 bytes |
| Data [H] | 2 | Status 1 | Status 1 [Hex] |
| Error check [H] | 2 | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | 7 | | |

(4) Query sample

A sample query that reads the device status (address 9005_H) of a controller with axis No. 0 is shown below.

- Query (silent intervals are inserted before and after the query)

01 03 90 05 00 01 B9 0B

| Field | RTU mode 8-bit data |
|-------------------------|----------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 03 |
| Start address [H] | 9005 |
| Number of registers [H] | 0001 |
| Error check [H] | B90B (in accordance with CRC calculation) |
| End | Silent interval |

The response to the query is as follows.

- Response (silent intervals are inserted before and after the response)

01 03 02 70 98 9C 2E

| Field | RTU mode 8-bit data |
|--------------------------|-------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 03 |
| Number of data bytes [H] | 02 (2 bytes = 1 register) |
| Data 1 [H] | 70 98 |
| Error check [H] | 9C2E (in accordance with CRC calculation) |
| End | Silent interval |

Note The data of the response example is simply an example and will vary depending on various conditions.

5.3.13 Controller Status Signal Reading 2 <<DSS2>>

(1) Function

This bit reads the internal status of the controller.

[Refer to 4.3.2 (13), "Data of device status register 2."]

(2) Query format

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|-------------------------|-------------------------------------------|------------------------|-------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 1 | 03 | Register reading |
| Start address [H] | 2 | 9006 | Device status register 2 |
| Number of registers [H] | 2 | 0001 | Reading address 9006 _H |
| Error check [H] | 2 | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | 8 | | |

(3) Response format

A response message contains 16 bits of data per register.

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|--------------------------|-------------------------------------------|------------------------|-------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 1 | 03 | Internal status of controller |
| Number of data bytes [H] | 1 | 02 | Reading 1 register = 2 bytes |
| Data [H] | 2 | Status 2 | Status 2 [Hex] |
| Error check [H] | 2 | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | 7 | | |

(4) Query sample

A sample query that reads the device status (address 9006_H) of a controller with axis No. 0 is shown below.

- Query (silent intervals are inserted before and after the query)

01 03 90 06 00 01 49 0B

| Field | RTU mode 8-bit data |
|-------------------------|----------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 03 |
| Start address [H] | 9006 |
| Number of registers [H] | 0001 |
| Error check [H] | 490B (in accordance with CRC calculation) |
| End | Silent interval |

The response to the query is as follows.

- Response (silent intervals are inserted before and after the response)

01 03 02 80 00 D9 84

| Field | RTU mode 8-bit data |
|--------------------------|-------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 03 |
| Number of data bytes [H] | 02 (2 bytes = 1 register) |
| Data 1 [H] | 80 00 |
| Error check [H] | D984 (in accordance with CRC calculation) |
| End | Silent interval |

Note The data of the response example is simply an example and will vary depending on various conditions.

5.3.14 Controller Status Signal Reading 3 <<DSSE>>

(1) Function

This bit reads internal status (expansion device) of the controller.
[Refer to 4.3.2 (14), "Data of expansion device status register."]

(2) Query format

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|-------------------------|-------------------------------------------|------------------------|-------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 1 | 03 | Register reading |
| Start address [H] | 2 | 9007 | Expansion device status register |
| Number of registers [H] | 2 | 0001 | Reading address 9007 _H |
| Error check [H] | 2 | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | 8 | | |

(3) Response format

A response message contains 16 bits of data per register.

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|--------------------------|-------------------------------------------|------------------------|-------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 1 | 03 | Register reading |
| Number of data bytes [H] | 1 | 02 | Reading 1 register = 2 bytes |
| Data [H] | 2 | Expansion status | Expansion status [Hex] |
| Error check [H] | 2 | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | 7 | | |

(4) Query sample

A sample query that reads the expansion device status (address 9007_H) of a controller of axis No. 0 is shown below.

- Query (silent intervals are inserted before and after the query)

01 03 90 07 00 01 18 CB

| Field | RTU mode 8-bit data |
|-------------------------|----------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 03 |
| Start address [H] | 9007 |
| Number of registers [H] | 0001 |
| Error check [H] | 18CB (in accordance with CRC calculation) |
| End | Silent interval |

The response to the query is as follows.

- Response (silent intervals are inserted before and after the response)

01 03 02 33 C7 ED 26

| Field | RTU mode 8-bit data |
|--------------------------|-------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 03 |
| Number of data bytes [H] | 02 (2 bytes = 1 register) |
| Data 1 [H] | 33 C7 |
| Error check [H] | ED26 (in accordance with CRC calculation) |
| End | Silent interval |

Note The data of the response example is simply an example and will vary depending on various conditions.

5.3.15 Controller Status Signal Reading 4 <<STAT>>

(1) Function

This bit reads the internal operation status of the controller.
[Refer to 4.3.2 (15), "Data of system status register."]

(2) Query format

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|-------------------------|-------------------------------------------|------------------------|-------------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 1 | 03 | Register reading |
| Start address [H] | 2 | 9008 | System status register |
| Number of registers [H] | 2 | 0002 | Reading addresses 9008 _H to 9009 _H |
| Error check [H] | 2 | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | 8 | | |

(3) Response format

A response message contains 16 bits of data per register.

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|--------------------------|-------------------------------------------|------------------------|-------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 1 | 03 | Internal status of controller |
| Number of data bytes [H] | 1 | 04 | Reading 2 registers = 4 bytes |
| Data [H] | 4 | System status | System status [Hex] |
| Error check [H] | 2 | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | 9 | | |

(4) Query sample

A sample query that reads the system status (from address 9008_H) of a controller of axis No. 0 is shown below.

- Query (silent intervals are inserted before and after the query)

01 03 90 08 00 02 68 C9

| Field | RTU mode 8-bit data |
|-------------------------|----------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 03 |
| Start address [H] | 9008 |
| Number of registers [H] | 0002 |
| Error check [H] | 68C9 (in accordance with CRC calculation) |
| End | Silent interval |

The response to the query is as follows.

- Response (silent intervals are inserted before and after the response)

01 03 04 00 0C 00 17 7A 3E

| Field | RTU mode 8-bit data |
|--------------------------|-------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 03 |
| Number of data bytes [H] | 04 (4 bytes = 2 registers) |
| Data 1 [H] | 00 0C 00 17 |
| Error check [H] | 7A3E (in accordance with CRC calculation) |
| End | Silent interval |

Note The data of the response example is simply an example and will vary depending on various conditions.

5.3.16 Current Speed Reading <<VNOW>>

(1) Function

The monitored data of actual motor speed is read. The speed may be positive or negative depending on the moving direction of the actuator.

The unit is 0.01 mm/sec.

(2) Query format

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|-------------------------|-------------------------------------------|------------------------|-------------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 1 | 03 | Register reading |
| Start address [H] | 2 | 900A | Current speed monitor |
| Number of registers [H] | 2 | 0002 | Reading addresses 900A _H to 900B _H |
| Error check [H] | 2 | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | 8 | | |

(3) Response format

A response message contains 16 bits of data per register.

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|--------------------------|-------------------------------------------|------------------------|--------------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 1 | 03 | Register reading |
| Number of data bytes [H] | 1 | 04 | Reading 2 registers = 4 bytes |
| Data [H] | 4 | Current speed | Current speed [Hex] Indicated in units of 0.01 mm/sec. |
| Error check [H] | 2 | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | 9 | | |

(4) Query sample

A sample query that reads the current speed monitor (from address 900A_H) of a controller of axis No. 0 is shown below.

- Query (silent intervals are inserted before and after the query)

01 03 90 0A 00 02 C9 09

| Field | RTU mode 8-bit data |
|-------------------------|-------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 03 |
| Start address [H] | 900A |
| Number of registers [H] | 0002 |
| Error check [H] | C909 (in accordance with CRC calculation) |
| End | Silent interval |

The response to the query is as follows.

- Response (silent intervals are inserted before and after the response)

01 03 04 00 00 03 E4 FA 88

| Field | RTU mode 8-bit data |
|--------------------------|-------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 03 |
| Number of data bytes [H] | 04 (4 bytes = 2 registers) |
| Data 1 [H] | 00 00 03 E4 |
| Error check [H] | FA88 (in accordance with CRC calculation) |
| End | Silent interval |

The current speed is "000003E4" → Convert into decimal number → 996 (× 0.01 mm/sec)

The current speed monitor is 9.96 mm/sec.

Example 2) : When the current speed reading is "FFFFFF35" (moving in the direction opposite to the example above) →

$\text{FFFFFFF}_H - \text{FFFFFF35}_H + 1$ (make sure to add 1) →

Convert into decimal number → 203 (× 0.01 mm/sec) →

The current speed is 2.03 mm/sec.

Note The data of the response example is simply an example and will vary depending on various conditions.

5.3.17 Current Ampere Reading <<CNOW>>

(1) Function

This bit reads the monitor data of the motor current (torque current command value), indicated in units of mA.

(2) Query format

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|-------------------------|-------------------------------------------|------------------------|-------------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 1 | 03 | Register reading |
| Start address [H] | 2 | 900C | Current ampere monitor |
| Number of registers [H] | 2 | 0002 | Reading addresses 900C _H to 900D _H |
| Error check [H] | 2 | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | 8 | | |

(3) Response format

A response message contains 16 bits of data per register.

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|--------------------------|-------------------------------------------|------------------------|-------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 1 | 03 | Register reading |
| Number of data bytes [H] | 1 | 04 | Reading 2 register = 4 bytes |
| Data [H] | 4 | Motor current monitor | Motor current monitor [Hex] The unit is mA. |
| Error check [H] | 2 | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | 9 | | |

(4) Query sample

A sample query that read the current ampere monitor (from address 900C_H) of a controller of axis No. 0 is shown below.

- Query (silent intervals are inserted before and after the query)

01 03 90 0C 00 02 29 08

| Field | RTU mode 8-bit data |
|-------------------------|----------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 03 |
| Start address [H] | 900C |
| Number of registers [H] | 0002 |
| Error check [H] | 2908 (in accordance with CRC calculation) |
| End | Silent interval |

The response to the query is as follows.

- Response (silent intervals are inserted before and after the response)

01 03 04 00 00 01 C8 FA 35

| Field | RTU mode 8-bit data |
|--------------------------|-------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 03 |
| Number of data bytes [H] | 04 (4 bytes = 2 registers) |
| Data 1 [H] | 00 00 01 C8 |
| Error check [H] | FA35 (in accordance with CRC calculation) |
| End | Silent interval |

The current ampere value is "000001C8" → Convert into decimal number → 456

The current ampere monitor value is 456mA.

Note The data of the response example is simply an example and will vary depending on various conditions.

5.3.18 Deviation Reading <<DEVI>>

(1) Function

This bit reads the deviation over a 1-ms period between the position command value and the feedback value (actual position). The unit is pulse. The number of pulses per one motor revolution in mechanical angle varies depending on the encoder used.

(2) Query format

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|-------------------------|-------------------------------------------|------------------------|-------------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 1 | 03 | Register reading |
| Start address [H] | 2 | 900E | Deviation monitor |
| Number of registers [H] | 2 | 0002 | Reading addresses 900E _H to 900F _H |
| Error check [H] | 2 | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | 8 | | |

(3) Response format

A response message contains 16 bits of data per register.

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|--------------------------|-------------------------------------------|------------------------|-------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 1 | 03 | Register reading |
| Number of data bytes [H] | 1 | 04 | Reading 2 registers = 4 bytes |
| Data [H] | 4 | Deviation monitor | Deviation monitor [Hex] The unit is pulse. |
| Error check [H] | 2 | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | 9 | | |

(4) Query sample

A sample query that reads the deviation monitor (from address 900E_H) of a controller of axis No. 0 is shown below.

- Query (silent intervals are inserted before and after the query)

01 03 90 0E 00 02 88 C8

| Field | RTU mode 8-bit data |
|-------------------------|----------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 03 |
| Start address [H] | 900E |
| Number of registers [H] | 0002 |
| Error check [H] | 88C8 (in accordance with CRC calculation) |
| End | Silent interval |

The response to the query is as follows.

- Response (silent intervals are inserted before and after the response)

01 03 04 00 00 00 0B BB F4

| Field | RTU mode 8-bit data |
|--------------------------|-------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 03 |
| Number of data bytes [H] | 04 (4 bytes = 2 registers) |
| Data 1 [H] | 00 00 00 0B |
| Error check [H] | BBF4 (in accordance with CRC calculation) |
| End | Silent interval |

The deviation monitor is "0000000B" → Convert into decimal number → 11

The deviation over a 1-ms period between the position command value and the feedback value (actual position) is 11 pulses.

Note The data of the response example is simply an example and will vary depending on various conditions.

5.3.19 Total Time after Power On Reading <<STIM>>

(1) Function

This bit reads the total time since the controller power was turned on. The unit is ms.
The timer value is not cleared by software reset.

(2) Query format

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|-------------------------|-------------------------------------------|------------------------|-------------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 1 | 03 | Register reading |
| Start address [H] | 2 | 9010 | System timer |
| Number of registers [H] | 2 | 0002 | Reading addresses 9010 _H to 9011 _H |
| Error check [H] | 2 | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | 8 | | |

(3) Response format

A response message contains 16 bits of data per register.

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|--------------------------|-------------------------------------------|------------------------|-------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 1 | 03 | Register reading |
| Number of data bytes [H] | 1 | 04 | Reading 2 registers = 4 bytes |
| Data [H] | 4 | System timer | System timer [Hex] The unit is ms. |
| Error check [H] | 2 | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | 9 | | |

(4) Query sample

A sample query that reads the system timer value (from address 9010_H) of a controller of axis No. 0 is shown below.

Query (silent intervals are inserted before and after the query)

01 03 90 10 00 02 E8 CE

| Field | RTU mode 8-bit data |
|-------------------------|-------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 03 |
| Start address [H] | 9010 |
| Number of registers [H] | 0002 |
| Error check [H] | E8CE (in accordance with CRC calculation) |
| End | Silent interval |

The response to the query is as follows.

Response (silent intervals are inserted before and after the response)

01 03 04 00 02 7A 72 F8 B6

| Field | RTU mode 8-bit data |
|--------------------------|-------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 03 |
| Number of data bytes [H] | 04 (4 bytes = 2 registers) |
| Data 1 [H] | 00 02 7A 72 |
| Error check [H] | F8B6 (in accordance with CRC calculation) |
| End | Silent interval |

The system timer is "00027A72" → Convert into decimal number → 162418 (ms)

The total time since the controller power was turned on is 162.418 sec.

Note The data of the response example is simply an example and will vary depending on various conditions.

5.3.20 Special Input Port Input Signal Status Reading<<SIPM>>

(1) Function

This bit reads the status of input ports other than the normal input port.

[Refer to 4.3.2 (16), "Data of special input port monitor registers" for the data input via the special input port.]

(2) Query format

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|-------------------------|-------------------------------------------|------------------------|-------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 1 | 03 | Register reading |
| Start address [H] | 2 | 9012 | Special input port monitor |
| Number of registers [H] | 2 | 0001 | Reading addresses 9012 _H |
| Error check [H] | 2 | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | 8 | | |

(3) Response format

A response message contains 16 bits of data per register.

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|--------------------------|-------------------------------------------|------------------------|-------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 1 | 03 | Register reading |
| Number of data bytes [H] | 1 | 02 | Reading 1 register = 2 bytes |
| Data [H] | 2 | Special port monitor | Refer to 4.3.2 (16), "List table." |
| Error check [H] | 2 | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | 7 | | |

(4) Query sample

A sample query that reads the special input port (address 9012_H) of a controller of axis No. 0 is shown below.

Query (silent intervals are inserted before and after the query)

01 03 90 12 00 01 09 0F

| Field | RTU mode 8-bit data |
|-------------------------|-------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 03 |
| Start address [H] | 9012 |
| Number of registers [H] | 0001 |
| Error check [H] | 090F (in accordance with CRC calculation) |
| End | Silent interval |

The response to the query is as follows.

Response (silent intervals are inserted before and after the response)

01 03 02 43 00 89 74

| Field | RTU mode 8-bit data |
|--------------------------|-------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 03 |
| Number of data bytes [H] | 02 (2 bytes = 1 register) |
| Data 1 [H] | 43 00 |
| Error check [H] | 8974 (in accordance with CRC calculation) |
| End | Silent interval |

Note The data of the response example is simply an example and will vary depending on various conditions.

5.3.21 Zone Output Signal Status Reading<<ZONS>>

(1) Function

This bit reads the status of zone output.

[Refer to 4.3.2 (17), "Data of zone status registers."]

(2) Query format

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|-------------------------|-------------------------------------------|------------------------|-------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 1 | 03 | Register reading |
| Start address [H] | 2 | 9013 | Zone status query |
| Number of registers [H] | 2 | 0001 | Reading address 9013 _H |
| Error check [H] | 2 | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | 8 | | |

(3) Response format

A response message contains 16 bits of data per register.

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|--------------------------|-------------------------------------------|------------------------|-------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 1 | 03 | Register reading |
| Number of data bytes [H] | 1 | 02 | Reading 1 register = 2 bytes |
| Data [H] | 2 | Zone status | Refer to 4.3.2 (17), "List table" |
| Error check [H] | 2 | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | 7 | | |

(4) Query sample

A sample query that reads the zone output status (address 9013_H) of a controller of axis No. 0 is shown below.

Query (silent intervals are inserted before and after the query)

01 03 90 13 00 01 58 CF

| Field | RTU mode 8-bit data |
|-------------------------|-------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 03 |
| Start address [H] | 9013 |
| Number of registers [H] | 0001 |
| Error check [H] | 58CF (in accordance with CRC calculation) |
| End | Silent interval |

The response to the query is as follows.

Response (silent intervals are inserted before and after the response)

01 03 02 00 00 B8 44

| Field | RTU mode 8-bit data |
|--------------------------|-------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 03 |
| Number of data bytes [H] | 02 (2 bytes = 1 register) |
| Data 1 [H] | 00 00 |
| Error check [H] | B844 (in accordance with CRC calculation) |
| End | Silent interval |

Note The data of the response example is simply an example and will vary depending on various conditions.

5.3.22 Position Complete Number Reading<<POSS>> Exected Program Number Register (Servo Press Type) <<POSS>>

(1) Function

This bit reads the position complete number or exected program number.

[Refer to 4.3.2 (18), "Data of position number status register."]

(2) Query format

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|-------------------------|-------------------------------------------|------------------------|-------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 1 | 03 | Register reading |
| Start address [H] | 2 | 9014 | Position number / Exected program number status |
| Number of registers [H] | 2 | 0001 | Reading address 9014 _H |
| Error check [H] | 2 | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | 8 | | |

(3) Response format

A response message contains 16 bits of data per register.

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|--------------------------|-------------------------------------------|-------------------------------------------------------|-------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 1 | 03 | Register reading |
| Number of data bytes [H] | 1 | 02 | Reading 1 register = 2 bytes |
| Data [H] | 2 | Position number / Exected program number status | Refer to 4.3.2 (18), "List table." |
| Error check [H] | 2 | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | 7 | | |

(4) Query sample

A sample query that reads the position complete (address 9014_H) of a controller of axis No. 0 is shown below.

Query (silent intervals are inserted before and after the query)

01 03 90 14 00 01 E9 0E

| Field | RTU mode 8-bit data |
|-------------------------|-------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 03 |
| Start address [H] | 9014 |
| Number of registers [H] | 0001 |
| Error check [H] | E90E (in accordance with CRC calculation) |
| End | Silent interval |

The response to the query is as follows.

Response (silent intervals are inserted before and after the response)

01 03 02 00 00 B8 44

| Field | RTU mode 8-bit data |
|--------------------------|-------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 03 |
| Number of data bytes [H] | 02 (2 bytes = 1 register) |
| Data 1 [H] | 00 00 |
| Error check [H] | B844 (in accordance with CRC calculation) |
| End | Silent interval |

Note The data of the response example is simply an example and will vary depending on various conditions.

5.3.23 Controller Status Signal Reading 5 <<SSSE>>

(1) Function

This query reads the internal operation status of the controller.
[Refer to 4.3.2 (19), "Data of expansion system status register."]

(2) Query format

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|-------------------------|-------------------------------------------|------------------------|-------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 1 | 03 | Register reading |
| Start address [H] | 2 | 9015 | Expansion system status register |
| Number of registers [H] | 2 | 0001 | Reading addresses 9015 _H |
| Error check [H] | 2 | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | 8 | | |

(3) Response format

A response message contains 16 bits of data per register.

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|--------------------------|-------------------------------------------|----------------------------------|-------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 1 | 03 | Internal status of controller |
| Number of data bytes [H] | 1 | 02 | Reading 1 registers = 2 bytes |
| Data [H] | 2 | Expansion system status register | Expansion system status register [Hex] |
| Error check [H] | 2 | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | 7 | | |

(4) Query sample

A sample query that reads the expansion system status register (address 9015_H) of a controller of axis No. 0 is shown below.

- Query (silent intervals are inserted before and after the query)

01 03 90 15 00 01 B8 CE

| Field | RTU mode 8-bit data |
|-------------------------|-------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 03 |
| Start address [H] | 9015 |
| Number of registers [H] | 0001 |
| Error check [H] | B8CE (in accordance with CRC calculation) |
| End | Silent interval |

The response to the query is as follows.

- Response (silent intervals are inserted before and after the response)

01 03 02 01 00 B9 D4

| Field | RTU mode 8-bit data |
|--------------------------|-------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 03 |
| Number of data bytes [H] | 02 (2 bytes = 1 registers) |
| Data 1 [H] | 01 00 |
| Error check [H] | B9D4 (in accordance with CRC calculation) |
| End | Silent interval |

Note The data of the response example is simply an example and will vary depending on various conditions.

5.3.24 Current Load Reading <<FBFC>> --- SCON-CA/CB Only

(1) Function

The monitored data of load cell measurement (push force) is read.

The unit is 0.01 N.

(2) Query format

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|-------------------------|-------------------------------------------|------------------------|-----------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 1 | 03 | Register reading |
| Start address [H] | 2 | 901E | Load monitor |
| Number of registers [H] | 2 | 0002 | Reading address 901E _H to 901F _H |
| Error check [H] | 2 | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | 8 | | |

(3) Response format

A response message contains 16 bits of data per register.

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|--------------------------|-------------------------------------------|--------------------------|-------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 1 | 03 | Register reading |
| Number of data bytes [H] | 1 | 04 | Reading 2 register = 4 bytes |
| Data [H] | 4 | Load cell measurement | Current push force [N] Unit: 0.01 N |
| Error check [H] | 2 | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | 9 | | |

(4) Query sample

An example of use is shown, where the current measurement on the load cell connected to controller axis 0 is read.

- Query (silent intervals are inserted before and after the query)

01 03 90 0A 00 02 89 0D

| Field | RTU mode 8-bit data |
|-------------------------|-------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 03 |
| Start address [H] | 901E |
| Number of registers [H] | 0002 |
| Error check [H] | 890D (in accordance with CRC calculation) |
| End | Silent interval |

The response^(Note 1) to the query is as follows.

- Response (silent intervals are inserted before and after the response)

01 03 04 00 00 03 E4 FA 88

| Field | RTU mode 8-bit data |
|--------------------------|-------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 03 |
| Number of data bytes [H] | 04 (4 bytes = 2 register) |
| Data 1 [H] | 00 00 03 E4 |
| Error check [H] | FA88 (in accordance with CRC calculation) |
| End | Silent interval |

Example 1) The current measurement on the load cell is "000003E4," convert into a decimal number, or $996 (\times 0.01 \text{ N}) \rightarrow$ The current push force is 9.96 N.

Example 2) If the current measurement reading on the load cell is "FFFFFF35" (tensile state^(Note 2)), the formula $\text{FFFFFFF}_\text{H} - \text{FFFFFF35}_\text{H} + 1$ (1 must be added) applies.

The result is converted into decimal number, or $203 (\times 0.01 \text{ N}) \rightarrow$

The current tensile force^(Note 2) is 2.03 N.

Note 1 This is only one example of response. The specific response varies depending on each situation.

Note 2 Load cell cannot be used for pulling operation.

5.3.25 Overload Level Monitor Reading <<OLLV>> --- SCON-CA/CAL/CB Only

(1) Function

Current load level to the motor is read in ratio.

The unit is 1 %.

[4.3.2 (20) Refer to overload level monitors]

(2) Query format

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|-------------------------|-------------------------------------------|------------------------|-----------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 1 | 03 | Register reading |
| Start address [H] | 2 | 9020 | Overload level monitor |
| Number of registers [H] | 2 | 0002 | Reading address 9020 _H to 9021 _H |
| Error check [H] | 2 | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | 8 | | |

(3) Response format

A response message contains 16 bits of data per register.

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|--------------------------|-------------------------------------------|------------------------|-------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 1 | 03 | Register reading |
| Number of data bytes [H] | 1 | 04 | Reading 2 register = 4 bytes |
| Data [H] | 4 | Overload level | Unit: 1 % |
| Error check [H] | 2 | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | 9 | | |

(4) Query sample

An example of use is shown, where the overload level on the actuator connected to controller axis 0 is read.

- Query (silent intervals are inserted before and after the query)

01 03 90 20 00 02 E8 C1

| Field | RTU mode 8-bit data |
|-------------------------|-------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 03 |
| Start address [H] | 9020 |
| Number of registers [H] | 0002 |
| Error check [H] | E8C1 (in accordance with CRC calculation) |
| End | Silent interval |

The response ^(Note 1) to the query is as follows.

- Response (silent intervals are inserted before and after the response)

01 03 04 00 00 00 46 7B C1

| Field | RTU mode 8-bit data |
|--------------------------|-------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 03 |
| Number of data bytes [H] | 04 (4 bytes = 2 register) |
| Data 1 [H] | 00 00 00 46 |
| Error check [H] | 7BC1 (in accordance with CRC calculation) |
| End | Silent interval |

Example 1) The current overload level is "00000046," convert into a decimal number → 70 →
The current overload level is 70 %.

Note 1 This is only one example of response. The specific response varies depending on each situation.

5.3.26 Press Program Alarm Code Reading <<ALMP>> --- Servo Press Type Only

(1) Function

Codes to show the program condition or alarm status are read.

00_H is stored in the normal condition.

[Refer to instruction manual of servo press type controller for alarm code for details]

[4.3.2 (21) Refer to press program alarm codes]

(2) Query format

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|-------------------------|-------------------------------------------|------------------------|-------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 1 | 03 | Register reading |
| Start address [H] | 2 | 9022 | Current generated alarm code |
| Number of registers [H] | 2 | 0001 | Reading address 9022 _H |
| Error check [H] | 2 | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | 8 | | |

(3) Response format

A response message contains 16 bits of data per register.

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|--------------------------|-------------------------------------------|------------------------|-------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 1 | 03 | Register reading |
| Number of data bytes [H] | 1 | 02 | Reading 1 register = 2 bytes |
| Data [H] | 2 | Alarm code | Alarm code [Hex] |
| Error check [H] | 2 | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | 7 | | |

(4) Query sample

An example of use is shown, where the alarm code (address 9022_H) on the press program to controller axis 0 is read.

- Query (silent intervals are inserted before and after the query)

01 03 90 22 00 01 09 00

| Field | RTU mode 8-bit data |
|-------------------------|----------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 03 |
| Start address [H] | 9022 |
| Number of registers [H] | 0001 |
| Error check [H] | 0900 (in accordance with CRC calculation) |
| End | Silent interval |

The response ^(Note 1) to the query is as follows.

- Response (silent intervals are inserted before and after the response)

01 03 02 00 03 FB 45

| Field | RTU mode 8-bit data |
|--------------------------|----------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 03 |
| Number of data bytes [H] | 02 (2 bytes = 1 register) |
| Data 1 [H] | 00 03 |
| Error check [H] | FB45 (in accordance with CRC calculation) |
| End | Silent interval |

The alarm issued in this example is "0003" ... It is the program startup alarm at axis operation.
[Refer to instruction manual of servo press type controller for alarm code for details]

Note 1 This is only one example of response. The specific response varies depending on each situation.

5.3.27 Alarm Generated Press Program No. Reading <<ALMP>> --- Servo Press Type Only

(1) Function

The press program number that an alarm is issued is read.

00_H is stored in the normal condition.

[4.3.2 (22) Refer to alarm generated press program No.]

(2) Query format

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|-------------------------|-------------------------------------------|------------------------|-------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 1 | 03 | Register reading |
| Start address [H] | 2 | 9023 | Alarm generated program number |
| Number of registers [H] | 2 | 0001 | Reading address 9023 _H |
| Error check [H] | 2 | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | 8 | | |

(3) Response format

A response message contains 16 bits of data per register.

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|--------------------------|-------------------------------------------|------------------------|-------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 1 | 03 | Register reading |
| Number of data bytes [H] | 1 | 02 | Reading 1 register = 2 bytes |
| Data [H] | 2 | Program No. | Program No. [Hex] |
| Error check [H] | 2 | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | 7 | | |

(4) Query sample

An example of use is shown, where the press program alarm to controller axis 0 is read.

- Query (silent intervals are inserted before and after the query)

01 03 90 23 00 01 58 C0

| Field | RTU mode 8-bit data |
|-------------------------|----------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 03 |
| Start address [H] | 9023 |
| Number of registers [H] | 0001 |
| Error check [H] | 58C0 (in accordance with CRC calculation) |
| End | Silent interval |

The response ^(Note 1) to the query is as follows.

- Response (silent intervals are inserted before and after the response)

01 03 02 00 05 78 47

| Field | RTU mode 8-bit data |
|--------------------------|----------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 03 |
| Number of data bytes [H] | 02 (2 bytes = 1 register) |
| Data 1 [H] | 00 05 |
| Error check [H] | 7847 (in accordance with CRC calculation) |
| End | Silent interval |

The press program number that an alarm has been issued in this example is No. 5.

Note 1 This is only one example of response. The specific response varies depending on each situation.

5.3.28 Press Program Status Register Reading <<PPST>> --- Servo Press Type Only

(1) Function

Internal operation condition in the press program is read.

[4.3.2 (23) Refer to press program status registers]

(2) Query format

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|-------------------------|-------------------------------------------|------------------------|-------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 1 | 03 | Register reading |
| Start address [H] | 2 | 9024 | Press program status register |
| Number of registers [H] | 2 | 0001 | Reading address 9024 _H |
| Error check [H] | 2 | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | 8 | | |

(3) Response format

A response message contains 16 bits of data per register.

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|--------------------------|-------------------------------------------|----------------------------------|-------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 1 | 03 | Register reading |
| Number of data bytes [H] | 1 | 02 | Reading 1 register = 2 bytes |
| Data [H] | 2 | Press program status register | Press program status [Hex] |
| Error check [H] | 2 | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | 7 | | |

(4) Query sample

An example of use is shown, where the press program status (address 9024_H) on the press program to controller axis 0 is read.

- Query (silent intervals are inserted before and after the query)

01 03 90 24 00 01 E9 01

| Field | RTU mode 8-bit data |
|-------------------------|-------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 03 |
| Start address [H] | 9024 |
| Number of registers [H] | 0001 |
| Error check [H] | E901 (in accordance with CRC calculation) |
| End | Silent interval |

The response ^(Note 1) to the query is as follows.

- Response (silent intervals are inserted before and after the response)

01 03 02 01 02 38 15

| Field | RTU mode 8-bit data |
|--------------------------|-------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 03 |
| Number of data bytes [H] | 02 (2 bytes = 1 register) |
| Data 1 [H] | 01 02 |
| Error check [H] | 3815 (in accordance with CRC calculation) |
| End | Silent interval |

Note 1 This is only one example of response. The specific response varies depending on each situation.

5.3.29 Press Program Judgement Status Register Reading <<PPJD>> --- Servo Press Type Only

(1) Function

Judgement condition in the press program is read.

[4.3.2 (24) Refer to press program judgement status register]

(2) Query format

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|-------------------------|-------------------------------------------|------------------------|-------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 1 | 03 | Register reading |
| Start address [H] | 2 | 9025 | Press program status register |
| Number of registers [H] | 2 | 0001 | Reading address 9025 _H |
| Error check [H] | 2 | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | 8 | | |

(3) Response format

A response message contains 16 bits of data per register.

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|--------------------------|-------------------------------------------|-----------------------------------------------|-------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 1 | 03 | Register reading |
| Number of data bytes [H] | 1 | 02 | Reading 1 register = 2 bytes |
| Data [H] | 2 | Press program judgement status register | Press program judgement status [Hex] |
| Error check [H] | 2 | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | 7 | | |

(4) Query sample

An example of use is shown, where the press program judgement status (address 9025_H) on the press program to controller axis 0 is read.

- Query (silent intervals are inserted before and after the query)

01 03 90 25 00 01 B8 C1

| Field | RTU mode 8-bit data |
|-------------------------|----------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 03 |
| Start address [H] | 9025 |
| Number of registers [H] | 0001 |
| Error check [H] | B8C1 (in accordance with CRC calculation) |
| End | Silent interval |

The response ^(Note 1) to the query is as follows.

- Response (silent intervals are inserted before and after the response)

01 03 02 01 05 79 D7

| Field | RTU mode 8-bit data |
|--------------------------|----------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 03 |
| Number of data bytes [H] | 02 (2 bytes = 1 register) |
| Data 1 [H] | 01 05 |
| Error check [H] | 79D7 (in accordance with CRC calculation) |
| End | Silent interval |

Note 1 This is only one example of response. The specific response varies depending on each situation.

5.4 Operation Commands and Data Rewrite (Used function code 05)

5.4.1 Writing to Coil

(1) Function

Change (write) the status of DO (Discrete Output) of a slave to either ON or OFF.

In case of broadcast transmission, the coils at the specified address of all slaves are rewritten.

(2) Start address list

| Start address [H] | Symbol | Function | Start address [H] | Symbol | Function |
|----------------------|--------|-------------------------------------------|----------------------|--------|------------------------------|
| 0401 | SFTY | Safety speed command | 049B | ENMV | Axis operation permission |
| 0403 | SON | Servo ON command | 049C | PHOM | Program home return movement |
| 0407 | ALRS | Alarm reset command | 049D | SSTP | Search stop |
| 0408 | BKRL | Brake forced-release command | 049E | FPST | Program compulsoly finish |
| 040A | STP | Pause command | 049F | PSTR | Program start |
| 040B | HOME | Home return command | | | |
| 040C | CSTR | Positioning start command | | | |
| 0411 | JISL | Jog/inch switching | | | |
| 0414 | MOD | Teaching mode command | | | |
| 0415 | TEAC | Position data load command | | | |
| 0416 | JOG+ | Jog+ command | | | |
| 0417 | JOG- | Jog- command | | | |
| 0418 | ST7 | Start position 7 (solenoid valve mode) | | | |
| 0419 | ST6 | Start position 6 (solenoid valve mode) | | | |
| 041A | ST5 | Start position 5 (solenoid valve mode) | | | |
| 041B | ST4 | Start position 4 (solenoid valve mode) | | | |
| 041C | ST3 | Start position 3 (solenoid valve mode) | | | |
| 041D | ST2 | Start position 2 (solenoid valve mode) | | | |
| 041E | ST1 | Start position 1 (solenoid valve mode) | | | |
| 041F | ST0 | Start position 0 (solenoid valve mode) | | | |
| 0426 | CLBR | Load cell calibration command | | | |
| 0427 | PMSL | PIO/Modbus switching specification | | | |
| 042C | STOP | Deceleration stop | | | |

5.4.2 Safety Speed Enable/Disable Switching (SFTY)

(1) Function

This query enables/disables the speed specified by user parameter No. 35, "Safety speed."
Enabling the safety speed in the MANU mode will limit the speeds of all movement commands.

(2) Query format

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|-----------------------|-------------------------------------------|------------------------|---------------------------------------------------------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) 00 _H when broadcast is specified |
| Function code [H] | 1 | 05 | Write to a single coil DO. |
| Start address [H] | 2 | 0401 | Safety speed command |
| Changed data [H] | 2 | Arbitrary | Safety speed enabled: FF00 _H Safety speed disabled: 0000 _H |
| Error check [H] | 2 | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | 8 | | |

(3) Response

If the change is successful, the response message will be the same as the query.
If invalid data is sent, an exception response (refer to section 7) will be returned, or no response will be returned.

(4) Query sample

A sample query that enables the safety speed of a controller of axis No. 0 is shown below.

Query (silent intervals are inserted before and after the query)

01 05 04 01 FF 00 DC CA

| Field | RTU mode 8-bit data |
|-------------------|----------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 05 |
| Start address [H] | 0401 |
| Changed data [H] | FF00 |
| Error check [H] | DCCA (in accordance with CRC calculation) |
| End | Silent interval |

If the change is successful, the response message will be the same as the query.

5.4.3 Servo ON/OFF <<SON>>

(1) Function

Control ON/OFF of the servo.

When "Servo ON" is specified by the new data, the servo will turn ON after elapse of the manufacturer parameter "Servo ON delay time." However, the following conditions must be satisfied:

- The EMG status bit in device status register 1 is 0.
- The major failure status bit in device status register 1 is 0.
- The enable status bit in device status register 2 is 1.
- The auto servo OFF status in the system status register is 0.

(2) Query Format

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|-----------------------|-------------------------------------------|------------------------|---------------------------------------------------------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) 00 _H when broadcast is specified |
| Function code [H] | 1 | 05 | Write to a single coil DO. |
| Start address [H] | 2 | 0403 | Servo ON/OFF command |
| Changed data [H] | 2 | Arbitrary | Servo ON: FF00 _H Servo OFF: 0000 _H |
| Error check [H] | 2 | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | 8 | | |

- * If a teaching pendant or PC software is connected before the control establishes communication with the host, the servo is turned OFF, and then the teaching pendant/PC software is removed, the servo cannot be turned ON/OFF via commands received from with the host.
In this case, restore the RC controller power, or make sure the SIO port connection is removed while the servo is ON.

(3) Response

If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to section 7) will be returned, or no response will be returned.

(4) Query sample

A sample query that turns on the servo of a controller of axis No. 0 is shown below.

Query (silent intervals are inserted before and after the query)

01 05 04 03 FF 00 7D 0A

| Field | RTU mode 8-bit data |
|-------------------|----------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 05 |
| Start address [H] | 0403 |
| Changed data [H] | FF00 |
| Error check [H] | 7D0A (in accordance with CRC calculation) |
| End | Silent interval |

If the change is successful, the response message will be the same as the query.

5.4.4 Alarm Reset <<ALRS>>

(1) Function

When the alarm reset edge is turned on (the data is first set to FF00_H and then changed to 0000_H), **alarms will be reset.**

If any alarm cause has not been removed, the same alarm will be generated again. If the alarm reset edge is turned on while the actuator is paused, **the remaining travel will be cancelled.**

When alarms are reset, make sure to write changed data of 0000_H to restore the normal status.

(2) Query format

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|-----------------------|-------------------------------------------|------------------------|---------------------------------------------------------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) 00 _H when broadcast is specified |
| Function code [H] | 1 | 05 | Write to a single coil DO. |
| Start address [H] | 2 | 0407 | Alarm reset command |
| Changed data [H] | 2 | Arbitrary | Execute alarm reset: FF00 _H Normal : 0000 _H |
| Error check [H] | 2 | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | 8 | | |

(3) Response

If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to section 7) will be returned, or no response will be returned.

(4) Query sample

A sample query that resets the alarms of a controller of axis No. 0 is shown below.

Query (silent intervals are inserted before and after the query)

First time 01 05 04 07 FF 00 3C CB --- Execute alarm reset

Second time 01 05 04 07 00 00 7D 3B --- Restore normal status

| Field | RTU mode 8-bit data |
|-------------------|----------------------------------------------------------------------------------------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 05 |
| Start address [H] | 0407 |
| Changed data [H] | First time: FF00 Second time: 0000 (Write 0000 _H after resetting alarms to restore the normal status.) |
| Error check [H] | First time: 3CCB (in accordance with CRC calculation) Second time: 7D3B (in accordance with CRC calculation) |
| End | Silent interval |

If the change is successful, the response message will be the same as the query.

5.4.5 Brake Forced Release <<BKRL>>

(1) Function

Brake control is linked to servo ON/OFF. The brake can be forcefully released even when the servo is ON.

(2) Query format

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|-----------------------|-------------------------------------------|------------------------|---------------------------------------------------------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) 00 _H when broadcast is specified |
| Function code [H] | 1 | 05 | Write to a single coil DO. |
| Start address [H] | 2 | 0408 | Break forced release command |
| Changed data [H] | 2 | Arbitrary | Brake forced release: FF00 _H Normal: 0000 _H |
| Error check [H] | 2 | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | 8 | | |

* If a teaching pendant or PC software is connected before the control establishes communication with the host, the servo is turned OFF, and then the teaching pendant/PC software is removed, the servo cannot be turned ON/OFF via commands received from with the host.
In this case, restore the RC controller power, or make sure the SIO port connection is removed while the servo is ON.

(3) Response

If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to section 7) will be returned, or no response will be returned.

(4) Query sample

A sample query that forcefully releases the break of a controller of axis No. 0 is shown below.

Query (silent intervals are inserted before and after the query)

01 05 04 08 FF 00 0C C8

| Field | RTU mode 8-bit data |
|-------------------|----------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 05 |
| Start address [H] | 0408 |
| Changed data [H] | FF00 |
| Error check [H] | 0CC8 (in accordance with CRC calculation) |
| End | Silent interval |

If the change is successful, the response message will be the same as the query.

5.4.6 Pause <<STP>>

(1) Function

If the pause command is transmitted during movement, the actuator decelerates and stops. If the status is set back to normal again, the actuator resumes moving for the remaining distance.

As long as the pause command is being transmitted, all motor movement is inhibited.

If the alarm reset command bit is set while the actuator is paused, the remaining travel will be cancelled.

If this bit is set during home return, the movement command will be held if the actuator has not yet reversed after contacting the mechanical end. If the actuator has already reversed after contacting the mechanical end, home return will be repeated from the beginning.

(2) Query format

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|-----------------------|-------------------------------------------|------------------------|---------------------------------------------------------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) 00 _H when broadcast is specified |
| Function code [H] | 1 | 05 | Write to a single coil DO. |
| Start address [H] | 2 | 040A | Pause command |
| Changed data [H] | 2 | Arbitrary | Pause command: FF00 _H Normal : 0000 _H |
| Error check [H] | 2 | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | 8 | | |

(3) Response

If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to section 7) will be returned, or no response will be returned.

(4) Query sample

A sample query that pauses a controller of axis No. 0 is shown below.

Query (silent intervals are inserted before and after the query)

01 05 04 0A FF 00 AD 08

| Field | RTU mode 8-bit data |
|-------------------|----------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 05 |
| Start address [H] | 040A |
| Changed data [H] | FF00 |
| Error check [H] | AD08 (in accordance with CRC calculation) |
| End | Silent interval |

If the change is successful, the response message will be the same as the query.

5.4.7 Home Return <<HOME>>

(1) Function

Home return operation will start if a rising edge in the home return command signal is detected (the data is first set to 0000_H and then changed to FF00_H). Upon home return completion, the HEND bit will become 1. This command can be input as many times as desired even after home return completion.

(2) Query format

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|-----------------------|-------------------------------------------|------------------------|---------------------------------------------------------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) 00 _H when broadcast is specified |
| Function code [H] | 1 | 05 | Write to a single coil DO. |
| Start address [H] | 2 | 040B | Home return command |
| Changed data [H] | 2 | Arbitrary | Execute home return: FF00 _H Normal: 0000 _H |
| Error check [H] | 2 | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | 8 | | |

* The servo must be ON before a home return command is issued.

If a teaching pendant or PC software is connected before the control establishes communication with the host, the servo is turned OFF, and then the teaching pendant/PC software is removed, the servo cannot be turned ON/OFF via commands received from omit the host.

In this case, restore the RC controller power, or make sure the SIO port connection is removed while the servo is ON.

(3) Response

If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to section 7) will be returned, or no response will be returned.

(4) Query sample

A query example that executes home return operation of a controller of axis No. 0 is shown here.

Query (silent intervals are inserted before and after the query)

First time 01 05 04 0B 00 00 BD 38 --- Set normal status

Second time 01 05 04 0B FF 00 FC C8 --- Execute home return

| Field | RTU mode 8-bit data |
|-------------------|-----------------------------------------------------------------------------------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 05 |
| Start address [H] | 040B |
| Changed data [H] | First time: 0000 Second time: FF00 (Send data twice to set the rising edge.) |
| Error check [H] | First time: 3CCB (in accordance with CRC calculation) Second time: 7D3B (in accordance with CRC calculation) |
| End | Silent interval |

If the change is successful, the response message will be the same as the query.

5.4.8 Positioning Start Command <<CSTR>>

(1) Function

If the rising edge of the positioning start command is detected (the data is first set to 0000_H and then changed to FF00_H), the actuator will move to the position specified by the position number stored in the position number command register (POSR:0D03_H). If nothing is done after the position start command (FF00_H is read and no new data is written), a position complete will not be output even when the actuator enters the positioning band (write 0000_H and restore the normal status).

If this command is executed when home return has never been performed after the power was turned on (when the HEND bit is 0), the actuator will perform home return and then start moving to the target position.

* The target position, speed and all other operation parameters must be set in the position table (nonvolatile memory) of the controller in advance.

(2) Query format

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|-----------------------|-------------------------------------------|------------------------|---------------------------------------------------------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) 00 _H when broadcast is specified |
| Function code [H] | 1 | 05 | Write to a single coil DO. |
| Start address [H] | 2 | 040C | Positioning start command |
| Changed data [H] | 2 | Arbitrary | Positioning start command: FF00 _H Normal: 0000 _H |
| Error check [H] | 2 | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | 8 | | |

(3) Response

If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to section 7) will be returned, or no response will be returned.

(4) Query sample

A sample query that moves the actuator of a controller of axis No. 0 to the position specified by the position number stored in the position number command register (POSR: 0D03_H) is shown below.

Query (silent intervals are inserted before and after the query)

First time 01 05 04 0C FF 00 4D 09 --- Move to the specified position

Second time 01 05 04 0C 00 00 0C F9 --- Restore to the normal status

| Field | RTU mode 8-bit data |
|-------------------|-----------------------------------------------------------------------------------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 05 |
| Start address [H] | 040C |
| Changed data [H] | First time: FF00 Second time: 0000 (Restore to the normal status.) |
| Error check [H] | First time: 4D09 (in accordance with CRC calculation) Second time: 0CF9 (in accordance with CRC calculation) |
| End | Silent interval |

If the change is successful, the response message will be the same as the query.

5.4.9 Jog/Inch Switching <<JISL>>

(1) Function

This bit switches between jogging and inching.

If this bit switches while the actuator is jogging, the actuator will decelerate to a stop.

If this bit switches while the actuator is inching, the inching movement will continue.

(2) Query format

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|-----------------------|-------------------------------------------|------------------------|---------------------------------------------------------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) 00 _H when broadcast is specified |
| Function code [H] | 1 | 05 | Write to a single coil DO. |
| Start address [H] | 2 | 0411 | Jog/inch switching |
| Changed data [H] | 2 | Arbitrary | Inching operation status: FF00 _H Jogging operation status: 0000 _H |
| Error check [H] | 2 | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | 8 | | |

(3) Response

If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to section 7) will be returned, or no response will be returned.

(4) Query sample

A sample query that switches the operation of a controller of axis No. 0 to inching is shown below.

Query (silent intervals are inserted before and after the query)

01 05 04 11 FF 00 DD 0F

| Field | RTU mode 8-bit data |
|-------------------|----------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 05 |
| Start address [H] | 0411 |
| Changed data [H] | FF00 |
| Error check [H] | DD0F (in accordance with CRC calculation) |
| End | Silent interval |

If the change is successful, the response message will be the same as the query.

5.4.10 Teaching Mode Command <<MOD>>

(1) Function

This bit switches between the normal operation mode and teaching mode.

(2) Query format

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|-----------------------|-------------------------------------------|------------------------|---------------------------------------------------------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) 00 _H when broadcast is specified |
| Function code [H] | 1 | 05 | Write to a single coil DO. |
| Start address [H] | 2 | 0414 | Switch between the normal mode and the teaching mode. |
| Changed data [H] | 2 | Arbitrary | Teaching mode: FF00 _H Normal operation mode: 0000 _H |
| Error check [H] | 2 | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | 8 | | |

(3) Response

If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to section 7) will be returned, or no response will be returned.

(4) Query sample

A sample query that switches the operation mode of a controller of axis No. 0 to teaching mode is shown below.

Query (silent intervals are inserted before and after the query)

01 05 04 14 FF 00 CD 0E

| Field | RTU mode 8-bit data |
|-------------------|----------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 05 |
| Start address [H] | 0414 |
| Changed data [H] | FF00 |
| Error check [H] | CD0E (in accordance with CRC calculation) |
| End | Silent interval |

If the change is successful, the response message will be the same as the query.

5.4.11 Position Data Load Command <<TEAC>>

(1) Function

The current position is acquired by writing this command (write FF00H) when the teaching mode command (5.4.10) is FF00H (teaching command).

The current position data will be written in the position number specified by the position number command register when the aforementioned condition was detected.

If other position data fields are empty, the default parameter values will be written at the same time in the empty fields other than the target position (positioning band INP, speed VCMD, acceleration/deceleration speed ACMD, and control flag CTLF).

After sending this command (write FF00_H), keep the status as is for 20 ms or longer.

(2) Query format

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|-----------------------|-------------------------------------------|------------------------|---------------------------------------------------------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) 00 _H when broadcast is specified |
| Function code [H] | 1 | 05 | Write to a single coil DO. |
| Start address [H] | 2 | 0415 | Position data load command |
| Changed data [H] | 2 | Arbitrary | Position data load command: FF00 _H Normal: 0000 _H |
| Error check [H] | 2 | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | 8 | | |

(3) Response

If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to section 7) will be returned, or no response will be returned.

(4) Query sample

A sample query that acquires the current position when a controller of axis No. 0 is in the teaching mode is shown below.

Query (silent intervals are inserted before and after the query)

01 05 04 15 FF 00 9C CE

| Field | RTU mode 8-bit data |
|-------------------|----------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 05 |
| Start address [H] | 0415 |
| Changed data [H] | FF00 |
| Error check [H] | 9CCE (in accordance with CRC calculation) |
| End | Silent interval |

If the change is successful, the response message will be the same as the query.

5.4.12 Jog+ Command <<JOG+>>

(1) Function

- The actuator performs either jog or inching operation.
If the jog+ command (changed data FF00_H) is sent when the jog/inch switching command (5.4.9) is set to 0000_H (set to jog), the actuator will jog in the direction opposite home. The speed and acceleration/deceleration speed conform to the PIO jog speed set by user parameter No. 26 and rated acceleration/deceleration speed, respectively.
If the jog+ command (changed data 0000_H) is sent or the jog- command (5.4.13, changed data FF00_H) is sent while the actuator is moving jog, the actuator will decelerate to a stop.
- If the jog+ command rising edge is set (the data is first set to 0000_H and changed to FF00_H) while the jog/inch switching command (5.4.9) is FF00_H (set to inching), the actuator will inch in the direction opposite home. The speed, travel and acceleration/deceleration speed conform to user parameter No. 26 (PIO jogging speed), user parameter No. 48 (PIO inching distance), and rated acceleration/deceleration speed, respectively.

(2) Query format

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|-----------------------|-------------------------------------------|------------------------|---------------------------------------------------------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) 00 _H when broadcast is specified |
| Function code [H] | 1 | 05 | Write to a single coil DO. |
| Start address [H] | 2 | 0416 | Jog+ command |
| Changed data [H] | 2 | Arbitrary | Jog+ command: FF00 _H Normal: 0000 _H |
| Error check [H] | 2 | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | 8 | | |

(3) Response

If the change is successful, the response message will be the same as the query.
If invalid data is sent, an exception response (refer to section 7) will be returned, or no response will be returned.

(4) Query sample

[1] A sample query that makes a controller of axis No. 0 jog is shown below.

Query (silent intervals are inserted before and after the query)

01 05 04 16 FF 00 6C CE

| Field | RTU mode 8-bit data |
|-------------------|----------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 05 |
| Start address [H] | 0416 |
| Changed data [H] | FF00 |
| Error check [H] | 6CCE (in accordance with CRC calculation) |
| End | Silent interval |

If the change is successful, the response message will be the same as the query.

[2] A sample query that makes a controller of axis No. 0 inch is shown below.

Query (silent intervals are inserted before and after the query)

First time 01 05 04 16 FF 00 6C CE --- Perform inching movement

Second time 01 05 04 16 00 00 2D 3E --- Restore the normal status

| Field | RTU mode 8-bit data |
|-------------------|-----------------------------------------------------------------------------------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 05 |
| Start address [H] | 0416 |
| Changed data [H] | First time: FF00 Second time: 0000 (Restore the normal status.) |
| Error check [H] | First time: 6CCE (in accordance with CRC calculation) Second time: 2D3E (in accordance with CRC calculation) |
| End | Silent interval |

If the change is successful, the response message will be the same as the query.

5.4.13 Jog- Command <<JOG->>

(1) Function

- The actuator performs either jog or inching operation.
If the jog- command (changed data FF00_H) is sent when the jog/inch switching command (5.4.9) is set to 0000_H (set to jog), the actuator will jog in the direction of home. The speed and acceleration/deceleration speed conform to the PIO jog speed set by user parameter No. 26 and rated acceleration/deceleration speed, respectively.
If the jog- command (changed data 0000_H) is sent or the jog+ command (5.4.12, changed data FF00_H) is sent while the actuator is moving, the actuator will decelerate to a stop.
- If the jog- command rising edge is set while the jog/inch switching command (5.4.9) is FF00_H (set to inching), the actuator will inch in the direction of home. The speed, travel and acceleration/deceleration speed conform to user parameter No. 26 (PIO jogging speed), user parameter No. 48 (PIO inching distance), and rated acceleration/deceleration speed, respectively.

(2) Query format

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|-----------------------|-------------------------------------------|------------------------|---------------------------------------------------------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) 00 _H when broadcast is specified |
| Function code [H] | 1 | 05 | Write to a single coil DO. |
| Start address [H] | 2 | 0417 | Jog- command |
| Changed data [H] | 2 | Arbitrary | Jog- command: FF00 _H Normal: 0000 _H |
| Error check [H] | 2 | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | 8 | | |

(3) Response

If the change is successful, the response message will be the same as the query.
If invalid data is sent, an exception response (refer to section 7) will be returned, or no response will be returned.

(4) Query sample

[1] A sample query that makes a controller of axis No. 0 jog is shown below.

Query (silent intervals are inserted before and after the query)

01 05 04 17 FF 00 3D 0E

| Field | RTU mode 8-bit data |
|-------------------|----------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 05 |
| Start address [H] | 0417 |
| Changed data [H] | FF00 |
| Error check [H] | 3D0E (in accordance with CRC calculation) |
| End | Silent interval |

If the change is successful, the response message will be the same as the query.

[2] A sample query that makes a controller of axis No. 0 inch is shown below.

Query (silent intervals are inserted before and after the query)

First time 01 05 04 17 FF 00 3D 0E ... Perform inching movement

Second time 01 05 04 17 00 00 7C FE ... Restore the normal status

| Field | RTU mode 8-bit data |
|-------------------|-----------------------------------------------------------------------------------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 05 |
| Start address [H] | 0417 |
| Changed data [H] | First time: FF00 Second time: 0000 (Restore the normal status) |
| Error check [H] | First time: 3D0E (in accordance with CRC calculation) Second time: 7CFE (in accordance with CRC calculation) |
| End | Silent interval |

If the change is successful, the response message will be the same as the query.

5.4.14 Start Positions 0 to 7 <<ST0 to ST7>> Movement Command (Limited to solenoid valve mode)

(1) Function

The actuator moves to the specified position number position.

The movement command for start position 0 to 7 is effective only when solenoid valve mode is selected.

The movement command is sent by enabling either one of ST0 to ST7 in 5.4.14 (5), "Start address" (write new value FF00_H when 0000_H is set).

If a position other than the valid start positions is selected, "085: Moving position number error" will be generated.

Either level operation or edge operation can be selected using user parameter No. 27, "Movement command type."

(2) Query format

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|-----------------------|-------------------------------------------|------------------------|------------------------------------------------------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) 00 _H when broadcast is specified |
| Function code [H] | 1 | 05 | Write to a single coil DO |
| Start address [H] | 2 | Arbitrary | Refer to 5.4.14 (5), "Start address." |
| Changed data [H] | 2 | Arbitrary | *1 Operation command ON: FF00 _H Operation command OFF: 0000 _H |
| Error check [H] | 2 | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | 8 | | |

*1 If user parameter No. 27, "Movement command type" is set to "level operation, " the actuator decelerates to a stop by overwriting FF00_H with 0000_H.

(3) Response

If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to section 7) will be returned, or no response will be returned.

(4) Query sample

A sample query that moves a controller of axis No. 0 to start position 2 is shown below.
An example of start position setting.

| | | | | |
|---|-------|--------|------|------|
| 0 | 0.00 | 150.00 | 0.30 | 0.30 |
| 1 | 25.00 | 150.00 | 0.30 | 0.30 |
| 2 | 50.00 | 150.00 | 0.30 | 0.30 |
| 3 | 0.00 | 150.00 | 0.20 | 0.20 |

Fig. 5.2

Query (silent intervals are inserted before and after the query)

First time 01 05 04 1D 00 00 5C FC --- Write 0000_H to set the edge

Second time 01 05 04 1D FF 00 1D 0C --- Movement command

| Field | RTU mode 8-bit data |
|-------------------|-----------------------------------------------------------------------------------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 05 |
| Start address [H] | 041D |
| Changed data [H] | First time: 0000 Second time: FF00 |
| Error check [H] | First time: 5CFC (in accordance with CRC calculation) Second time: 1D0C (in accordance with CRC calculation) |
| End | Silent interval |

If the change is successful, the response message will be the same as the query.

(5) Start address

| Address | Symbol | Name | Function |
|---------|--------|------------------|--------------------|
| 0418 | ST7 | Start position 7 | Move to position 7 |
| 0419 | ST6 | Start position 6 | Move to position 6 |
| 041A | ST5 | Start position 5 | Move to position 5 |
| 041B | ST4 | Start position 4 | Move to position 4 |
| 041C | ST3 | Start position 3 | Move to position 3 |
| 041D | ST2 | Start position 2 | Move to position 2 |
| 041E | ST1 | Start position 1 | Move to position 1 |
| 041F | ST0 | Start position 0 | Move to position 0 |

5.4.15 Load Cell Calibration Command <<CLBR>> --- A dedicated load cell must be connected.

(1) Function --- SCON-CA/CB only

The dedicated load cell is calibrated.

The factory setting of your load cell is that the ON status corresponds to a no-load state. If you want to define the reference state as a condition where a work part (load) is installed, calibrate the load cell.

Also calibrate the load cell in other situations as necessary (readjustment, inspection, etc.).

(2) Query format

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|-----------------------|-------------------------------------------|------------------------|---------------------------------------------------------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) 00 _H when broadcast is specified |
| Function code [H] | 1 | 05 | Write to a single coil DO |
| Start address [H] | 2 | 0426 | Load cell calibration command |
| Changed data [H] | 2 | Arbitrary | Calibration command: FF00 _H Normal operation: 0000 _H |
| Error check [H] | 2 | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | 8 | | |


(3) Calibration procedure

- [1] Stop the actuator operation. (The load cell cannot be calibrated while the actuator is performing any axis operation or push-motion operation or being paused, in which case 0E1 (load cell calibration error) alarm generates.)
- [2] Turn this signal ON and keep it ON for at least 20 ms.
- [3] When the calibration is complete, the calibration complete signal (CEND of device status register 1 explained in 4.3.2 (12)) turns ON. After confirming that the CEND has turned ON, turn OFF the CLBR.
If the calibration was unsuccessful, a 0E1 (load cell calibration error) alarm generates.



Caution: Normal operation commands are not accepted while the CLBR is ON.

Input is recognized after the signal remains ON for 20 ms*1.

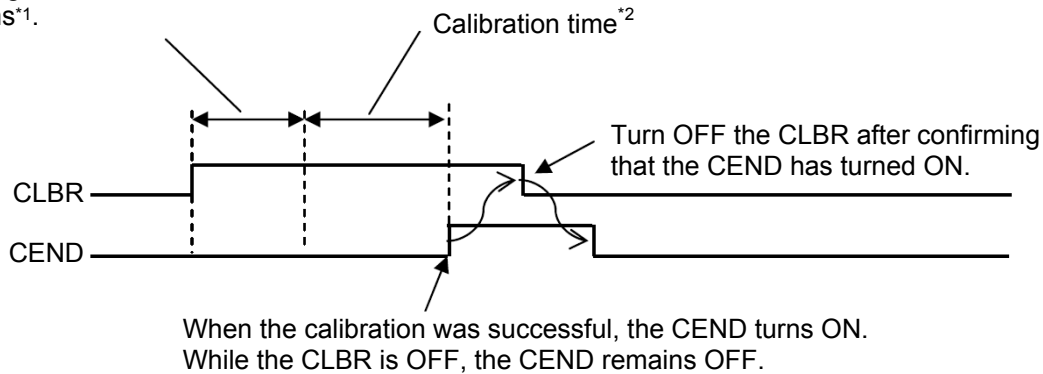

*1 If the CLBR is turned OFF during this period, calibration will not be performed because the signal is not yet recognized as having been input.

*2 If the CLBR is turned OFF during this period, an alarm will generate.

(4) Response

A response message to be sent following a successful change should be the same as the query. If any invalid data has been sent, an exception response (refer to 7) will be returned or no response will be returned at all.

(5) Example of use

Calibrate the dedicated load cell connected to controller axis 0.

Query (Silent intervals are inserted before and after the query.)

01 05 04 26 FF 00 6C C1

| Field | RTU mode 8-bit data |
|-------------------|-------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 05 |
| Start address [H] | 0426 |
| Changed data [H] | FF00 |
| Error check [H] | 6CC1 (in accordance with CRC calculation) |
| End | Silent interval |

If the change is successful, the response message will be the same as the query.

5.4.16 PIO/Modbus Switching Setting <<PMSL>>

(1) Function

PIO external command signals can be enabled or disabled.

(2) Query format

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|-----------------------|-------------------------------------------|------------------------|------------------------------------------------------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) 00 _H when broadcast is specified |
| Function code [H] | 1 | 05 | Write to a single coil DO. |
| Start address [H] | 2 | 0427 | PIO/Modbus switching setting |
| Changed data [H] | 2 | Arbitrary | *1 Enable Modbus commands: FF00 _H Disable Modbus commands: 0000 _H |
| Error check [H] | 2 | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | 8 | | |

*1 • Enable Modbus commands (ON) (disable PIO command): FF00_H

Operation via PIO signals is not possible.

• Disable Modbus commands (OFF) (enable PIO command): 0000_H

Operation via external PIO signals is possible.

Supplement

If the Modbus command is enabled, the PIO status at change is maintained.

If the Modbus command is switched to disabled, the operation status changes according to the current PIO status. Note that even if the status of signals that operate via edge detection has been changed, edge detection is ignored.

(3) Precaution

■ In the models equipped with operation model setting switch, it should be set to “PIO Command Valid” when it is set to AUTO mode, and “PIO Command Invalid” when set to MANU mode.

■ On a non-PIO model, the default setting is “Disable PIO commands.”

■ If IAI's tool (teaching pendant or PC software) is connected, “Teaching modes 1, 2” and “Monitor modes 1, 2” are available as tool modes. The correspondence between these modes and PIO enable/disable specifications are as follows:

“Monitor modes 1, 2” → “Enable PIO commands”

“Teaching modes 1, 2” → “Disable PIO commands”

(4) Response

If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to section 7) will be returned, or no response will be returned.

(5) Query sample

A sample query that enables the Modbus command of the operation of a controller of axis No. 0 is shown below.

Query (silent intervals are inserted before and after the query)

01 05 04 27 FF 00 3D 01

| Field | RTU mode 8-bit data |
|-------------------|----------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 05 |
| Start address [H] | 0427 |
| Changed data [H] | FF00 |
| Error check [H] | 3D01 (in accordance with CRC calculation) |
| End | Silent interval |

If the change is successful, the response message will be the same as the query.

5.4.17 Deceleration Stop <<STOP>>

(1) Function

The actuator will start decelerating to a stop when the deceleration stop command edge (write FF00_H) is turned on.

(2) Query format

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|-----------------------|-------------------------------------------|------------------------|-----------------------------------------------------------------------------------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) 00 _H when broadcast is specified |
| Function code [H] | 1 | 05 | Write to a single coil DO. |
| Start address [H] | 2 | 042C | Deceleration stop setting |
| Changed data [H] | 2 | Arbitrary | Deceleration stop command (ON): FF00 _H * The controller automatically resets the value to 0000 _H . |
| Error check [H] | 2 | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | 8 | | |

(3) Response

If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to section 7) will be returned, or no response will be returned.

(4) Query sample

A sample query that decelerates to a stop of a controller of axis No. 0 is shown below.

Query (silent intervals are inserted before and after the query)

01 05 04 2C FF 00 4C C3

| Field | RTU mode 8-bit data |
|-------------------|----------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 05 |
| Start address [H] | 042C |
| Changed data [H] | FF00 |
| Error check [H] | 4CC3 (in accordance with CRC calculation) |
| End | Silent interval |

If the change is successful, the response message will be the same as the query.

5.4.18 Axis operation permission <<ENMV>> --- Servo Press Type Only

(1) Function

The setting can be switched on permission activated/inactivated.

(2) Query format

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|-----------------------|-------------------------------------------|------------------------|---------------------------------------------------------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) 00 _H when broadcast is specified |
| Function code [H] | 1 | 05 | Write to a single coil DO. |
| Start address [H] | 2 | 049B | Axis operation permission setting |
| Changed data [H] | 2 | Arbitrary | Permission activated : FF00 _H |
| Error check [H] | 2 | CRC (16 bits) | Permission inactivated: 0000 _H . |
| End | None | | Silent interval |
| Total number of bytes | 8 | | |

(3) Response

If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to section 7) will be returned, or no response will be returned.

(4) Query sample

Movement of the actuator connected to Axis No. 0 gets activated.

Query (silent intervals are inserted before and after the query)

01 05 04 9B FF 00 FC E5

| Field | RTU mode 8-bit data |
|-------------------|----------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 05 |
| Start address [H] | 049B |
| Changed data [H] | FF00 |
| Error check [H] | FCE5 (in accordance with CRC calculation) |
| End | Silent interval |

If the change is successful, the response message will be the same as the query.

5.4.19 Program Home Position Movement <<PHOM>> --- Servo Press Type Only

(1) Function

Raise the program home-return edge (write FF00_H under the condition of change data being 0000_H), and the movement will be made to the program home position set in each press program.

(2) Query format

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|-----------------------|-------------------------------------------|------------------------|---------------------------------------------------------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) 00 _H when broadcast is specified |
| Function code [H] | 1 | 05 | Write to a single coil DO. |
| Start address [H] | 2 | 049C | Setting |
| Changed data [H] | 2 | Arbitrary | Home-return movement execution: FF00 _H Normally : 0000 _H |
| Error check [H] | 2 | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | 8 | | |

(3) Response

If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to section 7) will be returned, or no response will be returned.

(4) Query sample

Movement of the actuator connected to Axis No. 0 gets activated.

Query (silent intervals are inserted before and after the query)

First time : 01 05 04 9C 00 00 0C D4...Write the 0000H twice to raise the edge

Second time : 01 05 04 9C FF 00 4D 24...Home position movement

| Field | RTU mode 8-bit data |
|-------------------|------------------------------------------------------------------------------------------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 05 |
| Start address [H] | 049C |
| Changed data [H] | First time : 0000 Second time: FF00 (Send the data twice to raise the edge) |
| Error check [H] | First time : 0CD4 (in accordance with CRC calculation) Second time: 4D24 (in accordance with CRC calculation) |
| End | Silent interval |

If the change is successful, the response message will be the same as the query.

5.4.20 Search Stop <<SSTP>> --- Servo Press Type Only

(1) Function

Setting can be switched whether to finish the press program or not after search operation is completed.

(2) Query format

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|-----------------------|-------------------------------------------|------------------------|------------------------------------------------------------------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) 00 _H when broadcast is specified |
| Function code [H] | 1 | 05 | Write to a single coil DO. |
| Start address [H] | 2 | 049D | Search operation stop setting |
| Changed data [H] | 2 | Arbitrary | Stopped after search operation: FF00 _H Not stopped after search operation: 0000 _H |
| Error check [H] | 2 | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | 8 | | |

(3) Response

If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to section 7) will be returned, or no response will be returned.

(4) Query sample

After search of the actuator connected to Axis No. 0, press program will be stopped.

Query (silent intervals are inserted before and after the query)

01 05 04 9D FF 00 1C E4

| Field | RTU mode 8-bit data |
|-------------------|-------------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 05 |
| Start address [H] | 049D |
| Changed data [H] | FF00 |
| Error check [H] | 1CE4 (in accordance with CRC calculation) |
| End | Silent interval |

If the change is successful, the response message will be the same as the query.

5.4.21 Program compulsory finish <<FPST>> --- Servo Press Type Only

(1) Function

Raise the press program compulsory complete edge (write FF00_H under the condition of change data being 0000_H), and the press program will be compulsorily finished. While the change data retains FF00_H, the start command of the press program cannot be received.

(2) Query format

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|-----------------------|-------------------------------------------|------------------------|---------------------------------------------------------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) 00 _H when broadcast is specified |
| Function code [H] | 1 | 05 | Write to a single coil DO. |
| Start address [H] | 2 | 049E | Program compulsory finish setting |
| Changed data [H] | 2 | Arbitrary | Program compulsory finish: FF00 _H Normal: 0000 _H . |
| Error check [H] | 2 | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | 8 | | |

(3) Response

If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to section 7) will be returned, or no response will be returned.

(4) Query sample

Press program of the actuator connected to Axis No. 0 will be compulsorily finished.

Query (silent intervals are inserted before and after the query)

First time : 01 05 04 9E 00 00 AD 14...Write the 0000_H twice to raise the edge

Second time : 01 05 04 9E FF 00 EC E4...Compulsoly finish

| Field | RTU mode 8-bit data |
|-------------------|------------------------------------------------------------------------------------------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 05 |
| Start address [H] | 049E |
| Changed data [H] | First time : 0000 Second time: FF00 (Send the data twice to raise the edge) |
| Error check [H] | First time : AD14 (in accordance with CRC calculation) Second time: ECE4 (in accordance with CRC calculation) |
| End | Silent interval |

If the change is successful, the response message will be the same as the query.

5.4.22 Program Start <<PSTR>> --- Servo Press Type Only

(1) Function

Raise the program start edge (write FF00_H under the condition of change data being 0000_H), and the press program in the program number set in POSR Register will be executed.

(2) Query format

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|-----------------------|-------------------------------------------|------------------------|---------------------------------------------------------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) 00 _H when broadcast is specified |
| Function code [H] | 1 | 05 | Write to a single coil DO. |
| Start address [H] | 2 | 049F | Program start setting |
| Changed data [H] | 2 | Arbitrary | Program start: FF00 _H |
| Error check [H] | 2 | CRC (16 bits) | Nomal: 0000 _H . |
| End | None | | Silent interval |
| Total number of bytes | 8 | | |

(3) Response

If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to section 7) will be returned, or no response will be returned.

(4) Query sample

Press program of the actuator connected to Axis No. 0 will be executed.

Query (silent intervals are inserted before and after the query)

First time : 01 05 04 9F 00 00 FC D4...Write the 0000_H twice to raise the edge

Second time : 01 05 04 9F FF 00 BD 24...Program executed

| Field | RTU mode 8-bit data |
|-------------------|-----------------------------------------------------------------------------------------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 05 |
| Start address [H] | 049F |
| Changed data [H] | First time: 0000 Second time: FF00 (Send the data twice to raise the edge) |
| Error check [H] | First time: FCD4 (in accordance with CRC calculation) Second time: BD24 (in accordance with CRC calculation) |
| End | Silent interval |

If the change is successful, the response message will be the same as the query.

5.5 Direct Writing of Control Information (Used function code 06)

5.5.1 Writing to Registers

(1) Function

These queries change (write) data in registers of a slave.

In case of broadcast, data of registers of the same address of all slaves is changed.

[Refer to the details of device controller register 1 in 4.3.2 (5).]

[Refer to the details of device controller register 2 in 4.3.2 (6).]

[Refer to the details of the position number command register and position movement specification register and program number command register (Servo Press) type in 4.3.2 (7).]

(2) Start address list

| Address | Symbol | Name | Byte |
|---------|--------|----------------------------------------------------------------------|------|
| 0D00 | DRG1 | Device control register 1 | 2 |
| 0D01 | DRG2 | Device control register 2 | 2 |
| 0D03 | POSR | Position number command register/ Program number command register | 2 |
| 9800 | POSR | Position movement command register | 2 |

The registers above are control command registers. The bits of these registers are assigned to input ports by PIO patterns when "PIO/Modbus Switch Status (PMSS) (refer to 4.3.2 (14)) is set to "disable Modbus commands (enable PIO commands). These registers can be rewritten when the Modbus commands are enabled (PIO commands are disabled).

(3) Query format

Specify the address and data of the register whose data is to be changed in the query message.
Data to be changed shall be specified as 16-bit data in the changed data area of the query.

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|-----------------------|-------------------------------------------|----------------------------------------------|---------------------------------------------------------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) 00 _H when broadcast is specified |
| Function code [H] | 1 | 06 | Writing to registers |
| Start address [H] | 2 | Arbitrary | Refer to 5.5.1 (2), "Start address list." |
| Changed data [H] | 2 | Arbitrary | 4.3.2 (5) to 4.3.2 (7) Refer to List of changed data. |
| Error check [H] | 2 | In accordance with the calculation result | |
| End | None | | Silent interval |
| Total number of bytes | 8 | | |

(4) Response

If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to section 7) will be returned, or no response will be returned.

(5) Query sample

Examples of different operations are shown in [1] to [3] below.

[1] A sample query that turns the servo ON a controller of axis No. 0 on and then executes home return operation is performed.

Query (silent intervals are inserted before and after the query)

First time 01 06 0D 00 10 00 86 A6 --- Servo ON

Second time 01 06 0D 00 10 10 87 6A --- Home return

| Field | RTU mode 8-bit data |
|-------------------|-----------------------------------------------------------------------------------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 06 |
| Start address [H] | 0D00 |
| Changed data [H] | First time: 1000 Second time: 1010 (Keep the servo ON bit 1 in cases other than when the servo is OFF.) |
| Error check [H] | First time: 86A6 (in accordance with CRC calculation) Second time: 876A (in accordance with CRC calculation) |
| End | Silent interval |

Note 1 Home return is not performed even if 1010_H is sent to change the data while the servo is OFF (refer to the timing chart at startup of each RC controller).

Note 2 To keep the previous status, send the previous status even if there is no change.

As in the example above, keep the servo ON bit as 1 at home return as well.

If the change is successful, the response message will be the same as the query.

[2] Move to position No. 1 using the position movement specification register (address 9800_H).

Before this operation, perform the operation in example [1] above to complete a home return.

Query (Silent intervals are inserted before and after the query.)

01 06 98 00 00 01 67 6A

| Field | RTU mode 8-bit data |
|-------------------|-------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 06 |
| Start address [H] | 9800 |
| Changed data [H] | 0001 |
| Error check [H] | 676A (in accordance with CRC calculation) |
| End | Silent interval |

Note As soon as a position number is written to this register, the actuator starts moving.
The CSTR (start signal) is not required.
If the change is successful, the response message will be the same as the query.

[3] Move to position No. 1 using the position number command register (address 0D03_H).
Before this operation, perform the operation in example [1] above to complete a home return.
Query (Silent intervals are inserted before and after the query.)
First time 01 06 0D 03 00 01 BA A6 --- Specify position No. 1
Second time 01 06 0D 00 10 00 86 A6--- Turn OFF the CSTR (start signal)
Third time 01 06 0D 00 10 08 87 60--- Turn ON the CSTR (start signal)

| Field | RTU mode 8-bit data |
|-------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Start | Silent interval |
| Slave address [H] | 01 |
| Function code [H] | 06 |
| Start address [H] | First time: 0D03 Second time: 0D00 Third time: 0D00 |
| Changed data [H] | First time: 0001 Second time: 1000 Third time: 1008 |
| Error check [H] | First time: BAA6 (in accordance with CRC calculation) Second time: 86A6 (in accordance with CRC calculation) Third time: 8760 (in accordance with CRC calculation) |
| End | Silent interval |

Note To keep the previous status, send the previous status even if there is no change.
As in the example above, keep the servo ON bit as 1 at other than servo OFF.
If the change is successful, the response message will be the same as the query.

5.6 Direct Writing of Positioning Data (Used function code 10)

5.6.1 Numerical Value Movement Command

(1) Function

Specify the target position in PTP positioning operation using absolute coordinates. It is possible to command the actuator to move via numerical values by writing directly to the group of registers at addresses from 9900_H to 9908_H (can be set in one message).

Values of all registers, other than the control flag specification register (address: 9908_H), will become effective once the values are sent. If there is no need to change the target position, positioning band, speed, acceleration/deceleration, push-current limiting value and control specification, therefore, each subsequent numerical movement command can be issued simply by writing a desired register that can effect an actual movement command based on changing of the applicable register alone (refer to "Start address list").

(2) Start address list

This group of registers is used to move the actuator by specifying the target position coordinates, positioning band, speed acceleration/deceleration, push-operation current limit control specification flags and so on as numerical values.

Data of start addresses in the list (8 registers in total) can be changed with one transmission.

| Address [H] | Symbol | Name | Sign | Able to effect an actual movement command by changing the applicable register alone | Register size | Byte size | Unit |
|-------------|--------|----------------------------------------------------|------|-------------------------------------------------------------------------------------|---------------|-----------|-------------|
| 9900 | PCMD | Target position specification register | ○ | ○ | 2 | 4 | 0.01 mm |
| 9902 | INP | Positioning band specification register | | × | 2 | 4 | 0.01 mm |
| 9904 | VCMD | Speed specification register | | ○ | 2 | 4 | 0.01 mm/sec |
| 9906 | ACMD | Acceleration/deceleration specification register | | ○ | 1 | 2 | 0.01 G |
| 9907 | PPOW | Push-current limiting value specification register | | ○ | 1 | 2 | % |
| 9908 | CTLF | Control flag specification register | | × Initialization after each movement | 1 | 2 | - |

(3) Query format

1 register = 2 bytes = 16-bit data

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|-------------------------|-------------------------------------------|--------------------------------------------------------|----------------------------------------------------------------------------------------------------|
| Start | | None | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) 00 _H if broadcast is specified |
| Function code [H] | 1 | 10 | Numerical value specification |
| Start address [H] | 2 | Arbitrary | Refer to 5.6.1 (2), "Start address list" |
| Number of registers [H] | 2 | Arbitrary | Refer to 5.6.1 (2), "Start address list" |
| Number of bytes [H] | 1 | In accordance with the number of registers above | Enter the value twice as large as the number of registers specified above |
| Changed data 1 [H] | 2 | | Refer to 5.6.1 (2), "Start address list " |
| Changed data 2 [H] | 2 | | Refer to 5.6.1 (2), "Start address list" |
| Changed data 3 [H] | 2 | | Refer to 5.6.1 (2), "Start address list" |
| : | : | | : |
| Error check [H] | 2 | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | Up to 256 | | |

(4) Response format

When normally changed, the response message responds with a copy of the query message excluding the number of bytes and changed data.

| Field | Number of data items (number of bytes) | RTU mode 8-bit data | Remarks |
|-------------------------|-------------------------------------------|------------------------|----------------------------------------------------------------------------------------------------|
| Start | | None | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) 00 _H if broadcast is specified |
| Function code [H] | 1 | 10 | Numerical value specification |
| Start address [H] | 2 | Arbitrary | Refer to 5.6.1 (2), "Start address list" |
| Number of registers [H] | 2 | Arbitrary | Refer to 5.6.1 (2), "Start address list" |
| Error check [H] | 2 | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | 8 | | |

(5) Detailed explanation of registers

■ Target position specification register (PCMD)

This register specifies the target position in PTP positioning operation using absolute coordinates. The value of this register is set in units of 0.01 mm in a range of -999999 to 999999 (FFF0BDC1_H^(Note 1) to 000F423F_H). When the absolute coordinate is indicated, operation starts with 0.2mm in front^(Note 2) of the soft limit setting value as the target position if the setting of the parameter exceeds the soft limit. The actuator will start moving when the lower word of this register (symbol: PCMD, address: 9900_H) is rewritten. In other words, **a numerical movement command can be issued simply by writing a target position in this register.**

Note 1 To set a negative value, use a two's complement.

Note 2 For a revolution axis set to Index Mode, the soft limit setting value is the target position.

■ Positioning band register (INP)

This register is used in two different ways depending on the type of operation.

The first way is the normal positioning operation, where it specifies the allowable difference between the target position and current position to be used in the detection of position complete. The second way is the push-motion operation, where it specifies the push-motion band. The value of this register is set in units of 0.01 mm in a range of 1 to 999999 (1_H to 000F423F_H). Whether the normal operation or push-motion operation is specified by the applicable bit in the control flag specification register as explained later.

Changing this register alone will not start actuator movement.



Caution: It is necessary that the positioning band is at or more than the value figured out with the formulas below.

- For Servomotor: Actuator Lead Length ÷ Encoder Pulse
 - For Pulse Motor: Actuator Lead Length ÷ Encoder Pulse × 3
- Apply the servomotor formula for RCP6 Actuator

■ Speed specification register (VCMD)

This register specifies the moving speed. The value of this register is set in units of 0.01 mm/sec in a range of 1 to 999999 (1_H to 000F423F_H). If the specified value exceeds the maximum speed set by a parameter, an alarm will generate the moment a movement start command is issued.

The actuator will start moving when this lower word of this register is rewritten. In other words, the speed can be changed while the actuator is moving, simply by rewriting this register.

■ Acceleration/deceleration specification register (ACMD)

This register specifies the acceleration or deceleration. The value of this register is set in units of 0.01 G in a range of 1 to 300 (1_H to 012C_H). If the specified value exceeds the maximum acceleration or deceleration set by a parameter, an alarm will generate the moment a movement start command is issued.

The actuator will start moving when this register is rewritten. In other words, the acceleration/deceleration can be changed while the actuator is moving, simply by rewriting this register.

■ Push-current limiting value (PPOW)

Set the current limit during push-motion operation in PPOW. Set an appropriate value by referring to the table below.

| Actuator model name | Pushable range [%] | Settable range (input value) [H] |
|-----------------------------------|----------------------------|----------------------------------|
| Actuator other than RCS2-RA13R | 20 to 70 ^(Note) | 33 to B2 |
| RCS2-RA13R | 20 to 200 | 33 to 1FE |

(Note) The setting ranges may vary depending on the actuator.

[For details, refer to the IAI catalog or operation manual of each actuator.]

The actuator will start moving when this register is rewritten. In other words, the current limiting value can be changed during push-motion operation simply by rewriting this register.

Sample push-motion current setting

● When setting the current to 20%


$$255(100\%) \times 0.2 (20\%) = 51 \rightarrow 33_{\text{H}} \text{ (convert into hexadecimal number)}$$

■ Control Flag Specification Register (CTLF)

Set the method of operation.

If push-motion operation or incremental operation (pitch feed) is selected, set this register every time a movement command is issued. (This is because the register will be overwritten with the default value every time the actuator moves.)

CTLF bit structure



Bit 1 (PUSH) = 0: Normal operation (default)

1: Push-motion operation

Bit 2 (DIR) = 0: The direction of push-motion operation after completion of approach is defined as the forward direction (default).

1: The direction of push-motion operation after completion of approach is defined as the reverse direction.

This bit is used to calculate the direction of final stop position from PCMD. If this bit is set incorrectly, therefore, the target position will deviate from the specified position by a distance corresponding to " $2 \times \text{INP}$," as shown in Fig. 5.3 below.

If bit 1 is set to 0, the setting of this bit is invalid.

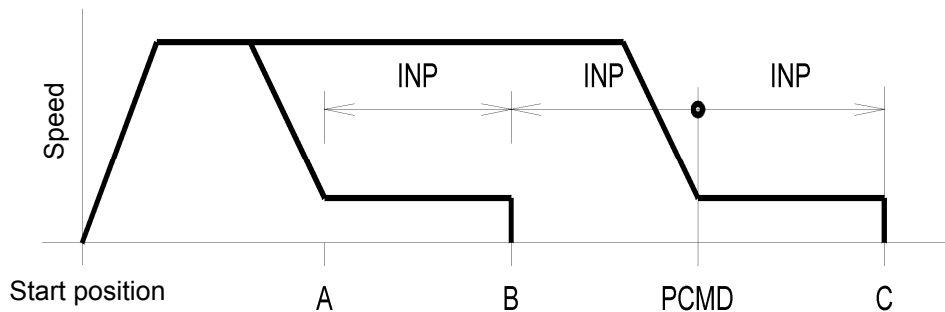


Fig. 5.3 Operating Direction in Push-motion Operation

Bit 3 (INC) = 0: Normal operation (default)

1: Incremental operation (pitch feed)

Setting this bit to 1 will enable the actuator to operate relative to the current position. In this operation, the actuator behaves differently between normal operation and push-motion operation (CTLF bit 1). While the travel is calculated with respect to the target position (PCMD) in normal operation, it is calculated relative to the current position in push-motion operation (when bit 1 = 1).

Here, since relative coordinate calculation involves adding up pulses in mm, followed by conversion, unlike a calculation method involving addition after pulse conversion, **“repeated relative movements will not cause position deviation as a result of cumulative errors corresponding to fraction pulses that are not divisible with certain lead settings”.**

Bit 4 (GSL0), 5 (GSL1) = Refer to the table below.

(ACON-CA/CB/CYB, SCON-CA/CAL/CB/Servo Press Type and RCM-P6AC only)

Do not attempt to change the number from 0 for those other than the models above.

Doing so may cause an error in operation.

| GSL1 | GSL0 | Function |
|------|------|-----------------------------------|
| 0 | 0 | Select parameter set 0 (default). |
| 0 | 1 | Select parameter set 1 |
| 1 | 0 | Select parameter set 2 |
| 1 | 1 | Select parameter set 3 |

You can register a maximum of four servo gain parameter sets consisting of six parameters and move the actuator to each position by selecting a different parameter set every time. [For details, refer to the operation manual for your controller.]

Bit 6 (MOD0), 7 (MOD1) = Refer to the table below.

(ACON-C/CY/SE/CA/CB/CYB, DCON-CA/CB/CYB, PCON-CA/CFA/CB/CFB/CYB, SCON-C/CA/CAL/CB, ERC3, RACON and RCM-P6AC only, and SCON Servo Press Type is not applicable)

| MOD1 | MOD0 | Function |
|------|------|-----------------------------|
| 0 | 0 | Trapezoid pattern (default) |
| 0 | 1 | S-motion |
| 1 | 0 | Primary delay filter |
| 1 | 1 | Cannot be used. |

These signals are used to select the acceleration/deceleration pattern characteristics. Set one of the patterns before issuing an actuator movement command. [For details, refer to the operation manual for your controller.]

Bit 12 (NTC0), 13 (NTC1) = Refer to the table below.

(ACON-CA/CB/CYB, SCON-CA/CAL/CB and RCM-P6AC only, and SCON Servo Press Type is not applicable)

| NTC1 | NTC0 | Function |
|------|------|-----------------------------------------|
| 0 | 0 | Do not use vibration control (default). |
| 0 | 1 | Select parameter set 1 |
| 1 | 0 | Select parameter set 2 |
| 1 | 1 | Select parameter set 3 |

When vibration control is used, you can register a maximum of three parameter sets and move the actuator to each position by selecting a different parameter set every time. [For details, refer to the operation manual for your controller.]

(6) Example of use

Examples of different operations are shown in [1] to [7] below.

[1] Move by changing the target position. (All data other than the target position are the default values of their respective parameters.)

Conditions: The operation conditions conform to the default speed, default acceleration/deceleration and default positioning band set by the controller's user parameters. Only the target position is changed to move the actuator.

Supplement: Controller's user parameters

- Default speed (parameter No. 8) → Maximum speed of the applicable actuator as specified in the catalog
- Default acceleration/deceleration (parameter No. 9) → Rated acceleration of the applicable actuator as specified in the catalog
- Default positioning band (parameter No. 10) → Default value = 0.1 mm

Write the target position specification register (9900_H) (Example 1)



Start of movement

(Example 1) Target position: 50 mm

| Target position [mm] | Positioning band [mm] | Speed [mm/s] | Acceleration/deceleration [G] | Push [%] | Control flag |
|----------------------|-----------------------|--------------|-------------------------------|----------|--------------|
| 50 | Need not be set. | | | | |

■ Query :01 10 9900 0002 04 0000 1388 38FF

■ Response :01 10 9900 0002 6F54

--- The query message is copied, except for the number of bytes and new data, and returned as a response.

■ Breakdown of Query Message

| Field | RTU mode 8-bit data | Remarks |
|---------------------------------------------------------|---------------------|---------------------------------------------------------------------------------------------------------------|
| Start | None | Silent interval |
| Slave address | 01 _H | Axis number + 1 |
| Function code | 10 _H | |
| Start address | 9900 _H | The starting address corresponds to the setting of target position specification register 9900 _H . |
| Number of registers | 0002 _H | Addresses 9900 _H to 9901 _H are written. |
| Number of bytes | 04 _H | 2 (registers) × 2 = 4 (bytes) → 4 _H |
| New data 1, 2 (target position) Input unit (0.01 mm) | 0000 _H | All upper bits of the 32-bit data are 0. |
| | 1388 _H | 50 [mm] × 100 = 5000 → 1388 _H |
| Error check | 38FF _H | CRC checksum calculation result → 38FF _H |
| End | None | Silent interval |
| Total number of bytes | 13 | |

[2] Move by changing the target position. (As well as data other than the target position).

Conditions: Want to move the actuator by changing the target position, speed and acceleration/deceleration every time.

Write the target position specification register (9900_H) through acceleration/deceleration specification register (9906_H)^(Example2)



Start of movement

(Example 2) Target position: 50 mm

| Target position [mm] | Positioning band [mm] | Speed [mm/s] | Acceleration/deceleration [G] | Push [%] | Control flag |
|----------------------|-----------------------|--------------|-------------------------------|------------------|--------------|
| 50 | 0.1 | 100 | 0.3 | Need not be set. | |

■ Query : 01 10 9900 0007 0E 0000 1388 0000 000A 0000 2710 001E 50CF

■ Response : 01 10 9900 0007 AF57

--- The query message is copied, except for the number of bytes and new data, and returned as a response.

■ Breakdown of Query Message

| Field | RTU mode 8-bit data | Remarks |
|------------------------------------------------------------------|---------------------|---------------------------------------------------------------------------------------------------------------|
| Start | None | Silent interval |
| Slave address | 01 _H | Axis number + 1 |
| Function code | 10 _H | |
| Start address | 9900 _H | The starting address corresponds to the setting of target position specification register 9900 _H . |
| Number of registers | 0007 _H | Addresses 9900 _H to 9906 _H are written. |
| Number of bytes | 0E _H | 7 (registers) × 2 = 14 (bytes) → E _H |
| New data 1, 2 (target position) Input unit (0.01 mm) | 0000 _H | All upper bits of the 32-bit data are 0. |
| | 1388 _H | 50 [mm] × 100 = 5000 → 1388 _H |
| New data 3, 4 (Positioning band) Input unit (0.01 mm) | 0000 _H | All upper bits of the 32-bit data are 0. |
| | 000A _H | 0.1 [mm] × 100 = 10 → 000A _H |
| New data 5, 6 (Speed) Input unit (0.01 mm/sec) | 0000 _H | All upper bits of the 32-bit data are 0. |
| | 2710 _H | 100 [mm/s] × 100 = 10000 → 2710 _H |
| New data 7 (Acceleration/deceleration) Input unit (0.01 G) | 001E _H | 0.3 [G] × 100 = 30 → 001E _H |
| Error check | 50CF _H | CRC checksum calculation result → 50CF _H |
| End | None | Silent interval |
| Total number of bytes | 23 | |

[3] Change the speed while the actuator is moving.

Conditions: Change the target position, speed and acceleration/deceleration each time the actuator is moved, with the actuator speed changed at a given time during movement.

Write the target position specification register (9900_H) through acceleration/deceleration specification register (9906_H)^(Example 2)



Start of movement



Write the speed specification registers (9904_H and 9905_H)^(Example 3)



The actuator continues with the normal operation at the new speed

(Example 3) Change the speed from 100 mm/s to 50 mm/s while the actuator is moving.

| Target position [mm] | Positioning band [mm] | Speed [mm/s] | Acceleration/deceleration [G] | Push [%] | Control flag |
|----------------------|-----------------------|--------------|-------------------------------|------------------|--------------|
| 50 | 0.1 | 100 → 50 | 0.3 | Need not be set. | |

- (1) Start the movement at a speed of 100 mm/s. [Refer to Example [2], “Move by changing the speed” above.]

■ Query : 01 10 9900 0007 0E 0000 1388 0000 000A 0000 2710 001E 50CF

■ Response : 01 10 9900 0007 AF57

- (2) Change the speed to 50 mm/s.

■ Query : 01 10 9904 0002 04 0000 1388 395C

■ Response : 01 10 9904 0002 2E95

--- The query message is copied, except for the number of bytes and new data, and returned as a response.

- Breakdown of Query Message (Change the speed to 50 mm/s. [Refer to the above example for the query message used to start the movement at 100 mm/s.]

| Field | RTU mode 8-bit data | Remarks |
|-------------------------------------------------|------------------------|---------------------------------------------------------------------------------------------------------------|
| Start | None | Silent interval |
| Slave address | 01 _H | Axis number + 1 |
| Function code | 10 _H | |
| Start address | 9904 _H | The starting address corresponds to the setting of target position specification register 9904 _H . |
| Number of registers | 0002 _H | Addresses 9904 _H to 9905 _H are written. |
| Number of bytes | 04 _H | 2 (registers) × 2 = 4 (bytes) → 4 _H |
| New data 5, 6 (Speed) Input unit (0.01 mm/s) | 0000 _H | All upper bits of the 32-bit data are 0. |
| | 1388 _H | 50 [mm/s] × 100 = 5000 → 1388 _H |
| Error check | 395C _H | CRC checksum calculation result → 395C _H |
| End | None | Silent interval |
| Total number of bytes | 13 | |

[4] Move in the incremental (pitch feed) mode.

Conditions: The operation conditions conform to the default speed, default acceleration/deceleration and default positioning band set by the controller's user parameters. Only the pitch width is changed to move the actuator.

Write the target position specification register (9900_H) through control flag specification register (9908_H: Incremental setting) (Example 4)



Start of movement

Supplement: Addresses 9900_H and 9908_H alone cannot be changed in a single data transmission. Since all addresses are sequential, send two messages if 9900_H and 9908_H alone are changed. If you want to send only one message, write all addresses from 9900_H to 9908_H.

(Example 4) Move in the incremental mode by setting the pitch to 10 mm.

| Pitch [mm] | Positioning band [mm] | Speed [mm/s] | Acceleration/ deceleration [G] | Push [%] | Control flag |
|---------------|-----------------------------|-----------------|--------------------------------------|-------------|---------------------------|
| 10 | 0.1 | 100 | 0.3 | 0 | Incremental (bit3 = 1) |

■ Query: 01 10 9900 0009 12 0000 03E8 0000 000A 0000 2710 001E 0000 0008 F3A0

■ Response: 01 10 9900 0009 2E93

--- The query message is copied, except for the number of bytes and new data, and returned as a response.

■ Breakdown of Query Message

| Field | RTU mode 8-bit data | Remarks |
|------------------------------------------------------------------|------------------------|-------------------------------------------------------------------------------------|
| Start | None | Silent interval |
| Slave address | 01 _H | Axis No. 0 + 1 |
| Function code | 10 _H | |
| Start address | 9900 _H | The start address is the target position specification register 9900 _H . |
| Number of registers | 0009 _H | Specify 9900 _H through 9908 _H as the addresses to be written. |
| Number of bytes | 12 _H | 9 (registers) × 2 = 18 (bytes) → 12 _H |
| New data 1, 2 (target position) Input unit (0.01 mm) | 0000 _H | All upper bits of the 32-bit data are 0. |
| | 03E8 _H | 10 [mm] × 100 = 1000 → 03E8 _H |
| New data 3, 4 (positioning band) Input unit (0.01 mm) | 0000 _H | All upper bits of the 32-bit data are 0. |
| | 000A _H | 0.1 [mm] × 100 = 10 → 000A _H |
| New data 5, 6 (speed) Input unit (0.01 mm/sec) | 0000 _H | All upper bits of the 32-bit data are 0. |
| | 2710 _H | 100 [mm/s] × 100 = 10000 → 2710 _H |
| New data 7 (acceleration/deceleration) Input unit (0.01 G) | 001E _H | 0.3 [G] × 100 = 30 → 001E _H |
| New data 8 (push) Input unit [%] | 0000 _H | 0 [%] → 0 _H |
| New data 9 (control flag) | 0008 _H | (Incremental setting) 1000b → 0008 _H |
| Error check | F3A0 _H | CRC check calculation result → F3A0 _H |
| End | None | Silent interval |
| Total number of bytes | 27 | |

[5] Change the speed during incremental movement (pitch feed).

Conditions: Change the target position, speed and acceleration/deceleration each time the actuator is moved, with the positioning band changed at a given time during movement.

Write the target position specification register (9900_H) through control flag specification register (9908_H: Incremental setting) ^(Example 4)



Start of incremental movement



Write the speed specification register (9904_H) through control flag specification register (9908_H: Incremental setting) ^(Example 5).



The actuator continues with the incremental movement at the new speed.

Supplement: After the control flag specification register (9908_H) is set, the register will return to the default value (0_H: Normal movement) once the actuator starts moving. Accordingly, you must set the control flag specification register (9908_H) and send it again if another incremental or push-motion operation is to be performed.

(Example 5) Change the speed from 100 mm/s to 50 mm/s while the actuator is moving.

| Pitch [mm] | Positioning band [mm] | Speed [mm/s] | Acceleration/ deceleration [G] | Push [%] | Control flag |
|---------------|-----------------------------|-----------------|--------------------------------------|-------------|---------------------------|
| 10 | 0.1 | 100 → 50 | 0.3 | 0 | Incremental (bit3 = 1) |

- (1) Start moving at a speed of 100 mm/s. [Refer to Example [4], “Moving in the incremental (pitch feed) mode” above.]

■ Query : 01 10 9900 0009 12 0000 03E8 0000 000A 0000 2710 001E 0000 0008 F3A0

■ Response : 01 10 9900 0009 2E93

- (2) Change the speed to 50 mm/s.

■ Query : 01 10 9904 0005 0A 0000 1388 001E 0000 0008 BD83

■ Response: 01 10 9904 0005 6F57

--- The query message is copied, except for the number of bytes and new data, and returned as a response.

- Breakdown of Query Message (Change the speed to 50 mm/s. [Refer to the above example for the query message used to start the movement at 100 mm/s.]

| Field | RTU mode 8-bit data | Remarks |
|------------------------------------------------------------------|------------------------|-------------------------------------------------------------------------------------|
| Start | None | Silent interval |
| Slave address | 01 _H | Axis No. 0 + 1 |
| Function code | 10 _H | |
| Start address | 9904 _H | The start address is the target position specification register 9904 _H . |
| Number of registers | 0005 _H | Specify 9904 _H through 9908 _H as the addresses to be written. |
| Number of bytes | 0A _H | 5 (registers) × 2 = 10 (bytes) → A _H |
| New data 5, 6 (speed) Input unit (0.01 mm/s) | 0000 _H | All upper bits of the 32-bit data are 0. |
| | 1388 _H | 50 [mm/s] × 100 = 5000 → 1388 _H |
| New data 7 (acceleration/deceleration) Input unit (0.01 G) | 001E _H | 0.3 [G] × 100 = 30 → 001E _H |
| New data 8 (push) Input unit [%] | 0000 _H | 0 [%] → 0 _H |
| New data 9 (control flag) | 0008 _H | (Incremental setting) 1000b → 0008 _H |
| Error check | BD83 _H | CRC check calculation result → BD83 _H |
| End | None | Silent interval |
| Total number of bytes | 19 | |

[6] Perform a push-motion operation. (changing pushing force during push-operation)

Conditions: Perform push-motion operation by changing the push force at a desired time while the actuator is pushing the work part.

Write the target position specification register (9900_H) through control flag specification register (9908_H: Push-motion setting) ^(Example 6)



Start push-motion operation



Write the push-current limit specification register (9907_H) through control flag specification register (9908_H: Push-motion setting) ^(Example 7)



The actuator continues with the push-motion operation with the new push force

(Example 6) Perform a push-motion operation for 20 mm from the 50-mm position at a current-limiting value of 70%.

| Target position [mm] | Positioning band [mm] | Speed [mm/s] | Acceleration/deceleration [G] | Push [%] | Control flag |
|----------------------|-----------------------|--------------|-------------------------------|----------|-----------------------------------------------|
| 50 | 20 | 100 | 0.3 | 70 | Push-motion operation (bit1 = 1, bit2 = 0, 1) |

■ Query: 01 10 9900 0009 12 0000 1388 0000 07D0 0000 2710 001E 00B2 0006 C377

■ Response: 01 10 9900 0009 2E93

--- The query message is copied, except for the number of bytes and new data, and returned as a response.

■ Breakdown of Query Message

| Field | RTU mode 8-bit data | Remarks |
|---------------------------------------------------------------|---------------------|-------------------------------------------------------------------------------------|
| Start | None | Silent interval |
| Slave address | 01 _H | Axis No. 0 + 1 |
| Function code | 10 _H | |
| Start address | 9900 _H | The start address is the target position specification register 9900 _H . |
| Number of registers | 0009 _H | Specify 9900 _H through 9908 _H as the addresses to be written. |
| Number of bytes | 12 _H | 9 (registers) × 2 = 18 (bytes) → 12 _H |
| New data 1, 2 (target position) Input unit (0.01 mm) | 0000 _H | All upper bits of the 32-bit data are 0. |
| | 1388 _H | 50 [mm] × 100 = 5000 → 1388 _H |
| New data 3, 4 (positioning band) Input unit (0.01 mm) | 0000 _H | All upper bits of the 32-bit data are 0. |
| | 07D0 _H | 20 [mm] × 100 = 2000 → 07D0 _H |
| New data 5, 6 (speed) Input unit (0.01 mm/sec) | 0000 _H | All upper bits of the 32-bit data are 0. |
| | 2710 _H | 100 [mm] × 100 = 10000 → 2710 _H |
| New data 7 (acceleration/deceleration) Input unit (0.01 G) | 001E _H | 0.3 [G] × 100 = 30 → 001E _H |
| New data 8 (push) Input unit [%] | 00B2 _H | 70 [%] → B2 _H |
| New data 9 (control flag) | 0006 _H | (Push setting) 0110b → 0006 _H |
| Error check | C377 _H | CRC check calculation result → C377 _H |
| End | None | Silent interval |
| Total number of bytes | 27 | |

(Example 7) Change the push current limit from 70% to 50% during a push-motion operation.

| Target position [mm] | Positioning band [mm] | Speed [mm/s] | Acceleration/ deceleration [G] | Push [%] | Control flag |
|----------------------|-----------------------|--------------|--------------------------------|----------|--------------------------------------------|
| 50 | 20 | 100 | 0.3 | 70 → 50 | Push-motion operation (bit1 = 1, bit2 = 1) |

■ Query : 01 10 9907 0002 04 007F 0006 C5C5

■ Response : 01 10 9907 0002 DE95

--- The query message is copied, except for the number of bytes and new data, and returned as a response.

■ Breakdown of Query Message

| Field | RTU mode 8-bit data | Remarks |
|-------------------------------------|---------------------|-------------------------------------------------------------------------------------|
| Start | None | Silent interval |
| Slave address | 01 _H | Axis No. 0 + 1 |
| Function code | 10 _H | |
| Start address | 9907 _H | The start address is the target position specification register 9907 _H . |
| Number of registers | 0002 _H | Specify 9907 _H through 9908 _H as the addresses to be written. |
| Number of bytes | 04 _H | 2 (registers) × 2 = 4 (bytes) → 4 _H |
| New data 8 (push) Input unit [%] | 007F _H | 50 [%] → 7F _H |
| New data 9 (control flag) | 0006 _H | (Push setting) 0110b → 0006 _H |
| Error check | C5C5 _H | CRC check calculation result → C5C5 _H |
| End | None | Silent interval |
| Total number of bytes | 13 | |

[7] Note (changing positioning band during movement)

The positioning band cannot be changed while the actuator is moving.

Conditions: Change the target position, speed and acceleration/deceleration each time the actuator is moved, with the positioning band changed at a given time during movement.
(Cannot be changed. If data is written, the data is reflected in the next positioning.)

Write the target position specification register (9900_H) through acceleration/deceleration specification register (9906_H)



Start normal operation



Write the positioning band specification registers (9902_H and 9903_H)



The actuator continues with the normal operation at the original positioning band setting

Supplement: Writing the positioning band specification registers alone cannot effect an actual movement command.

Therefore, the data changed by writing the positioning band specification registers (9902_H and 9903_H) will become effective when the next movement command is executed.

5.6.2 Writing Position Table Data

(1) Function

Position table data can be changed using this query.

Every time an access is made to the start address list (address +0000_H to +000E_H), it is read out of the non-volatile memory in the unit of 1 position data, and gets stored to the non-volatile memory (EEPROM, FeRAM) after the writing is executed. Check the limit for number of writing from the basic specifications described in an instruction manual for each controller.

* The EEPROM has a rewrite life of approx. 100, 000 times due to device limitations. If the position table data is written frequently, the EEPROM will reach its rewrite life quickly and a failure may occur. Accordingly, be careful not to let unexpected loops, etc., occur due to the logics on the host side. There is no limit to number of writing for FeRAM.

(2) Start address list

In a query input, each address is calculated using the formula below:

$$1000_{\text{H}} + (16 \times \text{Position number})_{\text{H}} + \text{Address (Offset)}_{\text{H}}$$

Example Change the speed command register for position No. 200

$$1000_{\text{H}} + (16 \times 200 = 3200)_{\text{H}} + 4_{\text{H}}$$

$$= 1000_{\text{H}} + \text{C80}_{\text{H}} + 4_{\text{H}}$$

$$= 1\text{C84}_{\text{H}}$$

“1C84” becomes the input value for the start address field of this query.

Note The maximum position number varies depending on the controller model and the PIO pattern currently specified.

■ Position data change registers

| Address | Symbol | Name | Sign | Register size | Byte size | Input unit |
|---------|--------|-----------------------------|------|---------------|-----------|-------------|
| +0000 | PCMD | Target position | ○ | 2 | 4 | 0.01 mm |
| +0002 | INP | Positioning band | | 2 | 4 | 0.01 mm |
| +0004 | VCMD | Speed command | | 2 | 4 | 0.01 mm/sec |
| +0006 | ZNMP | Individual zone boundary + | ○ | 2 | 4 | 0.01 mm |
| +0008 | ZNLP | Individual zone boundary - | ○ | 2 | 4 | 0.01 mm |
| +000A | ACMD | Acceleration command | | 1 | 2 | 0.01 G |
| +000B | DCMD | Deceleration command | | 1 | 2 | 0.01 G |
| +000C | PPOW | Push-current limiting value | | 1 | 2 | % |
| +000D | LPOW | Load current threshold | | 1 | 2 | % |
| +000E | CTLF | Control flag specification | | 1 | 2 | |

* Addresses starting with “+” indicate offsets.

Note RCP6S, RCM-P6PC, RCM-P6AC and RCM-P6DC cannot write in to this address. They return an exceptional response.

(3) Query format

1 register = 2 bytes = 16-bit data

| Field | Number of data items (Number of bytes) | RTU mode 8-bit data | Remarks |
|-------------------------|----------------------------------------|----------------------------------------|------------------------------------------------------------------------------------------------------|
| Start | None | | Silent interval |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) 00 _H when broadcast is specified |
| Function code [H] | 1 | 10 | Numerical value command |
| Start address [H] | 2 | Arbitrary | Refer to 5.6.2 (2), "Start address list." |
| Number of registers [H] | 2 | Arbitrary | Refer to 5.6.2 (2), "Start address list." |
| Number of bytes [H] | 1 | In accordance with the above registers | A value corresponding to twice the number of registers specified above is input. |
| Changed data 1 [H] | 2 | | Refer to "5.6.2 (2) Start address list." |
| Changed data 2 [H] | 2 | | Refer to "5.6.2 (2) Start address list." |
| Changed data 3 [H] | 2 | | Refer to "5.6.2 (2) Start address list." |
| : | : | | : |
| Error check [H] | | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | Up to 256 | | |

(4) Response format

If the change is successful, a response message that is effectively a copy of the query message, except for the byte count and new data, will be returned.

| Field | Number of data items (Number of bytes) | RTU mode 8-bit data | Remarks |
|-------------------------|----------------------------------------|---------------------|------------------------------------------------------------------------------------------------------|
| Start | None | | Silent mode |
| Slave address [H] | 1 | Arbitrary | Axis number + 1 (01 _H to 10 _H) 00 _H when broadcast is specified |
| Function code [H] | 1 | 10 | Numerical value command |
| Start address [H] | 2 | Arbitrary | Refer to 5.6.2 (2), "Start address list." |
| Number of registers [H] | 2 | Arbitrary | Refer to 5.6.2 (2), "Start address list." |
| Error check [H] | 2 | CRC (16 bits) | |
| End | None | | Silent interval |
| Total number of bytes | 8 | | |

(5) Detailed explanation of registers

■ Target Position (PCMD)

This register specifies the target position using absolute coordinates or by an relative distance. The value of this register is set in units of 0.01 mm in a range of -999999 to 999999 ($\text{FFF0BDC1}_H^{(\text{Note } 1)}$ to 000F423F_H). When the absolute coordinate is indicated, operation starts with 0.2mm in front $^{(\text{Note } 2)}$ of the soft limit setting value as the target position if the setting of the parameter exceeds the soft limit. The actuator will start moving when the lower word of this register (symbol: PCMD, address: 9900_H) is rewritten. In other words, **a numerical movement command can be issued simply by writing a target position in this register.**

Note 1 To set a negative value, use a two's complement.

Note 2 For a revolution axis set to Index Mode, the soft limit setting value is the target position.

■ Positioning band Specification Register (INP)

This register is used in two different ways depending on the type of operation. The first way is the normal positioning operation, where it specifies the allowable difference between the target position and current position to be used in the detection of position complete. The second way is the push-motion operation, where it specifies the push-motion band. The value of this register is set in units of 0.01 mm in a range of 1 to 999999 (1_H to 000F423F_H).

Whether the normal operation or push-motion operation is specified by the applicable bit in the control flag specification register as explained later.



Caution: It is necessary that the positioning band is at or more than the value figured out with the formulas below.

- For Servomotor: $\text{Actuator Lead Length} \div \text{Encoder Pulse}$
 - For Pulse Motor: $\text{Actuator Lead Length} \div \text{Encoder Pulse} \times 3$
- Apply the servomotor formula for RCP6 Actuator

■ Speed Specification Register (VCMD)

This register specifies the moving speed in positioning. The value of this register is set in units of 0.01 mm/sec in a range of 1 to 999999 (1_H to 000F423F_H). If the specified value exceeds the maximum speed set by a parameter, an alarm will generate the moment a movement start command is issued.

■ Individual Zone Boundaries \pm (ZNMP, ZNLP)

These registers output zone signals that are effective only during positioning, separately from the zone boundaries set by parameters.

Set in ZNMP the positive zone signal output boundary expressed using absolute coordinates, and set the negative zone signal output boundary in ZNLP. The corresponding bit in the zone register remains ON while the current position is within these positive and negative boundaries. The value of this register is set in units of 0.01 mm, and in a range of -999999 to 999999 ($\text{FFF0BDC1}_H^{(\text{Note } 1)}$ to 000F423F_H) for both registers. However, ZNMP must be greater than ZNLP.

Set the same value in both ZNMP and ZNLP to disable the individual zone output.

(Note) To set a negative value, use a two's complement.

■ Acceleration specification register (ACMD)

This register specifies the acceleration during positioning. The value of this register is set in units of 0.01 G in a range of 1 to 300 (1_H to 012C_H). If the specified value exceeds the maximum acceleration set by a parameter, an alarm will generate the moment a movement start command is issued.

■ Deceleration specification register (DCMD)

This register specifies the deceleration during positioning. The value of this register is set in units of 0.01 G in a range of 1 to 300 (1_H to 012C_H). If the specified value exceeds the maximum deceleration set by a parameter, an alarm will generate the moment a movement start command is issued.

■ Push-current limiting value (PPOW)

Set the current limit during push-motion operation in PPOW. Set an appropriate value by referring to the table below.

| Actuator model name | Pushable range [%] | Settable range (input value) [H] |
|-----------------------------------|----------------------------|----------------------------------|
| Actuator other than RCS2-RA13R | 20 to 70 ^(Note) | 33 to B2 |
| RCS2-RA13R | 20 to 200 | 33 to 1FE |

Note The setting ranges may vary depending on the actuator.

[For details, refer to the IAI catalog or operation manual of each actuator.]

Sample push-motion current setting

● When setting the current to 20%

$255 (100\%) \times 0.2 (20\%) = 51 \rightarrow 33_{\text{H}}$ (Convert into hexadecimal number)

■ Load Output Current Threshold (LPOW)

To perform load output judgment, set the current threshold in LPOW. Set an appropriate value according to the actuator used, just like the push current limit (PPOW). If load output judgment is not performed, set 0.

■ Control Flag Specification Register (CTLF)

[Refer to the control flag specification register in 5.6.1 (5).]

(6) Sample query

A sample query that rewrites all data of position No. 12 of axis No. 0 is shown below.

Axis No. 0

| Target position [mm] | Positioning band [mm] | Speed [mm/sec] | Individual zone boundary+ [mm] | Individual zone boundary- [mm] | Acceleration [G] | Deceleration [G] | Push [%] | Threshold | Movement control |
|----------------------|-----------------------|----------------|--------------------------------|--------------------------------|------------------|------------------|----------|-----------|------------------|
| 100 | 0.1 | 200 | 60 | 40 | 0.01 | 0.3 | 0 | 0 | Normal movement |

■ Query (silent intervals are inserted before and after the query)

01 10 10 C0 00 0F 1E 00 00 27 10 00 00 00 0A 00 00 4E 20 00 00 17 70 00 00 0F A0 00 01
00 1E 00 00 00 00 00 00 70 1E

■ Received response 01 10 10 C0 00 0F 84 F1

--- The query message is copied, except for the number of bytes and new data, and returned as a response.

■ Breakdown of Query Message

| Field | RTU mode 8-bit data | Remarks |
|-------------------------------------------------------------|---------------------|-----------------------------------------------------------------------------------------------------------|
| Start | None | Silent interval |
| Slave address | 01 _H | Axis No. 0 + 1 |
| Function code | 10 _H | |
| Start address | 10C0 _H | The start address is the target position specification register 10C0 _H for position No. 12. *1 |
| Number of registers | 000F _H | Total 15 registers of register symbols PCMD to CTLF are specified to be written. |
| Number of bytes | 1E _H | 15 (registers) × 2 = 30 (bytes) → 1E _H |
| New data 1, 2 (target position) Input unit (0.01 mm) | 0000 _H | All upper bits of the 32-bit data are 0. |
| | 2710 _H | 100 (mm) × 100 = 10000 → 2710 _H |
| New data 3, 4 (positioning band) Input unit (0.01 mm) | 0000 _H | All upper bits of the 32-bit data are 0. |
| | 000A _H | 0.1 (mm) × 100 = 10 → 000A _H |
| New data 5, 6 (speed) Input unit (0.01 mm/sec) | 0000 _H | All upper bits of the 32-bit data are 0. |
| | 4E20 _H | 200 (mm/sec) × 100 = 20000 → 4E20 _H |

Continue to the next page

Continued from the previous page

| Field | RTU mode 8-bit data | Remarks |
|------------------------------------------------------------------------|------------------------|-------------------------------------------------------------------------------------------------|
| New data 7, 8 (individual zone boundary +) Input unit (0.01 mm) | 0000 _H | All upper bits of the 32-bit data are 0. |
| | 1770 _H | 60 (mm) × 100 = 6000 → 1770 _H |
| New data 9, 10 (individual zone boundary -) Input unit (0.01 mm) | 0000 _H | All upper bits of the 32-bit data are 0. |
| | 0FA0 _H | 40 (mm) × 100 = 4000 → 0FA0 _H |
| New data 11 (acceleration) Input unit (0.01 G) | 0001 _H | 0.01 (G) × 100 = 1 → 0001 _H |
| New data 12 (deceleration) Input unit (0.01 G) | 001E _H | 0.3 (G) × 100 = 30 → 001E _H |
| New data 13 (push) Input unit (%) | 0000 _H | 0 (%) → 0 _H |
| New data 14 (threshold) Input unit (%) | 0000 _H | 0 (%) → 0 _H |
| New data 15 (control flag) | 0000 _H | All bits are 0, because normal operation is specified. 0000 _b → 0000 _H |
| Error check | 701E _H | CRC check calculation result → 701E _H |
| End | | Silent interval |
| Total number of bytes | 39 | |

*1) Calculation of start address

In the example, all data of position No. 12 is changed. Accordingly, the target position address of position No. 12 is set in the start address field of this query.

$$\begin{aligned}
 &1000_{\text{H}} + (16 \times 12 = 192)_{\text{H}} + 0_{\text{H}} \\
 &= 1000_{\text{H}} + \text{C0}_{\text{H}} + 0_{\text{H}} \\
 &= 10\text{C0}_{\text{H}}
 \end{aligned}$$

“10C0” becomes the input value for the start address field of this query.

Shown below are the screens of IAI's PC software for RC controllers, indicating how position data changes before and after a query message is sent.

(Note) It is not possible to connect both PC software and Modbus at the same time. The example below shows the case when switching the connection between PC software and Modbus.

■ Before a query is sent

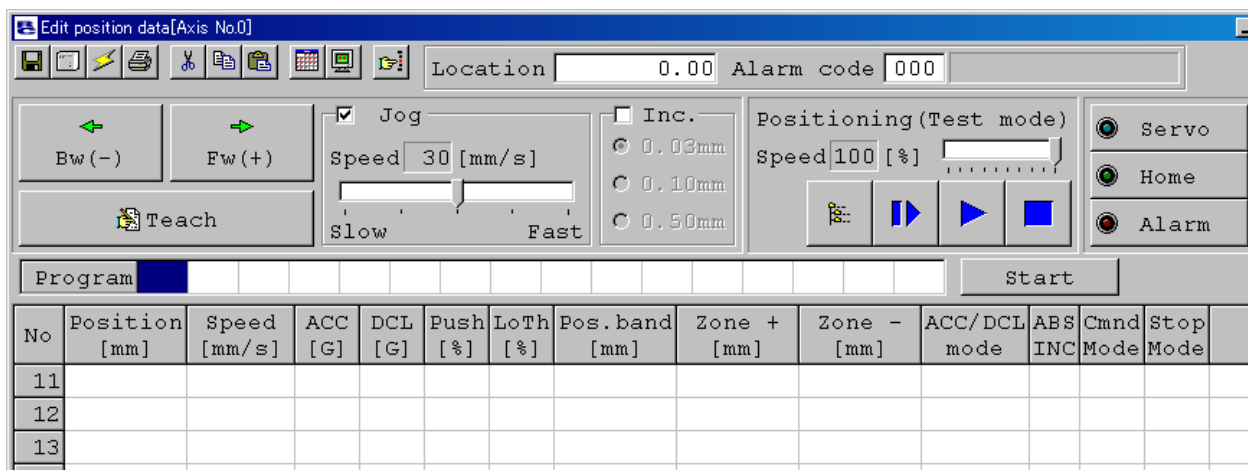


Fig. 5.4

■ After a query is sent

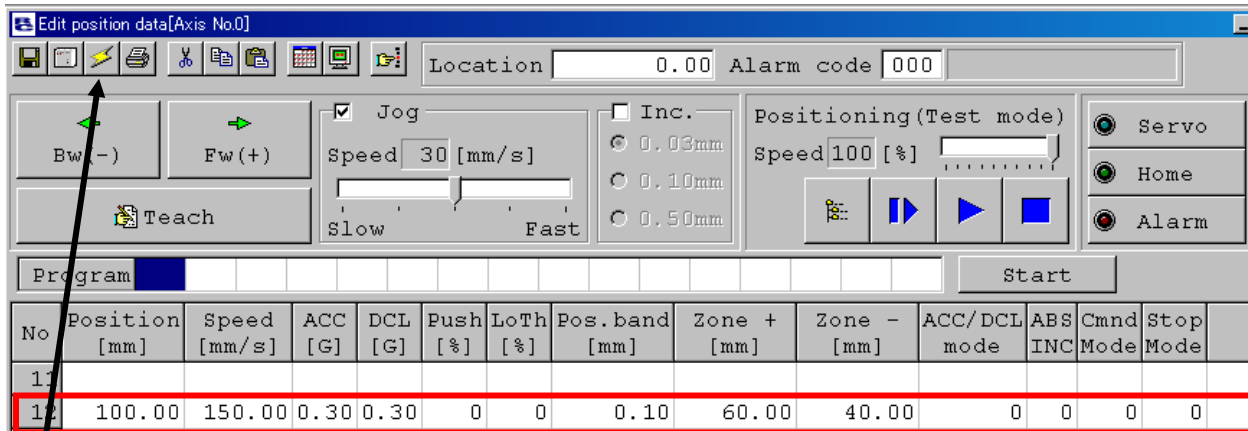



Fig. 5.5

* The overwritten data is not displayed until the button  is pressed or the Edit Position Data window is reopened.

6 Modbus ASCII

Note ROBONET and RCP6S Series + PLC Connection Unit are not applicable for ASCII Mode.

[RCP6S Series: RCP6S, RCM-P6PC, RCM-P6AC, RCM-P6DC]

6.1 Message Frames (Query and Response)

| Start | Address | Function code | Data | LRC Check | End |
|-------------|--------------|---------------|--------------|--------------|--------------|
| 1 character | 2 characters | 2 characters | n characters | 2 characters | 2 characters |
| 1 byte | 2 bytes | 2 bytes | nx2 bytes | 2 bytes | 2 bytes |

* 1 character is expressed with 1 byte (2 characters) in ASCII code (refer to 6.2 “ASCII Code Table”).

(1) Start

The Start field is equivalent to the header field and “:” (colon) is used in the ASCII mode. It is expressed as 3A_H in ASCII code.

(2) Address

This field specifies the addresses of connected RC controllers (01_H to 10_H).

Set $\text{Address} = \text{axis number} + 1$

in ASCII code. Example) The axis number/is 30_H32_H.



Note: The address is not equal to the corresponding axis number: be careful when making settings.

(3) Function

The table below summarizes the function codes and functions that can be used with RC controllers.

| Code | | Name | Function |
|-----------------|---------------------------------|---------------------------|-------------------------------------------|
| [Hex] | (ASCII) | | |
| 01 _H | 30 _H 31 _H | Read Coil Status | Read coils/DOS. |
| 02 _H | 30 _H 32 _H | Read Input Status | Read input statuses/DIs. |
| 03 _H | 30 _H 33 _H | Read Holding Registers | Read holding registers. |
| 04 _H | 30 _H 34 _H | Read Input Registers | Read input registers. |
| 05 _H | 30 _H 35 _H | Force Single Coil | Write one coil/DO. |
| 06 _H | 30 _H 36 _H | Preset Single Register | Write holding register. |
| 07 _H | 30 _H 37 _H | Read Exception Status | Read exception statuses. |
| 0F _H | 30 _H 46 _H | Force Multiple Coils | Write multiple coils/DOS at once. |
| 10 _H | 31 _H 30 _H | Preset Multiple Registers | Write multiple holding registers at once. |
| 11 _H | 31 _H 31 _H | Report Slave ID | Query a slave's ID. |
| 17 _H | 31 _H 37 _H | Read / Write Registers | Read/write registers. |

* This manual uses mark function codes.

* The ROBONET gateway and RCP6S Series + PLC Connection Unit do not support the ASCII mode.

[RCP6S Series: RCP6S, RCM-P6PC, RCM-P6AC, RCM-P6DC]

(4) Data

Use this field to add data specified by a function code. It is also allowed to omit data if data addition is not specified by function codes.

(5) LRC Check

In the ASCII mode, an error check field conforming to the LRC method is automatically (*) included in order to check the message content excluding the first colon and CR/LF. Moreover, checking is carried out regardless of the parity check method of individual characters in messages.

The LRC field consists of two ASCII code characters. The LRC value is calculated by the sender that appends the LRC field to the message. The recipient recalculates the LRC value while receiving the message, and compares the calculation result against the actual value received in the LRC field. If the two values do not match, an error will generate.

* The host side must create a function that calculates the LRC value.

- <LRC check calculation example>  area is the target range of error check

In case the message query is as follows: [":"] ["01"] ["05"] ["040B"] ["0000"] [LRC] [CR] [LF]

- [1] First, add all numerical values in units of bytes.

$$\text{Total value added} = 01_H + 05_H + 04_H + 0B_H + 00_H + 00_H = 15_H$$

- [2] Next, an 8-bit-based 2's complement of this value is computed, yielding the value FFFFFFFB_H. The LRC value is obtained by extracting the least significant byte. Thus the LRC value is "EB."

(6) End

This is equivalent to the trailer, and use "CR/LF" in the ASCII mode. In ASCII code, 00_H and 0A_H are displayed.

(7) Broadcast

It is possible to send a query containing same data to all connected axes by specifying the address 00_H. In this case, no response is returned from the RC controllers.

Note, however, that the function codes etc. that can be used with this function are limited; care should be taken when using the function. Please check the function codes that can be used in 6.3, "List of ASCII Mode Queries."

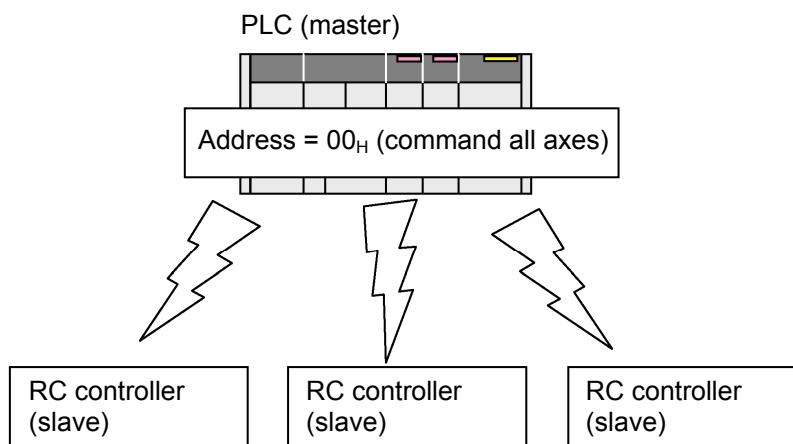


Fig.6.1

**Caution**

- The sizes of send/receive buffers are set to 256 bytes for the RC controllers, respectively. Make sure to keep the messages small enough such that messages sent from the host side do not exceed the receive buffer and data requests do not exceed send buffer.
- If the number of data items results in an odd number of bytes, caution must be taken for the reasons below.

The data is communicated on a byte-by-byte basis in Modbus communication.

In many cases, however, the data is treated in units of 2 bytes on the master side. If the number of data items becomes odd, 00_H (i.e., NULL) may be added automatically at the end of a packet in some cases.

RC controllers are configured such that the Modbus RTU is basically used as the interface on the master side. Since the controller normally stands by for reception in the RTU mode, and then makes judgment whether the code is ASCII or not after the reception, it cannot manage header/delimiter fields. For this reason, communication in the ASCII mode is disabled in such cases.

Example: In case of querying output ports of axis No. 0

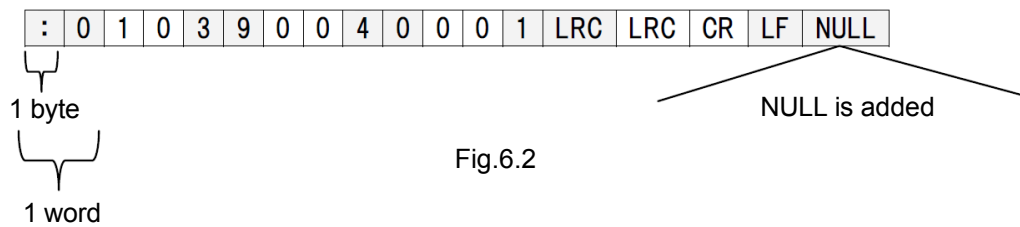


Fig.6.2

6.2 ASCII Code Table

ASCII Code (numbers and characters enclosed with □ are converted and sent.)

| Most significant 3bit Least significant 4bit | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 |
|----------------------------------------------------------|-----|-----|----|---|---|---|---|-----|
| 0 | NUL | DLE | SP | 0 | @ | P | | p |
| 1 | SOH | DC1 | ! | 1 | A | Q | a | q |
| 2 | STX | DC2 | “ | 2 | B | R | b | r |
| 3 | ETX | DC3 | # | 3 | C | S | c | s |
| 4 | EOT | DC4 | \$ | 4 | D | T | d | t |
| 5 | ENQ | NAK | % | 5 | E | U | e | u |
| 6 | ACK | SYN | & | 6 | F | V | f | v |
| 7 | BEL | ETB | ‘ | 7 | G | W | g | w |
| 8 | BS | CAN | (| 8 | H | X | h | x |
| 9 | HT | EM |) | 9 | I | Y | i | y |
| A | LF | SUB | * | : | J | Z | j | z |
| B | VT | ESC | + | ; | K | [| k | { |
| C | FF | IS4 | , | < | L | ¥ | l | |
| D | CR | IS4 | — | = | M |] | m | } |
| E | SO | IS4 | . | > | N | ^ | n | |
| F | SI | IS4 | / | ? | O | — | o | DEL |

- NUL: Null character
- ETX: End of text
- ACK: Acknowledgment
- HT: Horizontal tab
- FF: Form feed
- SI: Shift in
- NAC: Negative acknowledgment
- CAN: Cancel
- ESC: Escape
- SOH: Start of header
- EOT: End of transmission
- BEL: Bell
- LF: Line feed
- CR: Carriage return
- DLE: Data link escape
- SYN: Synchronized characters
- EM: End of media
- SP: Space
- STX: Start of text
- ENQ: Enquiry
- BS: Backspace
- VT: Vertical tab
- SO: Shift out
- DC*: Device control *
- ETB: End of transmission block
- DEL: Delete

Example: “1” is 31_H in ASCII code and “00110001” in binary number presentation.

6.3 List of ASCII Mode Queries

FC : Function code

PIO: Parallel I/O (input/output of an I/O connector)

The circle marks in the Simultaneous use with PIO and Broadcast columns indicate queries that can be used simultaneously with PIO and in broadcast communication, respectively.

| FC | Function | Symbol | Function | Combination with PIO | Broad- cast | Page |
|----|-------------------------------------------------------------------------------------|----------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------|----------------|------|
| 03 | Multiple FC03 register reading | None | This function can be used to successively read multiple registers that use function 03. | ○ | | 215 |
| 03 | Alarm detail description reading | ALA0 ALC0 ALT0 | This bit reads the alarm codes, alarm addresses, detail codes and alarm occurrence time (passed time) that lately occurred. | ○ | | 219 |
| 03 | Position data reading | Refer to right | This bit reads the indicated number in the position data. (PCMD, INP, VCMD, ZNMP, ZNLP, ACMD, DCMD, PPOW, LPOW, CTLF) | ○ | | 221 |
| 03 | Total moving count reading | TLMC | This bit reads the Total moving count. | ○ | | 224 |
| 03 | Total moving distance reading | ODOM | This bit reads the Total moving distance in units of 1 m. | ○ | | 226 |
| 03 | Present time reading | TIMN | This bit reads the present time. (PCON-CA/CFA/CB/CFB, ACON-CA/CB, DCON-CA/CB and SCON-CA/CAL/CB only) | ○ | | 228 |
| 03 | Total FAN driving time reading | TFAN | This bit reads the Total FAN driving time. (PCON-CFA/CFB, SCON-CAL, SCON-CB [400W or more] only) | ○ | | 231 |
| 03 | Current position reading | PNOW | This function reads the current actuator position in units of 0.01 mm. | ○ | | 233 |
| 03 | Present alarm code reading | ALMC | This function reads alarm codes that are presently detected. | ○ | | 235 |
| 03 | I/O port input status reading | DIPM | This function reads the ON/OFF statuses of PIO input ports. | ○ | | 237 |
| 03 | I/O port output status reading | DOPM | This function reads the ON/OFF statuses of PIO output ports. | ○ | | 242 |
| 03 | Controller status signal reading 1 (device status 1) (Operation preparation status) | DSS1 | This function reads the following 14 statuses: [1] Emergency stop [2] Safety speed enabled/disabled [3] Controller ready [4] Servo ON/OFF [5] Missed work part in push-motion operation [6] Major failure [7] Minor failure [8] Absolute error [9] Brake [10] Pause [11] Home return completion [12] Position complete [13] Load cell calibration complete [14] Load cell calibration status | ○ | | 247 |

| FC | Function | Symbol | Function | Combination with PIO | Broad-cast | Page |
|----|----------------------------------------------------------------------------------------------|--------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------|------------|------|
| 03 | Controller status signal reading 2 (device status 2) (Operation preparation 1 status) | DSS2 | This function reads the following 15 statuses: [1] Enable [2] Load output judgment (check-range load current threshold) [3] Torque level (load current threshold) [4] Teaching mode (normal/teaching) [5] Position data load (normal/complete) [6] Jog+ (normal/command active) [7] Jog- (normal/command active) [8] Position complete 7 [9] Position complete 6 [10] Position complete 5 [11] Position complete 4 [12] Position complete 3 [13] Position complete 2 [14] Position complete 1 [15] Position complete 0 | ○ | | 249 |
| 03 | Controller status signal reading 3 (extended device status) (Operation preparation 2 status) | DSSE | This function reads the following 9 statuses: [1] Emergency stop (emergency stop input port) [2] Motor voltage low [3] Operation mode (AUTO/MANU) [4] Home return [5] Push-motion operation in progress [6] Excitation detection [7] PIO/Modbus switching [8] Position-data write completion status [9] Moving | ○ | | 251 |
| 03 | Controller status signal reading 4 (System status) (Controller status) | STAT | This function reads the following 7 statuses: [1] Automatic servo OFF [2] Nonvolatile memory being accessed [3] Operation mode (AUTO/MANU) [4] Home return completion [5] Servo ON/OFF [6] Servo command [7] Drive source ON (normal/cut off) | ○ | | 253 |
| 03 | Current speed reading | VNOW | This function reads the current actuator speed in units of 0.01 mm/sec. | ○ | | 255 |
| 03 | Current ampere reading | CNOW | This function reads the motor-torque current command value of the actuator in mA. | ○ | | 257 |
| 03 | Deviation reading | DEVI | This function reads the deviation over a 1-ms period in pulses. | ○ | | 259 |
| 03 | Total power on time reading | STIM | This function reads the total time in msec since the controller power was turned on. | ○ | | 261 |
| 03 | Special input port input signal status reading (Sensor input status) | SIPM | This function reads the following 8 statuses: [1] Command pulse NP [2] Command pulse PP [3] Mode switch [4] Belt breakage sensor [5] Home check sensor [6] Overtravel sensor [7] Creep sensor [8] Limit sensor | ○ | | 263 |

| FC | Function | Symbol | Function | Combination with PIO | Broad-cast | Page |
|----|-----------------------------------------------|--------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------|------------|------|
| 03 | Zone status query | ZONS | This function reads the following 6 statuses: [1] LS2 (PIO pattern solenoid valve mode [3-point type]) [2] LS1 (PIO pattern solenoid valve mode [3-point type]) [3] LS0 (PIO pattern solenoid valve mode [3-point type]) [4] Position zone [5] Zone 2 [6] Zone 1 | ○ | | 265 |
| 03 | Positioning completed position number reading | POSS | This function reads the following next statuses: Complete position number bit 256 to 1 | ○ | | 267 |
| | Executed program number register reading | | Executed program number bit 32 to 1 | | | |
| 03 | Controller status signal reading 5 | SSSE | This function reads the following 2 statuses: [1] Cold start level alarm occurred/not occurred [2] RTC (calendar) function used/not used (ERC3, PCON-CA/CFA/CB/CFB, ACON-CA/CB and DCON-CA/CB only) | ○ | | 269 |
| 03 | Current load reading | FBFC | The current measurement on the load cell is read in units of 0.01 N. | ○ | | 271 |
| 03 | Press program status register reading | PPST | This function reads the following 12 statuses: [1] Waiting [2] While in returning operation [3] While in depression operation [4] Pressurize during the stop [5] While in pressurizing operation [6] While in probing operation [7] While in approaching the operation [8] Program home return during the movement [9] Program alarm [10] Program finished in normal condition [11] While in executing program [12] Program home position | ○ | | 279 |
| 03 | Press program judgement status register | PPJD | This function reads the following 6 statuses: [1] Load judgement NG [2] Load judgement OK [3] Position (distance) judgement NG [4] Position (distance) judgement OK [5] Total judgement NG [6] Total judgement OK | ○ | | 281 |
| 05 | Safety speed mode switching | SFTY | This function issues a command to enable/disable the safety speed. | | ○ | 284 |
| 05 | Servo ON/OFF | SON | This function issues a command to turn the servo ON/OFF. | | ○ | 286 |

| FC | Function | Symbol | Function | Combination with PIO | Broad-cast | Page |
|----------------|---------------------------------------|------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------|------------|------|
| 05 | Alarm reset | ALRS | This function issues a command to reset alarms/cancel the remaining travel. | | ○ | 288 |
| 05 | Brake forced release | BKRL | This function issues a command to forcibly release the brake. | | ○ | 290 |
| 05 | Pause | STP | This function issues a pause command. | | ○ | 292 |
| 05 | Home return | HOME | This function issues a home return operation command. | | ○ | 294 |
| 05 | Positioning start command | CSTR | This signal starts a position number specified movement. | | ○ | 296 |
| 05 | Jog/inch switching | JISL | This function switches between the jogging mode and the inching mode | | ○ | 298 |
| 05 | Teaching mode command | MOD | This function switches between the normal mode and the teaching mode | | ○ | 300 |
| 05 | Position data load | TEAC | This function issues a current position load command in the teaching mode. | | ○ | 302 |
| 05 | Jog+ command | JOG+ | This function issues a jogging/inching command in the direction opposite home. | | ○ | 304 |
| 05 | Jog- command | JOG- | This function issues a jogging/inching command in the direction of home. | | ○ | 306 |
| 05 | Position number command 0 to 7 | ST0 to ST7 | This function specifies position numbers effective only in the solenoid valve mode. The actuator can be operated with this command alone. | | ○ | 308 |
| 05 | Load cell calibration command | CLBR | Calibrate the load cell. | | ○ | 310 |
| 05 | PIO/Modbus switching setting | PMSL | This function issues a command to enable/disable PIO external command signals. | | ○ | 312 |
| 05 | Deceleration stop | STOP | This function can decelerate the actuator to a stop. | | ○ | 314 |
| 05 | Axis operation permission | ENMV | Setting can be made whether to permit the operation of the connected axes. | | ○ | 316 |
| 05 | Program home return movement | PHOM | Movement is made to the program home position set in each press program. | | ○ | 318 |
| 05 | Search stop | SSTP | It can be stopped after search operation is complete. | | ○ | 320 |
| 05 | Program compulsoly finish | FPST | It compulsoly finishes the press program. | | ○ | 322 |
| 05 | Program exected | PSTR | Press program execute it. | | ○ | 324 |
| 06 | Direct writing of control information | | Change (write) the content of the controller's register. | | ○ | 326 |
| 10 | Numerical value movement command | None | This function can be used to send the target position, positioning band, speed, acceleration/deceleration, push, and control setting in a single message to operate the actuator. Normal movement, relative movement and push-motion operation are supported. | | ○ | 330 |
| 10 | Write Position data table | None | This function can be used to change all data of the specified position number for the specified axis. | | ○ | 348 |
| Indeterminable | Exception response | None | This response will be returned when the message contains invalid data. | | | 357 |

6.4 Data and Status Reading (Used function code 03)

6.4.1 Reading Consecutive Multiple Registers

*) Please refer to
"6.2 ASCII Code Table."

(1) Function

These registers read the contents of registers in a slave.

This function is not supported in broadcast communication.

(2) Start address list

With RC Series controllers, the sizes of send/receive buffers are set to 256 bytes, respectively. Accordingly, a maximum of 123 registers worth of data consisting of 247 bytes (one register uses two bytes), which is 9 bytes (header + slave address + function code + error check + trailer) of 256 bytes, can be queried in the ASCII mode. In other words, all of the data listed below can be queried in a single communication. It is also available to refer to multiple registers of the addresses in a row at one time of sending and receiving.

| Address [H] | Symbol | Name | Sign | Register size | Byte |
|-------------------------------------------------------------------------------------------------------|--------|-------------------------------------------------------------------|------|---------------|------|
| 0500 | ALA0 | Alarm detail code | | 1 | 2 |
| 0501 | ALA0 | Alarm address | | 1 | 2 |
| 0502 | - | Always 0 | - | - | 2 |
| 0503 | ALC0 | Alarm code | | 1 | 2 |
| 0504,0505 | ALT0 | Alarm occurrence time | | 2 | 4 |
| 1000 to 3FFF (Note) Assignment is made in order from small position numbers. | PCMD | Target position | ○ | 2 | 4 |
| | INP | Positioning band | ○ | 2 | 4 |
| | VCMD | Speed command | | 2 | 4 |
| | ZNMP | Individual zone boundary + | ○ | 2 | 4 |
| | ZNLP | Individual zone boundary - | ○ | 2 | 4 |
| | ACMD | Acceleration command | | 1 | 2 |
| | DCMD | Deceleration command | | 1 | 2 |
| | PPOW | Push-current limiting value | | 1 | 2 |
| | LPOW | Load current threshold | | 1 | 2 |
| | CTLF | Control flag specification | | 1 | 2 |
| 8400, 8401 | TLMC | Total moving count ^(Note1) | | 2 | 4 |
| 8402, 8403 | ODOM | Total moving distance ^(Note1) | | 2 | 4 |
| 841E, 841F | TIMN | Present time (SCON-CA/CAL/CB only) | | 2 | 4 |
| 8420, 8421 | TIMN | Present time (PCON-CA/CFA/CB/CFB only) | | 2 | 4 |
| 8422, 8423 | TIMN | Present time (ACON-CA/CB and DCON-CA/CB only) | | 2 | 4 |
| 842A, 842B | TFAN | Total FAN driving time (SCON-CAL, SCON-CB [400W or more] only) | | 2 | 4 |
| 842E, 842F | TFAN | Total FAN driving time (PCON-CFA/CFB only) | | 2 | 4 |

| Address [H] | Symbol | Name | Sign | Register size | Byte |
|-------------|--------|----------------------------------------------------------------------------------------------|------|---------------|------|
| 9000, 9001 | PNOW | Current position monitor | ○ | 2 | 4 |
| 9002 | ALMC | Present alarm code query | | 1 | 2 |
| 9003 | DIPM | Input port query | | 1 | 2 |
| 9004 | DOPM | Output port monitor query | | 1 | 2 |
| 9005 | DSS1 | Device status query 1 | | 1 | 2 |
| 9006 | DSS2 | Device status query 2 | | 1 | 2 |
| 9007 | DSSE | Expansion device status query | | 1 | 2 |
| 9008, 9009 | STAT | System status query | | 2 | 4 |
| 900A, 900B | VNOW | Current speed monitor | ○ | 2 | 4 |
| 900C, 900D | CNOW | Current ampere monitor | ○ | 2 | 4 |
| 900E, 900F | DEVI | Deviation monitor | ○ | 2 | 4 |
| 9010, 9011 | STIM | System timer query | | 2 | 4 |
| 9012 | SIPM | Special input port query | | 1 | 2 |
| 9013 | ZONS | Zone status query | | 1 | 2 |
| 9014 | POSS | Positioning complete position No. status query Exected program No. register (Servo Press) | | 1 | 2 |
| 9015 | SSSE | Expansion system status register | | 1 | 2 |
| 901E | FBFC | Current load monitor | ○ | 2 | 4 |
| 9020 | OLLV | Overload level monitor | | 1 | 2 |
| 9022 | ALMP | Press program alarm code | | 1 | 2 |
| 9023 | ALMP | Alarm generated press program No. | | 1 | 2 |
| 9024 | PPST | Pres program status register | | 1 | 2 |
| 9025 | PPJD | Press program judgements status register | | 1 | 2 |

Note 1 PCON-CA/CFA/CB/CFB/CYB/PLB/POB, ACON-CA/CB/CYB/PLB/POB, DCON-CA/CB/CYB/PLB/POB, SCON-CA/CAL/CB, ERC3, RCP6S, RCM-P6PC, RCM-P6AC and RCM-P6DC only

(3) Query format

In a query message, specify the address of the register from which to start reading data, and number of bytes in registers to be read.

1 register = 2 bytes = 16-bit data

| Field | Number of characters (Number of bytes) | ASCII mode fixed character string | Remarks |
|-------------------------|-------------------------------------------|--------------------------------------|-------------------------------------------------------|
| Header | 1 | “.” | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 2 | ‘0’, ‘3’ | Register reading code |
| Start address [H] | 4 | Arbitrary | Refer to 6.4.1 (2), “Start address list.” |
| Number of registers [H] | 4 | Arbitrary | Refer to “Start address list.” |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | ‘CR’, ‘LF’ | |
| Total number of bytes | 17 | | |

(4) Response format

| Field | Number of characters (Number of bytes) | ASCII mode fixed character string | Remarks |
|--------------------------|-------------------------------------------|--------------------------------------|--------------------------------------------------------|
| Header | 1 | “.” | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 2 | ‘0’, ‘3’ | “Read Holding Registers” code |
| Number of data bytes [H] | 2 | | Number of specified registers in a query format × 2 |
| Data 1 [H] | 4 | | |
| Data 2 [H] | 4 | | |
| Data 3 [H] | 4 | | |
| Data 4 [H] | 4 | | |
| : | : | | |
| : | : | | |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | ‘CR’, ‘LF’ | |
| Total number of bytes | Up to 256 | | |

(5) Sample query

A sample query that reads addresses 9000_H to 9009_H in a RC controller of axis No. 0 is shown below:

Query: 010390000000A62 [CR][LF]

| Field | ASCII mode fixed character string | Converted ASCII code data [H] |
|-------------------------|--------------------------------------------------|----------------------------------|
| Header | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '3' | 3033 |
| Start address [H] | '9', '0', '0', '0' | 39303030 |
| Number of registers [H] | '0', '0', '0', 'A' | 30303041 |
| Error check [H] | '6', '2' (in accordance with LRC calculation) | 3632 |
| Trailer | 'CR', 'LF' | 0D0A |

The response to the query is as follows.

Response: 010314000000000000B80162002000800031C7000800111C [CR][LF]

| Field | ASCII mode fixed character string | Converted ASCII code data [H] |
|--------------------------|--------------------------------------------------|-------------------------------|
| Header | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '3' | 3033 |
| Number of data bytes [H] | '1', '4' (20 bytes = 10 registers) | 3134 |
| Data 1 [H] | '0', '0', '0', '0', '0', '0', '0', '0' | 3030303030303030 |
| Data 2 [H] | '0', '0', '0', '0' | 30303030 |
| Data 3 [H] | 'B', '8', '0', '1' | 42383031 |
| Data 4 [H] | '6', '2', '0', '0' | 36323030 |
| Data 5 [H] | '2', '0', '0', '0' | 32303030 |
| Data 6 [H] | '8', '0', '0', '0' | 38303030 |
| Data 7 [H] | '3', '1', 'C', '7' | 33314337 |
| Data 8 [H] | '0', '0', '0', '8', '0', '0', '1', '1' | 3030303830303131 |
| Error check [H] | '1', 'C' (in accordance with LRC calculation) | 3143 |
| Trailer | 'CR', 'LF' | 0D0A |

Note The data of the response example is simply an example and will vary depending on various conditions.

6.4.2 Alarm Detail Description Reading <<ALA0, ALC0, ALT0>>

(1) Function

This bit reads the alarm codes, alarm detail codes and alarm occurrence time that lately occurred. When any alarm is not issued, it is "0_H". [Refer to 4.3.2 (1) to (3) for detail]

(2) Query format

| Field | Number of characters | ASCII mode character string (fixed) | Remarks |
|-------------------------|----------------------|-------------------------------------|-------------------------------------------------------------|
| Header | 1 | ':' | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 2 | '0', '3' | Register reading |
| Start address [H] | 4 | '0', '5', '0', '0' | Alarm detail code |
| Number of registers [H] | 4 | '0', '0', '0', '6' | Reading addresses 0500 _H to 0505 _H |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 4 | 'CR', 'LF' | |
| Total number of bytes | 17 | | |

(3) Response format

A response message contains 16 bits of data per register.

| Field | Number of characters | ASCII mode character string (fixed) | Remarks |
|--------------------------|----------------------|---------------------------------------------|----------------------------------------------------------------------------------------|
| Header | 1 | ':' | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 2 | '0', '3' | Register reading |
| Number of data bytes [H] | 2 | '0', 'C' | Reading 6 registers = 12 bytes |
| Data 1 [H] | 8 | Alarm detail code Alarm address | Alarm detail code(0500 _H) [Hex] Alarm address(0501 _H) [Hex] |
| Data 2 [H] | 8 | Alarm code | Alarm code [Hex] |
| Data 3 [H] | 8 | Alarm occurrence time ^(Note1) | Alarm occurrence time [Hex] |
| Error check [H] | 2 | 'CR', 'LF' | |
| Trailer | 2 | | |
| Total number of bytes | 35 | | |

Note 1 The contents of data differ for the case when the model is equipped with RTC (calendar) function and RTC is effective [1] and the case when RTC is ineffective or the model is not equipped with RTC [2].

[1] It shows the alarm occurrence time.

[2] It shows the time [msec] passed since the power was turned on.

(4) Query sample

A sample query that reads the contents of last occurred alarm (addresses 0500_H to 0505_H) of a controller with axis No. 0 is shown below.

Query: 010305000006F [CR][LF]

| Field | ASCII mode fixed character string | Converted ASCII code data [H] |
|-------------------------|--------------------------------------------------|----------------------------------|
| Header | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '3' | 3033 |
| Start address [H] | '0', '5', '0', '0' | 30353030 |
| Number of registers [H] | '0', '0', '0', '6' | 30303036 |
| Error check | 'F', '1' (in accordance with CRC calculation) | 4631 |
| Trailer | 'CR', 'LF' | 0D0A |

The response to the query is as follows.

Response: 01030C0000FFFF00000E8172C643F24[CR][LF]

| Field | ASCII mode fixed character string | Converted ASCII code data [H] |
|--------------------------|--------------------------------------------------|----------------------------------|
| Header | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '3' | 3033 |
| Number of data bytes [H] | '0', 'C' (12 bytes = 6 registers) | 3034 |
| Data 1 [H] | '0', '0', '0', '0' | 30303030 |
| Data 2 [H] | 'F', 'F', 'F', 'F' | 46464646 |
| Data 3 [H] | '0', '0', '0', '0', '0', '0', 'E', '8' | 3030303030304538 |
| Data 4 [H] | '1', '7', '2', 'C', '6', '4', '3', 'F' | 3137324336343346 |
| Error check [H] | '2', '4' (in accordance with LRC calculation) | 3234 |
| Trailer | 'CR', 'LF' | 0D0A |

Alarm detail code: 0000_H····No detail code

Alarm address: FFFF_H····Disable(no detail code)

Alarm code: 00E8_H=0E8····Encoder AB phase break error

Alarm occurrence time: 172C643F_H(conversion)⇒2012/04/26 19:53:35[Conversion is refer to the Section 4.3.2(4)]

Note 1 The data of the response example is simply an example and will vary depending on various conditions.

Note 2 For the detail of an alarm code, check in the instruction manual of the each controller.

6.4.3 Position Data Description Reading

<<PCMD, INP, VCMD, ZNMP, ZNLP, ACMD, DCMD, PPOW, LPOW, CTLF>>

(1) Function

This reads the value set in the indicated position number.

(2) Start address list

With RC Series controllers, the sizes of send/receive buffers are set to 256 bytes, respectively.

Accordingly, a maximum of 123 registers' worth of data consisting of 251 bytes (one register uses two bytes), except 9 bytes (header + slave address + function code + error check + trailer) of the above 247 bytes, can be queried in the ASCII mode. In other words, all of the data listed below can be queried in a single communication.

It is also available to refer to multiple registers of the addresses in a row at one time of sending and receiving.

| Address [H] | Top Address of Each Position Number [H] | Offset from Top Address [H] | Symbol | Registers name | Sign | Register size | Byte | Unit |
|--------------|----------------------------------------------------------|-----------------------------|--------|-----------------------------|------|---------------|------|-------------------------------|
| 1000 to 3FFF | Top Address = $1000_H + (16 \times \text{position No.})$ | +0 | PCMD | Target position | ○ | 2 | 4 | 0.01mm |
| | | +2 | INP | Positioning band | ○ | 2 | 4 | 0.01mm |
| | | +4 | VCMD | Speed command | | 2 | 4 | 0.01mm/s |
| | | +6 | ZNMP | Individual zone boundary + | ○ | 2 | 4 | 0.01mm |
| | | +8 | ZNLP | Individual zone boundary - | ○ | 2 | 4 | 0.01mm |
| | | +A | ACMD | Acceleration command | | 1 | 2 | 0.01G |
| | | +B | DCMD | Deceleration command | | 1 | 2 | 0.01G |
| | | +C | PPOW | Push-current limiting value | | 1 | 2 | % (100%= FF _H) |
| | | +D | LPOW | Load current threshold | | 1 | 2 | % (100%= FF _H) |
| | | +E | CTLF | Control flag specification | | 1 | 2 | |

In a query input, each address is calculated using the formula below:

$1000_H + (16 \times \text{Position number})_H + \text{Address (Offset)}_H$

Example Change the speed command register for position No. 200

$1000_H + (16 \times 200 = 3200)_H + 4_H$

$= 1000_H + C80_H + 4_H$

$= 1C84_H$

"1C84" becomes the input value for the start address field of this query.

Note The maximum position number varies depending on the controller model and the PIO pattern currently specified.

Note RCP6S, RCM-P6PC, RCM-P6AC and RCM-P6DC return 0_H in all the addresses once they read this address.

(3) Query format

In a query message, specify the address of the register from which to start reading data, and number of bytes in registers to be read.

1 register (1 address) = 2 bytes = 16-bit data

| Field | Number of characters (number of bytes) | ASCII mode character string | Remarks |
|-------------------------|-------------------------------------------|--------------------------------|----------------------------------------------------------|
| Header | 1 | ‘.’ | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 2 | ‘0’, ‘3’ | Register reading |
| Start address [H] | 4 | Arbitrary | Refer to (2), "Start address list" |
| Number of registers [H] | 4 | Arbitrary | |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | ‘CR’, ‘LF’ | |
| Total number of bytes | 17 | | |

(4) Response format

A response message contains 16 bits of data per register.

| Field | Number of characters (number of bytes) | ASCII mode character string (fixed) | Remarks |
|--------------------------|-------------------------------------------|----------------------------------------|-----------------------------------------------------------------|
| Header | 1 | ‘.’ | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 2 | ‘0’, ‘3’ | Register reading |
| Number of data bytes [H] | 2 | | Total number of bytes of registers specified in the query |
| Data 1 [H] | 4 | | |
| Data 2 [H] | 4 | | |
| Data 3 [H] | 4 | | |
| Data 4 [H] | 4 | | |
| : | : | | |
| : | : | | |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | | ‘CR’, ‘LF’ | |
| Total number of bytes | Up to 256 | | |

(5) Query sample

Shown below is an example for a use referring to the target position, positioning band and Speed command in Position No. 1 (Address 1010_H to 1015_H) on Axis No. 0 controller.

Query: 010310100006D6 [CR][LF]

| Field | ASCII mode fixed character string | Converted ASCII code data [H] |
|-------------------------|--------------------------------------------------|----------------------------------|
| Header | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '3' | 3033 |
| Start address [H] | '1', '0', '1', '0' | 31303130 |
| Number of registers [H] | '0', '0', '0', '6' (6 registers) | 30303036 |
| Error check [H] | 'D', '6' (in accordance with CRC calculation) | 4436 |
| Trailer | 'CR', 'LF' | 0D0A |

The response to the query is as follows.

- Response (silent intervals are inserted before and after the response)

01030C000007D000001F4000003A98E8 [CR][LF]

| Field | ASCII mode fixed character string | Converted ASCII code data [H] |
|--------------------------|-----------------------------------------------------------------|----------------------------------|
| Header | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '3' | 3033 |
| Number of data bytes [H] | '0', 'C' (12 bytes = 6 registers) | 3034 |
| Data 1 [H] | '0', '0', '0', '0', '0', '7', 'D', '0' (target position query) | 3030303030374430 |
| Data 2 [H] | '0', '0', '0', '0', '1', 'F', '4', '0' (positioning band query) | 3030303031463430 |
| Data 3 [H] | '0', '0', '0', '0', '3', 'A', '9', '8' (speed command query) | 303030303413938 |
| Error check [H] | 'E', '8' (in accordance with LRC calculation) | 4538 |
| Trailer | 'CR', 'LF' | 0D0A |

Target position "7D0_H" → Convert into decimal number → 2000×[unit 0.01mm]= 20.00[mm]

Positioning band "1F40_H" → Convert into decimal number → 8000×[unit 0.01mm]= 80.00[mm]

Speed command "3A98_H" → Convert into decimal number → 15000×[unit 0.01mm]= 150.00[mm]

Note If the response example is simply an example and will vary depending on various conditions.

6.4.4 Total moving count Reading <<TLMC>>

(1) Function

This bit reads the total moving count.
[Refer to Section 4.3.2(8)]

(2) Query format

| Field | Number of characters (number of bytes) | ASCII mode character string (fixed) | Remarks |
|-------------------------|-------------------------------------------|----------------------------------------|-------------------------------------------------------------|
| Header | 1 | ':' | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 2 | '0', '3' | Register reading |
| Start address [H] | 4 | '8', '4', '0', '0' | Total moving count |
| Number of registers [H] | 4 | '0', '0', '0', '2' | Reading addresses 8400 _H to 8401 _H |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 4 | 'CR', 'LF' | |
| Total number of bytes | 17 | | |

(3) Response format

A response message contains 16 bits of data per register.

| Field | Number of characters (number of bytes) | ASCII mode character string (fixed) | Remarks |
|--------------------------|-------------------------------------------|----------------------------------------|------------------------------------------------------------------------------|
| Header | 1 | ':' | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 2 | '0', '3' | Register reading |
| Number of data bytes [H] | 2 | '0', '4' | Reading 2 registers = 4 bytes |
| Data 1 [H] | 4 | Total moving count | Total moving count(0500 _H) [Hex] (most significant digit) |
| Data 2 [H] | 4 | Total moving count | Total moving count(0501 _H) [Hex] (least significant digit) |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | 'CR', 'LF' | |
| Total number of bytes | 19 | | |

(4) Query sample

A sample query that reads the Total moving count (addresses 8400_H to 8401_H) of a controller with axis No. 0 is shown below.

Query: 01038400000276 [CR][LF]

| Field | ASCII mode fixed character string | Converted ASCII code data [H] |
|-------------------------|--------------------------------------------------|----------------------------------|
| Header | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '3' | 3033 |
| Start address [H] | '8', '4', '0', '0' | 38343030 |
| Number of registers [H] | '0', '0', '0', '2' | 30303032 |
| Error check [H] | '7', '6' (in accordance with CRC calculation) | 3736 |
| Trailer | 'CR', 'LF' | 0D0A |

The response to the query is as follows.

Response: 0103040000021FD7[CR][LF]

| Field | ASCII mode fixed character string | Converted ASCII code data [H] |
|--------------------------|--------------------------------------------------|----------------------------------|
| Header | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '3' | 3033 |
| Number of data bytes [H] | '0', '4' | 3034 |
| Data 1 [H] | '0', '0', '0', '0' | 30303030 |
| Data 2 [H] | '0', '2', '1', 'F' | 30323146 |
| Error check [H] | 'D', '7' (in accordance with LRC calculation) | 4337 |
| Trailer | 'CR', 'LF' | 0D0A |

The Total moving count is "21F_H" → Convert into decimal number → 543[times]

Note The data of the response example is simply an example and will vary depending on various conditions.

6.4.5 Total moving distance Reading <<ODOM>> (in 0.01 mm units)

(1) Function

This bit reads the total moving distance in units of 1m.

(2) Query format

| Field | Number of characters | ASCII mode character string (fixed) | Remarks |
|-------------------------|----------------------|-------------------------------------|-------------------------------------------------------------|
| Header | 1 | ':' | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 2 | '0', '3' | Register reading |
| Start address [H] | 4 | '8', '4', '0', '2' | Total moving distance |
| Number of registers [H] | 4 | '0', '0', '0', '2' | Reading addresses 8402 _H to 8403 _H |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | 'CR', 'LF' | |
| Total number of bytes | 17 | | |

(3) Response format

A response message contains 16 bits of data per register.

| Field | Number of characters | ASCII mode character string (fixed) | Remarks |
|--------------------------|----------------------|-------------------------------------|-------------------------------------------------------------|
| Header | 1 | ':' | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 2 | '0', '3' | Register reading |
| Number of data bytes [H] | 2 | '0', '4' | Reading 2 registers = 4 bytes |
| Data 1 [H] | 4 | Total moving distance | Total moving distance [Hex] (most significant digit) |
| Data 2 [H] | 4 | Total moving distance | Total moving distance [Hex] (least significant digit) |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | CR', 'LF' | |
| Total number of bytes | 19 | | |

(4) Query sample

A sample query that reads the Total moving distance (addresses 8402_H to 8403_H) of a controller with axis No. 0 is shown below.

Query: 0138402000274 [CR][LF]

| Field | ASCII mode fixed character string | Converted ASCII code data [H] |
|-------------------------|--------------------------------------------------|----------------------------------|
| Header | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '3' | 3033 |
| Start address [H] | '8', '4', '0', '2' | 38343030 |
| Number of registers [H] | '0', '0', '0', '2' | 30303032 |
| Error check [H] | '7', '4' (in accordance with CRC calculation) | 3734 |
| Trailer | 'CR', 'LF' | 0D0A |

The response to the query is as follows.

Response: 01036040000409E1A[CR][LF]

| Field | ASCII mode fixed character string | Converted ASCII code data [H] |
|--------------------------|--------------------------------------------------|----------------------------------|
| Header | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '3' | 3033 |
| Number of data bytes [H] | '0', '4' | 3034 |
| Data 1 [H] | '0', '0', '0', '0' | 30303030 |
| Data 2 [H] | '4', '0', '9', 'E' | 34303945 |
| Error check [H] | '1', 'A' (in accordance with LRC calculation) | 3141 |
| Trailer | 'CR', 'LF' | 0D0A |

The Total moving distance is "0000409E_H" → Convert into decimal number → 16542 m

Note The data of the response example is simply an example and will vary depending on various conditions.

6.4.6 Present Time Reading <<TIMN>>

(1) Function

This bit reads the present time.

[PCON-CA/CFA/CB/CFB, ACON-CA/CB, DCON-CA/CB and SCON-CA/CAL/CB only]

(2) Query format

| Field | Number of characters | ASCII mode character string (fixed) | Remarks |
|-------------------------|----------------------|-------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------|
| Header | 1 | ':' | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 2 | '0', '3' | Register reading |
| Start address [H] | 4 | SCON-CA/CAL/CB: '8', '4', '1', 'E' PCON-CA/CFA/CB/CFB: '8', '4', '2', '0' ACON-CA/CB and DCON-CA/CB: '8', '4', '2', '2' | Present time monitor |
| Number of registers [H] | 4 | '0', '0', '0', '2' | Reading addresses 8402 _H to 8403 _H |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | 'CR', 'LF' | |
| Total number of bytes | 17 | | |

(3) Response format

A response message contains 16 bits of data per register.

| Field | Number of characters | ASCII mode character string (fixed) | Remarks |
|--------------------------|----------------------|-------------------------------------|----------------------------------------------------------|
| Header | 1 | ':' | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 2 | '0', '3' | Register reading |
| Number of data bytes [H] | 2 | '0', '4' | Reading 2 registers = 4 bytes |
| Data [H] | 8 | Present time | Refer to (4) for conversion at time. |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | 'CR', 'LF' | |
| Total number of bytes | 19 | | |

(4) Conversion of Read Data into Time

The read data output the current time by the setting on the controller.

- [1] For the models that are equipped with the calendar function (RTC), when RTC is set effective, it shows the time of alarm issuance.
- [2] When RTC is set ineffective or for the models that is not equipped with RTC, it shows the passed time [sec] since the power to the controller is turned on.

[1] How present time is calculated

The data of present time shows the seconds passed from the origin time (00hr: 00min: 00sec 1January2000).

Passed second from the origin time is expressed with S, passed minute with M, passed hour with H, passed day with D and passed year with Y, and the calculation is conducted with a formula as shown below:

S= Data of read alarm issuance time
M= $S/60$ (decimal fraction to be rounded down)
H= $M/60$ (decimal fraction to be rounded down)
D= $H/24$ (decimal fraction to be rounded down)
Y= $D/365.25$ (decimal fraction to be rounded down)
L (Leap year)= $Y/4$ (decimal fraction to be rounded up)

Assuming the second of time is SA, minute is MA, hour is HA, passed day in this year is DA and year is YA, the time can be calculated with a formula as shown below:

SA= Remainder of $S/60$
MA= Remainder of $M/60$
HA= Remainder of $H/24$
DA= $D - (Y \times 365 + L)$

Year and day can be figured out by subtracting the number of days in each month from DA.

YA= $Y + 2000$ (A.D.)

Example) Assuming present time data is 172C1B8B_H:

[Procedure 1] Convert into decimal number: $S = 172C1B8B_H \Rightarrow 388766603$

[Procedure 2] Calculate M, H, D, Y and L.

M= $388766603/60 = 6479443$
H= $6479443/60 = 107990$
D= $107990/24 = 4499$
Y= $4499/365.25 = 12$
L= $12/4 = 3$

[Procedure 3] Figure out SA, MA, HA and DA.

SA= Remainder of $388766603/60 = 23$
MA= Remainder of $6479443/60 = 43$
HA= Remainder of $107990/24 = 14$
DA= $4499 - (12 \times 365 + 3)$
= 116 (116 days has passed in this year and the time of alarm issuance is on the day 117.)

Year and day= $117 - \{31 \text{ (Jan)} - 29 \text{ (Feb)} - 31 \text{ (Mar)}\} = 26$ (since the number becomes a negative if days in April is subtracted, the time of present is on 26April)

YA= $12 + 2000 = 2012$

As figured out with the calculation above, the present time is 14:43:23 26Apr2012.

[2] How to Calculate Passed Time

Example) Assuming the current time data is E1B8B_H:

Convert into decimal number: $E1B8B_H \Rightarrow 924555$

Therefore, it means 924555sec (15min. 49sec. 256h) has passed since the power was turned on.

(5) Query sample

A sample query that reads the present time of PCON-CA (addresses 8420_H to 8421_H) of a controller with axis No. 0 is shown below.

Query: 01038420000256 [CR][LF]

| Field | ASCII mode fixed character string | Converted ASCII code data [H] |
|-------------------------|--------------------------------------------------|----------------------------------|
| Header [H] | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '3' | 3033 |
| Start address [H] | '8', '4', '2', '0' | 38343230 |
| Number of registers [H] | '0', '0', '0', '2' | 30303032 |
| Error check [H] | '5', '6' (in accordance with CRC calculation) | 3536 |
| Trailer | 'CR', 'LF' | 0D0A |

The response to the query is as follows.

Response: 010304172C1B8B56 [CR][LF]

| Field | ASCII mode fixed character string | Converted ASCII code data [H] |
|--------------------------|--------------------------------------------------|----------------------------------|
| Header | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '3' | 3033 |
| Number of data bytes [H] | '0', '4' | 3034 |
| Data [H] | '1', '7', '2', 'C', '1', 'B', '8', 'B' | 3137324331423842 |
| Error check [H] | '5', '6' (in accordance with LRC calculation) | 3536 |
| Trailer | 'CR', 'LF' | 0D0A |

Current time is 14h:43m:23s April 26, 2012.

Note The data of the response example is simply an example and will vary depending on various conditions.

6.4.7 Total FAN Driving Time Reading <<TFAN>>

(1) Function

This bit reads the Total FAN driving time (in 1 sec units)

[PCON-CFA/CFB, SCON-CAL, SCON-CB [400W or more] only]

(2) Query format

| Field | Number of characters | ASCII mode character string (fixed) | Remarks |
|-------------------------|----------------------|---------------------------------------------------------------------------------------------------|-------------------------------------------------------------|
| Header | 1 | ':' | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 2 | '0', '3' | Register reading |
| Start address [H] | 4 | SCON-CAL, SCON-CB [400W or more]: '8', '4', '2', 'A' PCON-CFA/CFB: '8', '4', '2', 'E' | Total FAN driving time |
| Number of registers [H] | 4 | '0', '0', '0', '2' | Reading addresses 842E _H to 842F _H |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | 'CR', 'LF' | |
| Total number of bytes | 17 | | |

(3) Response format

A response message contains 16 bits of data per register.

| Field | Number of characters | ASCII mode character string (fixed) | Remarks |
|--------------------------|----------------------|-------------------------------------|-----------------------------------------------------------|
| Header | 1 | ':' | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 2 | '0', '3' | Register reading |
| Number of data bytes [H] | 2 | '0', '4' | Reading 2 registers = 4 bytes |
| Data 1 [H] | 4 | Total FAN driving time | Total FAN driving time [Hex] (most significant digit) |
| Data 2 [H] | 4 | Total FAN driving time | Total FAN driving time [Hex] (least significant digit) |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | 'CR', 'LF' | |
| Total number of bytes | 19 | | |

(4) Query sample

A sample query that reads the total FAN driving time (addresses 842E_H to 842F_H) of a controller with axis No. 0 (PCON-CFA/CFB) is shown below.

Query: 013742E000248 [CR][LF]

| Field | ASCII mode fixed character string | Converted ASCII code data [H] |
|-------------------------|--------------------------------------------------|----------------------------------|
| Header | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '3' | 3033 |
| Start address [H] | '8', '4', '2', 'E' | 38343245 |
| Number of registers [H] | '0', '0', '0', '2' | 30303032 |
| Error check [H] | '4', '8' (in accordance with CRC calculation) | 3438 |
| Trailer | 'CR', 'LF' | 0D0A |

The response to the query is as follows.

Response: 010304000002AF47

| Field | ASCII mode fixed character string | Converted ASCII code data [H] |
|--------------------------|--------------------------------------------------|----------------------------------|
| Header | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '3' | 3033 |
| Number of data bytes [H] | '0', '4' | 3034 |
| Data 1 [H] | '0', '0', '0', '0' | 30303030 |
| Data 2 [H] | '0', '2', 'A', 'F' | 30324146 |
| Error check [H] | '4', '7' (in accordance with LRC calculation) | 3437 |
| Trailer | 'CR', 'LF' | 0D0A |

The total FAN driving time is "000002AF_H" → Convert into decimal number → 687[sec]

Note The data of the response example is simply an example and will vary depending on various conditions.

6.4.8 Current Position Reading (in 0.01 mm units) Monitor <<PNOW>>

(1) Function

This query reads the current in units of 0.01 mm. The sign is effective.

(2) Query format

| Field | Number of characters | ASCII mode character string (fixed) | Remarks |
|-------------------------|----------------------|-------------------------------------|----------------------------------------------------------|
| Header | 1 | ':' | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 2 | '0', '3' | Reading registers |
| Start address [H] | 4 | '9', '0', '0', '0' | Current position monitor |
| Number of registers [H] | 4 | '0', '0', '0', '2' | Reading addresses 9000 _H to 9001 _H |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | 'CR', 'LF' | |
| Total number of bytes | 17 | | |

(3) Response format

A response message contains 16 bits of data per register.

| Field | Number of characters | ASCII mode character string (fixed) | Remarks |
|--------------------------|----------------------|--------------------------------------|-------------------------------------------------------|
| Header | 1 | ':' | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 2 | '0', '3' | Reading registers |
| Number of data bytes [H] | 2 | '0', '4' | Reading 2 registers = 4 bytes |
| Data 1 [H] | 4 | In accordance with the current value | Current value data [Hex] |
| Data 2 [H] | 4 | In accordance with the current value | Current value data [Hex] |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | 'CR', 'LF' | |
| Total number of bytes | 19 | | |

(4) Sample query (Axis No. 0)

A sample query that reads address 9000_H in a controller of axis No. 0 is shown below:

Query: 0103900000026A [CR][LF]

| Field | ASCII mode fixed character string | Converted ASCII code data [H] |
|-------------------------|--------------------------------------|----------------------------------|
| Header | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '3' | 3033 |
| Start address [H] | '9', '0', '0', '0' | 39303030 |
| Number of registers [H] | '0', '0', '0', '2' | 30303032 |
| Error check [H] | '6', 'A' | 3641 |
| Trailer | 'CR', 'LF' | 0D0A |

The response to the query is as follows.

Response: 010304000013885D [CR][LF]

| Field | ASCII mode fixed character string | Converted ASCII code data [H] |
|--------------------------|--------------------------------------------------|----------------------------------|
| Header | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '3' | 3033 |
| Number of data bytes [H] | '0', '4' (4 bytes = 2 registers) | 3034 |
| Data 1 [H] | '0', '0', '0', '0' | 30303030 |
| Data 2 [H] | '1', '3', '8', '8' | 31333838 |
| Error check [H] | '5', 'D' (in accordance with LRC calculation) | 3544 |
| Trailer | 'CR', 'LF' | 0D0A |

The current position is "00001388" → Convert into decimal number → 5000 (× 0.01 mm)

The current position is 50 mm.

Note The data of the response example is simply an example and will vary depending on various conditions.

6.4.9 Present Alarm Code Query <<ALMC>>

(1) Function

Whether the controller is normal or any alarm presently (cold start level, operation cancellation level and message level) detected is indicated by a code.

If no alarm is present, 00_H is stored.

[For details on alarm codes, refer to the operation manual that comes with each controller.]

(2) Query format

| Field | Number of characters | ASCII mode character string (fixed) | Remarks |
|-------------------------|----------------------|-------------------------------------|----------------------------------------------------------|
| Header | 1 | ':' | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 2 | '0', '3' | Reading registers |
| Start address [H] | 4 | '9', '0', '0', '2' | Present alarm codes |
| Number of registers [H] | 4 | '0', '0', '0', '1' | Reading address 9002 _H |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | 'CR', 'LF' | |
| Total number of bytes | 17 | | |

(3) Response format

A response message contains 16 bits of data per register.

| Field | Number of characters | ASCII mode character string (fixed) | Remarks |
|--------------------------|----------------------|-------------------------------------|----------------------------------------------------------|
| Header | 1 | ':' | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 2 | '0', '3' | Reading registers |
| Number of data bytes [H] | 2 | '0', '2' | Reading 1 register = 2 bytes |
| Data 1 [H] | 4 | Alarm code | Alarm code [Hex] |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | 'CR', 'LF' | |
| Total number of bytes | 15 | | |

(4) Sample query (Axis No. 0)

A sample query that reads address 9002_H in an RC controller of axis No. 0 is shown below:

Query: 01039002000169 [CR][LF]

| Field | ASCII mode fixed character string | Converted ASCII code data [H] |
|-------------------------|--------------------------------------|----------------------------------|
| Header | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '3' | 3033 |
| Start address [H] | '9', '0', '0', '2' | 39303032 |
| Number of registers [H] | '0', '0', '0', '1' | 30303031 |
| Error check [H] | '6', '9' | 3639 |
| Trailer | 'CR', 'LF' | 0D0A |

The response to the query is as follows.

Response: 01030200E812 [CR][LF]

| Field | ASCII mode fixed character string | Converted ASCII code data [H] |
|--------------------------|--------------------------------------------------|----------------------------------|
| Header | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '3' | 3033 |
| Number of data bytes [H] | '0', '2' (2 bytes = 1 register) | 3032 |
| Data 1 [H] | '0', '0', 'E', '8' | 30304538 |
| Error check [H] | '1', '2' (in accordance with LRC calculation) | 3132 |
| Trailer | 'CR', 'LF' | 0D0A |

The most important alarm presently detected is "0E8"_H, which is a phase A/B open alarm.
[For details on alarm codes, refer to the operation manual that comes with each controller.]

Note The data of the response example is simply an example and will vary depending on various conditions.

6.4.10 I/O Port Input Signal Status Reading <<DIPM>>

(1) Function

Port input values of the RC controller are read directly regardless of the PIO pattern. Note that the values are the states of ports recognized by the RC controller as inputs.

(2) Query format

| Field | Number of characters | ASCII mode character string (fixed) | Remarks |
|-------------------------|----------------------|-------------------------------------|----------------------------------------------------------|
| Header | 1 | ':' | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 2 | '0', '3' | Reading registers |
| Start address [H] | 4 | '9', '0', '0', '3' | Input port monitor register |
| Number of registers [H] | 4 | '0', '0', '0', '1' | Reading address 9003 _H |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | 'CR', 'LF' | |
| Total number of bytes | 17 | | |

(3) Response format

A response message contains 16 bits of data per address.

| Field | Number of characters | ASCII mode character string (fixed) | Remarks |
|--------------------------|----------------------|-------------------------------------|----------------------------------------------------------|
| Header | 1 | ':' | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 2 | '0', '3' | Reading registers |
| Number of data bytes [H] | 2 | '0', '2' | Reading 1 register = 2 bytes |
| Data 1 [H] | 4 | DI input value | DI input value [Hex] |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | 'CR', 'LF' | |
| Total number of bytes | 15 | | |

(4) Sample query (Axis No. 0)

A sample query that reads input ports (address 9003_H) in a controller of axis No. 0 is shown below.

Query: 01 03 90 03 00 01 68 [CR] [LF]

| Field | ASCII mode fixed character string | Converted ASCII code data [H] |
|-------------------------|-----------------------------------------------|----------------------------------|
| Start | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '3' | 3033 |
| Start address [H] | '9', '0', '0', '3' | 39303033 |
| Number of registers [H] | '0', '0', '0', '1' | 30303031 |
| Error check [H] | '6', '8' (In accordance with LRC calculation) | 3638 |
| End | 'CR', 'LF' | 0D0A |

The response to the query is as follows.

Response: 01 03 02 B8 01 14 [CR] [LF]

| Field | ASCII mode fixed character string | Converted ASCII code data [H] |
|--------------------------|-----------------------------------------------|----------------------------------|
| Start | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '3' | 3033 |
| Number of data bytes [H] | '0', '2' (2 bytes = 1 register) | 3032 |
| Data 1 [H] | 'B', '8', '0', '1' | 42383031 |
| Error check [H] | '1', '4' (in accordance with LRC calculation) | 3134 |
| End | 'CR', 'LF' | 0D0A |

The input port data area is "B801"_H → Convert into binary number "1011100000000001"

Note The data of the response example is simply an example and will vary depending on various conditions.

- (5) **Port assignment** [For details, refer to the operation manual that comes with each RC controller.]
Write the port assignment of PIO patterns to each RC controller.
0 indicates that response data is always 0.

| | PCON-C/CF/CA/CFA/CB/CFB | | | | | | Other than PCON-C/CF | |
|------|-------------------------|---------------|-------|-------|------|------|-------------------------|------|
| | PIO pattern | | | | | | (Pulse Train Mode) | |
| Port | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 |
| IN0 | PC1 | PC1 | PC1 | PC1 | ST0 | ST0 | SON | SON |
| IN1 | PC2 | PC2 | PC2 | PC2 | ST1 | ST1 | RES | RES |
| IN2 | PC4 | PC4 | PC4 | PC4 | ST2 | ST2 | HOME | HOME |
| IN3 | PC8 | PC8 | PC8 | PC8 | ST3 | 0 | TL | TL |
| IN4 | PC16 | PC16 | PC16 | PC16 | ST4 | 0 | CSTP | CSTP |
| IN5 | PC32 | PC32 | PC32 | PC32 | ST5 | 0 | DCLR | DCLR |
| IN6 | 0 | MODE | PC64 | PC64 | ST6 | 0 | BKRL | BKRL |
| IN7 | 0 | JISL | PC128 | PC128 | 0 | 0 | RMOD | RMOD |
| IN8 | 0 | JOG+ | 0 | PC256 | 0 | 0 | 0 | RSTR |
| IN9 | BKRL | JOG- | BKRL | BKRL | BKRL | BKRL | 0 | 0 |
| IN10 | RMOD | RMOD | RMOD | RMOD | RMOD | RMOD | 0 | 0 |
| IN11 | HOME | HOME | HOME | HOME | HOME | 0 | 0 | 0 |
| IN12 | *STP | *STP | *STP | *STP | *STP | 0 | 0 | 0 |
| IN13 | CSTR | CSTR/ PWRT | CSTR | CSTR | 0 | 0 | 0 | 0 |
| IN14 | RES | RES | RES | RES | RES | RES | 0 | 0 |
| IN15 | SON | SON | SON | SON | SON | SON | 0 | 0 |

| | PCON-CYB | | | | | | PCON-PLB/POB | | PCON-PL/PO | |
|-------------------|-------------|-----|-----|------|------|-------------------------------|--------------|------|-------------|--------------|
| | PIO pattern | | | | | | PIO pattern | | PIO pattern | |
| Port | 0 | 1 | 2 | 3 | 4 | 5 | 0 | 1 | 0 | 1 |
| IN0 | PC1 | ST0 | ST0 | ST0 | ST0 | A Selected Number (Note 1) | SON | SON | SON | SON |
| IN1 | PC2 | ST1 | ST1 | 0 | ST1 | | RES | RES | TL | TL |
| IN2 | PC4 | ST2 | ST2 | 0 | ASTR | | HOME | HOME | HOME | HOME |
| IN3 | PC8 | ST3 | 0 | 0 | 0 | | TL | TL | RES | RES/ DCLR |
| IN4 | HOME | ST4 | SON | SON | SON | | CSTP | CSTP | 0 | 0 |
| IN5 | *STR | ST5 | 0 | *STR | *STR | | DCLR | DCLR | 0 | 0 |
| IN6 | CSTR | ST6 | 0 | 0 | 0 | | BKRL | BKRL | 0 | 0 |
| IN7 | RES | RES | RES | RES | RES | | 0 | RSTR | 0 | 0 |
| IN8 to IN15 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |

(Note 1) Any number can be selected for those except for Command Position Number Signal and CSTR Signal.

[Refer to PCON-CYB/PLB/POB Operation Manual (ME0353).]

| | ACON-C/CA/CB, DCON-C/CA/CB | | | | | | Other than ACON-C/CF | |
|------|----------------------------|---------------|-------|-------|------|------|-------------------------|------|
| | PIO pattern | | | | | | (Pulse Train Mode) | |
| Port | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 |
| IN0 | PC1 | PC1 | PC1 | PC1 | ST0 | ST0 | SON | SON |
| IN1 | PC2 | PC2 | PC2 | PC2 | ST1 | ST1 | RES | RES |
| IN2 | PC4 | PC4 | PC4 | PC4 | ST2 | ST2 | HOME | HOME |
| IN3 | PC8 | PC8 | PC8 | PC8 | ST3 | 0 | TL | TL |
| IN4 | PC16 | PC16 | PC16 | PC16 | ST4 | 0 | CSTP | CSTP |
| IN5 | PC32 | PC32 | PC32 | PC32 | ST5 | 0 | DCLR | DCLR |
| IN6 | 0 | MODE | PC64 | PC64 | ST6 | 0 | BKRL | BKRL |
| IN7 | 0 | JISL | PC128 | PC128 | 0 | 0 | RMOD | RMOD |
| IN8 | 0 | JOG+ | 0 | PC256 | 0 | 0 | 0 | RSTR |
| IN9 | BKRL | JOG- | BKRL | BKRL | BKRL | BKRL | 0 | 0 |
| IN10 | RMOD | RMOD | RMOD | RMOD | RMOD | RMOD | 0 | 0 |
| IN11 | HOME | HOME | HOME | HOME | HOME | 0 | 0 | 0 |
| IN12 | *STP | *STP | *STP | *STP | *STP | 0 | 0 | 0 |
| IN13 | CSTR | CSTR/ PWRT | CSTR | CSTR | 0 | 0 | 0 | 0 |
| IN14 | RES | RES | RES | RES | RES | RES | 0 | 0 |
| IN15 | SON | SON | SON | SON | SON | SON | 0 | 0 |

| | ACON-CYB, DCON-CYB | | | | | | ACON, DCON -PLB/POB | | ACON-PL/PO | |
|-------------------|--------------------|-----|-----|------|------|-------------------------------|------------------------|------|-------------|--------------|
| | PIO pattern | | | | | | PIO pattern | | PIO pattern | |
| Port | 0 | 1 | 2 | 3 | 4 | 5 | 0 | 1 | 0 | 1 |
| IN0 | PC1 | ST0 | ST0 | ST0 | ST0 | A Selected Number (Note 1) | SON | SON | SON | SON |
| IN1 | PC2 | ST1 | ST1 | 0 | ST1 | | RES | RES | TL | TL |
| IN2 | PC4 | ST2 | ST2 | 0 | ASTR | | HOME | HOME | HOME | HOME |
| IN3 | PC8 | ST3 | 0 | 0 | 0 | | TL | TL | RES | RES/ DCLR |
| IN4 | HOME | ST4 | SON | SON | SON | | CSTP | CSTP | 0 | 0 |
| IN5 | *STR | ST5 | 0 | *STR | *STR | | DCLR | DCLR | 0 | 0 |
| IN6 | CSTR | ST6 | 0 | 0 | 0 | | BKRL | BKRL | 0 | 0 |
| IN7 | RES | RES | RES | RES | RES | | 0 | RSTR | 0 | 0 |
| IN8 to IN15 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |

(Note 1) Any number can be selected for those except for Command Position Number Signal and CSTR Signal.

[Refer to ACON-CYB/PLB/POB and DCON-CYB/PLB/POB Operation Manual (ME0354).]

| | SCON-C/CA/CAL/CB | | | | | | SCON-CA/CB | | SCON-C/CA/CB | |
|------|------------------|---------------|-------|-------|------|------|------------|------|--------------------|-----------------------|
| | PIO pattern | | | | | | | | (Pulse Train Mode) | |
| Port | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 0 | 1 ^(Note 1) |
| IN0 | PC1 | PC1 | PC1 | PC1 | ST0 | ST0 | PC1 | ST0 | SON | SON |
| IN1 | PC2 | PC2 | PC2 | PC2 | ST1 | ST1 | PC2 | ST1 | RES | RES |
| IN2 | PC4 | PC4 | PC4 | PC4 | ST2 | ST2 | PC4 | ST2 | HOME | HOME |
| IN3 | PC8 | PC8 | PC8 | PC8 | ST3 | 0 | PC8 | ST3 | TL | TL |
| IN4 | PC16 | PC16 | PC16 | PC16 | ST4 | 0 | PC16 | ST4 | CSTP | CSTP |
| IN5 | PC32 | PC32 | PC32 | PC32 | ST5 | 0 | 0 | 0 | DCLR | DCLR |
| IN6 | 0 | MODE | PC64 | PC64 | ST6 | 0 | 0 | 0 | BKRL | BKRL |
| IN7 | 0 | JISL | PC128 | PC128 | 0 | 0 | 0 | 0 | RMOD | RMOD |
| IN8 | 0 | JOG+ | 0 | PC256 | 0 | 0 | CLBR | CLBR | 0 | RSTR |
| IN9 | BKRL | JOG- | BKRL | BKRL | BKRL | BKRL | BKRL | BKRL | 0 | 0 |
| IN10 | RMOD | RMOD | RMOD | RMOD | RMOD | RMOD | RMOD | RMOD | 0 | 0 |
| IN11 | HOME | HOME | HOME | HOME | HOME | 0 | HOME | HOME | 0 | 0 |
| IN12 | *STP | *STP | *STP | *STP | *STP | 0 | *STP | *STP | 0 | 0 |
| IN13 | CSTR | CSTR/ PWRT | CSTR | CSTR | 0 | 0 | CSTR | 0 | 0 | 0 |
| IN14 | RES | RES | RES | RES | RES | RES | RES | RES | 0 | 0 |
| IN15 | SON | SON | SON | SON | SON | SON | SON | SON | 0 | 0 |

(Note 1) This mode is not equipped in SCON-C/CA.

| | SCON-CB | ERC2 (PIO Type) | | | | ERC3 (PIO Type) | | |
|------|----------------|-----------------|------|------|------|-----------------|------|------|
| | Servo press | PIO pattern | | | | PIO pattern | | |
| Port | - | 0 | 1 | 2 | 3 | 0 | 1 | 2 |
| IN0 | PC1 | PC1 | ST0 | PC1 | PC1 | PC1 | ST0 | PC1 |
| IN1 | PC2 | PC2 | ST1 | PC2 | PC2 | PC2 | ST1 | PC2 |
| IN2 | PC4 | PC4 | ST2 | PC4 | PC4 | PC4 | ST2 | PC4 |
| IN3 | PC8 | HOME | 0 | PC8 | PC8 | HOME | 0 | PC8 |
| IN4 | PC16 | CSTR | RES | CSTR | CSTR | CSTR | RES | CSTR |
| IN5 | PC32 | *STP | *STP | *STP | *STP | *STP | *STP | *STP |
| IN6 | PSTR | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| IN7 | RHOM | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| IN8 | ENMV | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| IN9 | FPST | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| IN10 | CLBR | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| IN11 | BKRL | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| IN12 | RMOD | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| IN13 | HOME | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| IN14 | RES | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| IN15 | SON | 0 | 0 | 0 | 0 | 0 | 0 | 0 |

6.4.11 I/O Port Output Signal Status Reading <<DOPM>>

(1) Function

Port output values of the RC controller are stored directly regardless of the PIO pattern.

(2) Query format

| Field | Number of characters | ASCII mode character string (fixed) | Remarks |
|-------------------------|----------------------|-------------------------------------|----------------------------------------------------------|
| Header | 1 | ':' | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 2 | '0', '3' | Reading registers |
| Start address [H] | 4 | '9', '0', '0', '4' | Output port monitor register |
| Number of registers [H] | 4 | '0', '0', '0', '1' | Reading address 9004 _H |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | 'CR', 'LF' | |
| Total number of bytes | 17 | | |

(3) Response format

A response message contains 16 bits of data per register.

| Field | Number of characters | ASCII mode character string (fixed) | Remarks |
|--------------------------|----------------------|-------------------------------------|----------------------------------------------------------|
| Header | 1 | ':' | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 2 | '0', '3' | Reading registers |
| Number of data bytes [H] | 2 | '0', '2' | Reading 1 register = 2 bytes |
| Data 1 [H] | 4 | DO output value | DI output value [Hex] |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | 'CR', 'LF' | |
| Total number of bytes | 15 | | |

(4) Sample query (Axis No. 0)

A sample query that reads input ports (address 9004_H) in a controller of axis No. 0 is shown below.

Query: 01039004000167[CR][LF]

| Field | ASCII mode fixed character string | Converted ASCII code data [H] |
|-------------------------|-----------------------------------------------|----------------------------------|
| Start | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '3' | 3033 |
| Start address [H] | '9', '0', '0', '4' | 39303034 |
| Number of registers [H] | '0', '0', '0', '1' | 30303031 |
| Error check [H] | '6', '7' (in accordance with LRC calculation) | 3637 |
| End | 'CR', 'LF' | 0D0A |

The response to the query is as follows.

Response: 010302740086[CR][LF]

| Field | ASCII mode fixed character string | Converted ASCII code data [H] |
|--------------------------|-----------------------------------------------|----------------------------------|
| Start | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '3' | 3033 |
| Number of data bytes [H] | '0', '2' (2 bytes = 1 register) | 3032 |
| Data 1 [H] | '7', '4', '0', '0' | 37343030 |
| Error check [H] | '8', '6' (in accordance with LRC calculation) | 3836 |
| End | 'CR', 'LF' | 0D0A |

The output port data area is "7400"_H → Convert into binary number "0111010000000000"

Note The data of the response example is simply an example and will vary depending on various conditions

- (5) **Port assignment** [For details, refer to the operation manual that comes with each RC controller.]
Write the port assignment of PIO patterns to each RC controller.
0 indicates that response data is always 0.

| | PCON-C/CF/CA/CFA/CB/CFB | | | | | | Other than PCON-C/CF | |
|-------------------|-------------------------|-----------------|-------------------------|-------------------------|-------------------------|-----------------|----------------------|-------|
| | PIO pattern | | | | | | (Pulse Train Mode) | |
| Port | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 |
| OUT0 | PM1 | PM1 | PM1 | PM1 | PE0 | LS0 | PWR | PWR |
| OUT1 | PM2 | PM2 | PM2 | PM2 | PE1 | LS1 | SV | SV |
| OUT2 | PM4 | PM4 | PM4 | PM4 | PE2 | LS2 | INP | INP |
| OUT3 | PM8 | PM8 | PM8 | PM8 | PE3 | 0 | HEND | HEND |
| OUT4 | PM16 | PM16 | PM16 | PM16 | PE4 | 0 | TLR | TLR |
| OUT5 | PM32 | PM32 | PM32 | PM32 | PE5 | 0 | *ALM | *ALM |
| OUT6 | MOVE | MOVE | PM64 | PM64 | PE6 | 0 | *EMGS | *EMGS |
| OUT7 | ZONE1 | MODES | PM128 | PM128 | ZONE1 | ZONE1 | RMDS | RMDS |
| OUT8 | PZONE/ ZONE2 | PZONE/ ZONE1 | PZONE/ ZONE1 | PM256 | PZONE/ ZONE2 | PZONE/ ZONE2 | ALM1 | ALM1 |
| OUT9 | RMDS | RMDS | RMDS | RMDS | RMDS | RMDS | ALM2 | ALM2 |
| OUT10 | HEND | HEND | HEND | HEND | HEND | HEND | ALM4 | ALM4 |
| OUT11 | PEND | PEND/ WEND | PEND | PEND | PEND | 0 | ALM8 | ALM8 |
| OUT12 | SV | SV | SV | SV | SV | SV | *ALML | *ALML |
| OUT13 | *EMGS | *EMGS | *EMGS | *EMGS | *EMGS | *EMGS | 0 | REND |
| OUT14 | *ALM | *ALM | *ALM | *ALM | *ALM | *ALM | ZONE1 | ZONE1 |
| OUT15 (Note 1) | LOAD/ TRQS/ *ALML | *ALML | LOAD/ TRQS/ *ALML | LOAD/ TRQS/ *ALML | LOAD/ TRQS/ *ALML | *ALML | ZONE2 | ZONE2 |

(Note 1) Signals available for output may differ depending on models.
Refer to an instruction manual for each controller for detail.

| | PCON-CYB | | | | | | PCON-PLB/POB | | PCON-PL/PO | |
|---------------------|-----------------|------|-----------------|-----------------|-----------------|-------------------------------|--------------|-----------|-------------|-------------|
| | PIO pattern | | | | | | PIO pattern | | PIO pattern | |
| Port | 0 | 1 | 2 | 3 | 4 | 5 | 0 | 1 | 0 | 1 |
| OUT0 | PM1 | PE0 | LS0 | LS0/ PE0 | LS0/ PE0 | A Selected Number (Note 2) | PWR | PWR | SV | SV |
| OUT1 | PM2 | PE1 | LS1 | LS1/ PE1 | LS1/ PE1 | | SV | SV | INP | INP/ TLR |
| OUT2 | PM4 | PE2 | LS2 | PSFL | PSFL | | INP | INP | HEND | HEND |
| OUT3 | PM8 | PE3 | HEND | HEND | HEND | | HEND | HEND | *ALM | *ALM |
| OUT4 | HEND | PE4 | SV | SV | SV | | TLR | TLR | 0 | 0 |
| OUT5 | PZONE/ ZONE1 | PE5 | PZONE/ ZONE1 | PZONE/ ZONE1 | PZONE/ ZONE1 | | ZONE 1 | ZONE 1 | 0 | 0 |
| OUT6 | PEND | PE6 | *ALML | *ALML | *ALML | | *ALML | REND | 0 | 0 |
| OUT7 | *ALM | *ALM | *ALM | *ALM | *ALM | | *ALM | *ALM | 0 | 0 |
| OUT8 to OUT15 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |

(Note 2) Any number can be selected for those except for Complete Position Number Signal and PEND Signal.

[Refer to PCON-CYB/PLB/POB Operation Manual (ME0353).]

| | ACON-C/CA/CB, DCON-C/CA/CB | | | | | | Other than ACON-C/CF | |
|-------------------|----------------------------|-----------------|-----------------|-----------------|-----------------|-----------------|-------------------------|-------|
| | PIO pattern | | | | | | (Pulse Train Mode) | |
| Port | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 |
| OUT0 | PM1 | PM1 | PM1 | PM1 | PE0 | LS0 | PWR | PWR |
| OUT1 | PM2 | PM2 | PM2 | PM2 | PE1 | LS1 | SV | SV |
| OUT2 | PM4 | PM4 | PM4 | PM4 | PE2 | LS2 | INP | INP |
| OUT3 | PM8 | PM8 | PM8 | PM8 | PE3 | 0 | HEND | HEND |
| OUT4 | PM16 | PM16 | PM16 | PM16 | PE4 | 0 | TLR | TLR |
| OUT5 | PM32 | PM32 | PM32 | PM32 | PE5 | 0 | *ALM | *ALM |
| OUT6 | MOVE | MOVE | PM64 | PM64 | PE6 | 0 | *EMGS | *EMGS |
| OUT7 | ZONE1 | MODES | PM128 | PM128 | ZONE1 | ZONE1 | RMDS | RMDS |
| OUT8 | PZONE/ ZONE2 | PZONE/ ZONE1 | PZONE/ ZONE1 | PM256 | PZONE/ ZONE2 | PZONE/ ZONE2 | ALM1 | ALM1 |
| OUT9 | RMDS | RMDS | RMDS | RMDS | RMDS | RMDS | ALM2 | ALM2 |
| OUT10 | HEND | HEND | HEND | HEND | HEND | HEND | ALM4 | ALM4 |
| OUT11 | PEND | PEND/ WEND | PEND | PEND | PEND | 0 | ALM8 | ALM8 |
| OUT12 | SV | SV | SV | SV | SV | SV | *ALML | *ALML |
| OUT13 | *EMGS | *EMGS | *EMGS | *EMGS | *EMGS | *EMGS | 0 | REND |
| OUT14 | *ALM | *ALM | *ALM | *ALM | *ALM | *ALM | ZONE1 | ZONE1 |
| OUT15 (Note 1) | *BALM/ *ALML | *BALM/ *ALML | *BALM/ *ALML | *BALM/ *ALML | *BALM/ *ALML | *BALM/ *ALML | ZONE2 | ZONE2 |

(Note 1) Signals available for output may differ depending on models.
Refer to an instruction manual for each controller for detail.

| | ACON-CYB, DCON-CYB | | | | | | ACON, DCON -PLB/POB | | ACON-PL/PO | |
|---------------------|--------------------|------|-----------------|-----------------|-----------------|-------------------------------|------------------------|-----------|-------------|-------------|
| | PIO pattern | | | | | | PIO pattern | | PIO pattern | |
| Port | 0 | 1 | 2 | 3 | 4 | 5 | 0 | 1 | 0 | 1 |
| OUT0 | PM1 | PE0 | LS0 | LS0/ PE0 | LS0/ PE0 | A Selected Number (Note 2) | PWR | PWR | SV | SV |
| OUT1 | PM2 | PE1 | LS1 | LS1/ PE1 | LS1/ PE1 | | SV | SV | INP | INP/ TLR |
| OUT2 | PM4 | PE2 | LS2 | PSFL | PSFL | | INP | INP | HEND | HEND |
| OUT3 | PM8 | PE3 | HEND | HEND | HEND | | HEND | HEND | *ALM | *ALM |
| OUT4 | HEND | PE4 | SV | SV | SV | | TLR | TLR | 0 | 0 |
| OUT5 | PZONE/ ZONE1 | PE5 | PZONE/ ZONE1 | PZONE/ ZONE1 | PZONE/ ZONE1 | | ZONE 1 | ZONE 1 | 0 | 0 |
| OUT6 | PEND | PE6 | *ALML | *ALML | *ALML | | *ALML | REND | 0 | 0 |
| OUT7 | *ALM | *ALM | *ALM | *ALM | *ALM | | *ALM | *ALM | 0 | 0 |
| OUT8 to OUT15 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |

(Note 2) Any number can be selected for those except for Complete Position Number Signal and PEND Signal.

[Refer to ACON-CYB/PLB/POB and DCON-CYB/PLB/POB Operation Manual (ME0354).]

| | SCON-C/CA/CAL/CB | | | | | | SCON-CA/CB | | SCON-C/CA/CB | |
|-------|------------------|-----------------|-----------------|-------|-----------------|-----------------|-----------------|-----------------|-----------------------------|-----------------------|
| | PIO pattern | | | | | | | | (Pulse Train Mode) | |
| Port | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 0 | 1 ^(Note 1) |
| OUT0 | PM1 | PM1 | PM1 | PM1 | PE0 | LS0 | PM1 | PE0 | PWR | PWR |
| OUT1 | PM2 | PM2 | PM2 | PM2 | PE1 | LS1 | PM2 | PE1 | SV | SV |
| OUT2 | PM4 | PM4 | PM4 | PM4 | PE2 | LS2 | PM4 | PE2 | INP | INP |
| OUT3 | PM8 | PM8 | PM8 | PM8 | PE3 | 0 | PM8 | PE3 | HEND | HEND |
| OUT4 | PM16 | PM16 | PM16 | PM16 | PE4 | 0 | PM16 | PE4 | TLR | TLR |
| OUT5 | PM32 | PM32 | PM32 | PM32 | PE5 | 0 | TRQS | TRQS | *ALM | *ALM |
| OUT6 | MOVE | MOVE | PM64 | PM64 | PE6 | 0 | LOAD | LOAD | *EMGS | *EMGS |
| OUT7 | ZONE1 | MODES | PM128 | PM128 | ZONE1 | ZONE1 | CEND | CEND | RMDS | RMDS |
| OUT8 | PZONE/ ZONE2 | PZONE/ ZONE1 | PZONE/ ZONE1 | PM256 | PZONE/ ZONE2 | PZONE/ ZONE2 | PZONE/ ZONE1 | PZONE/ ZONE1 | ALM1 | ALM1 |
| OUT9 | RMDS | RMDS | RMDS | RMDS | RMDS | RMDS | RMDS | RMDS | ALM2 | ALM2 |
| OUT10 | HEND | HEND | HEND | HEND | HEND | HEND | HEND | HEND | ALM4 | ALM4 |
| OUT11 | PEND | PEND/ WEND | PEND | PEND | PEND | 0 | PEND | PEND | ALM8 | ALM8 |
| OUT12 | SV | SV | SV | SV | SV | SV | SV | SV | *OVLW/ *ALML (Note 2) | *OVLW/ *ALML |
| OUT13 | *EMGS | *EMGS | *EMGS | *EMGS | *EMGS | *EMGS | *EMGS | *EMGS | 0 | REND |
| OUT14 | *ALM | *ALM | *ALM | *ALM | *ALM | *ALM | *ALM | *ALM | ZONE1 | ZONE1 |
| OUT15 | *BALM | *BALM | *BALM | *BALM | *BALM | *BALM | *BALM | *BALM | ZONE2 | ZONE2 |

(Note 1) This mode is not equipped in SCON-C/CA.

(Note 2) SCON-C is not equipped with *OVLW and *ALML outputs.

| | SCON-CB | ERC2 (PIO Type) | | | | ERC3 (PIO Type) | | |
|-------|-----------------|-----------------|------|------|------|-----------------|------|-----------------|
| | Servo press | PIO pattern | | | | PIO pattern | | |
| Port | - | 0 | 1 | 2 | 3 | 0 | 1 | 2 |
| OUT0 | PCMP | PEND | PE0 | PEND | PEND | PEND | PE0 | PEND |
| OUT1 | PRUN | HEND | PE1 | HEND | HEND | HEND | PE1 | HEND |
| OUT2 | PORG | ZONE | PE2 | ZONE | ZONE | ZONE1 | PE2 | PZONE/ ZONE1 |
| OUT3 | APRC | *ALM | *ALM | *ALM | *ALM | *ALM | *ALM | *ALM |
| OUT4 | SERC | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| OUT5 | PRSS | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| OUT6 | PSTP | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| OUT7 | MPHM | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| OUT8 | JDOK | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| OUT9 | JDNG | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| OUT10 | CEND | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| OUT11 | RMDS | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| OUT12 | HEND | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| OUT13 | SV | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| OUT14 | *ALM | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| OUT15 | *ALML (Note) | 0 | 0 | 0 | 0 | 0 | 0 | 0 |

6.4.12 Controller Status Signal Reading <<DSS1>>

(1) Function

This query reads the internal status of the controller.
[Refer to 4.3.2 (12), "Data of device status register 1".]

(2) Query format

| Field | Number of characters | ASCII mode character string (fixed) | Remarks |
|-------------------------|----------------------|-------------------------------------|----------------------------------------------------------|
| Header | 1 | ':' | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 2 | '0', '3' | Reading registers |
| Start address [H] | 4 | '9', '0', '0', '5' | Device status register 1 |
| Number of registers [H] | 4 | '0', '0', '0', '1' | Reading address 9005 _H |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | 'CR', 'LF' | |
| Total number of bytes | 17 | | |

(3) Response format

A response message contains 16 bits of data per address.

| Field | Number of characters | ASCII mode character string (fixed) | Remarks |
|--------------------------|----------------------|-------------------------------------|----------------------------------------------------------|
| Header | 1 | ':' | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 2 | '0', '3' | Reading registers |
| Number of data bytes [H] | 2 | '0', '2' | Reading 1 register = 2 bytes |
| Data [H] | 4 | Status 1 | Status 1 [Hex] |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | 'CR', 'LF' | |
| Total number of bytes | 15 | | |

(4) Sample query

A sample query that reads the device status (address 9005_H) in a controller of axis No. 0 is shown below.

Query: 01 03 90 05 00 01 66 [CR] [LF]

| Field | ASCII mode fixed character string | Converted ASCII code data [H] |
|-------------------------|-----------------------------------------------|----------------------------------|
| Start | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '3' | 3033 |
| Start address [H] | '9', '0', '0', '5' | 39303035 |
| Number of registers [H] | '0', '0', '0', '1' | 30303031 |
| Error check [H] | '6', '6' (in accordance with LRC calculation) | 3636 |
| End | 'CR', 'LF' | 0D0A |

The response to the query is as follows.

Response: 01 03 02 30 88 42 [CR] [LF]

| Field | ASCII mode fixed character string | Converted ASCII code data [H] |
|--------------------------|-----------------------------------------------|----------------------------------|
| Start | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '3' | 3033 |
| Number of data bytes [H] | '0', '2' (2 bytes = 1 register) | 3032 |
| Data 1 [H] | '3', '0', '8', '8' | 33303838 |
| Error check [H] | '4', '2' (in accordance with LRC calculation) | 3432 |
| End | 'CR', 'LF' | 0D0A |

Note The data of the response example is simply an example and will vary depending on various conditions.

6.4.13 Controller Status Signal Reading 2 <<DSS2>>

(1) Function

This query reads the internal status 2 of the controller.
[Refer to 4.3.2 (13), "Data of device status register 2."]

(2) Query format

| Field | Number of characters | ASCII mode character string (fixed) | Remarks |
|-------------------------|----------------------|-------------------------------------|----------------------------------------------------------|
| Header | 1 | ':' | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 2 | '0', '3' | Reading registers |
| Start address [H] | 4 | '9', '0', '0', '6' | Device status register 2 |
| Number of registers [H] | 4 | '0', '0', '0', '1' | Reading address 9006 _H |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | 'CR', 'LF' | |
| Total number of bytes | 17 | | |

(3) Response format

A response message contains 16 bits of data per register.

| Field | Number of characters | ASCII mode character string (fixed) | Remarks |
|--------------------------|----------------------|-------------------------------------|----------------------------------------------------------|
| Header | 1 | ':' | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 2 | '0', '3' | Internal controller status |
| Number of data bytes [H] | 2 | '0', '2' | Reading 1 register = 2 bytes. |
| Data [H] | 4 | Status 2 | Status 2 [Hex] |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | 'CR', 'LF' | |
| Total number of bytes | 15 | | |

(4) Sample query

A sample query that reads the device status 2 (address 9006_H) in a controller of axis No. 0 is shown below.

Query: 01 03 90 06 00 01 65 [CR] [LF]

| Field | ASCII mode fixed character string | Converted ASCII code data [H] |
|-------------------------|-----------------------------------------------|----------------------------------|
| Start | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '3' | 3033 |
| Start address [H] | '9', '0', '0', '6' | 39303036 |
| Number of registers [H] | '0', '0', '0', '1' | 30303031 |
| Error check [H] | '6', '5' (In accordance with LRC calculation) | 3635 |
| End | 'CR', 'LF' | 0D0A |

The response to the query is as follows.

Response: 01 03 02 80 00 7A [CR] [LF]

| Field | ASCII mode fixed character string | Converted ASCII code data [H] |
|--------------------------|-----------------------------------------------|----------------------------------|
| Start | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '3' | 3033 |
| Number of data bytes [H] | '0', '2' (2 bytes = 1 register) | 3032 |
| Data 1 [H] | '8', '0', '0', '0' | 38303030 |
| Error check [H] | '7', 'A' (In accordance with LRC calculation) | 3741 |
| End | 'CR', 'LF' | 0D0A |

Note The data of the response example is simply an example and will vary depending on various conditions.

6.4.14 Controller Status Signal Reading 3 <<DSSE>>

(1) Function

Internal statuses (expansion device) of the controller are indicated.
[Refer to 4.3.2 (14), "Data of expansion device status registers."]

(2) Query format

| Field | Number of characters | ASCII mode character string (fixed) | Remarks |
|-------------------------|----------------------|-------------------------------------|----------------------------------------------------------|
| Header | 1 | ':' | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 2 | '0', '3' | Reading registers |
| Start address [H] | 4 | '9', '0', '0', '7' | Expansion device status register |
| Number of registers [H] | 4 | '0', '0', '0', '1' | Reading address 9007 _H |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | 'CR', 'LF' | |
| Total number of bytes | 17 | | |

(3) Response format

A response message contains 16 bits of data per register.

| Field | Number of characters | ASCII mode character string (fixed) | Remarks |
|--------------------------|----------------------|-------------------------------------|----------------------------------------------------------|
| Header | 1 | ':' | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 2 | '0', '3' | Reading registers |
| Number of data bytes [H] | 2 | '0', '2' | Reading 1 register = 2 bytes. |
| Data [H] | 4 | Expansion status | Expansion status [Hex] |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | 'CR', 'LF' | |
| Total number of bytes | 15 | | |

(4) Sample query

A sample query that reads the expansion device status (address 9007_H) in a controller of axis No. 0 is shown below.

Query: 01 03 90 07 00 01 64 [CR] [LF]

| Field | ASCII mode fixed character string | Converted ASCII code data [H] |
|-------------------------|-----------------------------------------------|----------------------------------|
| Start | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '3' | 3033 |
| Start address [H] | '9', '0', '0', '7' | 39303037 |
| Number of registers [H] | '0', '0', '0', '1' | 30303031 |
| Error check [H] | '6', '4' (In accordance with LRC calculation) | 3634 |
| End | 'CR', 'LF' | 0D0A |

The response to the query is as follows.

Response: 01 03 02 33 C7 00 [CR] [LF]

| Field | ASCII mode fixed character string | Converted ASCII code data [H] |
|--------------------------|-----------------------------------------------|----------------------------------|
| Start | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '3' | 3033 |
| Number of data bytes [H] | '0', '2' (2 bytes = 1 register) | 3032 |
| Data 1 [H] | '3', '3', 'C', '7' | 33334337 |
| Error check [H] | '0', '0' (In accordance with LRC calculation) | 3030 |
| End | 'CR', 'LF' | 0D0A |

Note The data of the response example is simply an example and will vary depending on various conditions.

6.4.15 Controller Status Signal Reading 4 <<STAT>>

(1) Function

This query reads the internal operation status of the controller.
[Refer to “4.3.2 (15) Data of system status register.”]

(2) Query format

| Field | Number of characters | ASCII mode character string (fixed) | Remarks |
|-------------------------|----------------------|-------------------------------------|-------------------------------------------------------------|
| Header | 1 | ‘:’ | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 2 | ‘0’, ‘3’ | Reading registers |
| Start address [H] | 4 | ‘9’, ‘0’, ‘0’, ‘8’ | System status register |
| Number of registers [H] | 4 | ‘0’, ‘0’, ‘0’, ‘2’ | Reading addresses 9008 _H to 9009 _H |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | ‘CR’, ‘LF’ | |
| Total number of bytes | 17 | | |

(3) Response format

A response message contains 16 bits of data per register.

| Field | Number of characters | ASCII mode character string (fixed) | Remarks |
|--------------------------|----------------------|-------------------------------------|----------------------------------------------------------|
| Header | 1 | ‘:’ | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 2 | ‘0’, ‘3’ | Internal controller status |
| Number of data bytes [H] | 2 | ‘0’, ‘4’ | Reading 2 registers = 4 bytes. |
| Data [H] | 8 | System status | System status [Hex] |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | ‘CR’, ‘LF’ | |
| Total number of bytes | 19 | | |

(4) Sample query

A sample query that reads the system status (address 9008_H) in a controller of axis No. 0 is shown below.

Query: 01 03 90 08 00 02 62 [CR] [LF]

| Field | ASCII mode fixed character string | Converted ASCII code data [H] |
|-------------------------|-----------------------------------------------|----------------------------------|
| Start | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '3' | 3033 |
| Start address [H] | '9', '0', '0', '8' | 39303038 |
| Number of registers [H] | '0', '0', '0', '2' | 30303032 |
| Error check [H] | '6', '2' (In accordance with LRC calculation) | 3632 |
| End | 'CR', 'LF' | 0D0A |

The response to the query is as follows.

Response: 01 03 04 00 0C 00 11 DB [CR] [LF]

| Field | ASCII mode fixed character string | Converted ASCII code data [H] |
|--------------------------|-----------------------------------------------|----------------------------------|
| Start | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '3' | 3033 |
| Number of data bytes [H] | '0', '4' (4 bytes = 2 registers) | 3034 |
| Data 1 [H] | '0', '0', '0', 'C' | 30303043 |
| Data 2 [H] | '0', '0', '1', '1' | 30303131 |
| Error check [H] | 'D', 'B' (In accordance with LRC calculation) | 4442 |
| End | 'CR', 'LF' | 0D0A |

Note The data of the response example is simply an example and will vary depending on various conditions.

6.4.16 Current Speed Query <<VNOW>>

(1) Function

The monitored data of actual motor speed is indicated. The value becomes positive or negative depending on the operating direction of the motor. The unit is 0.01 mm/sec.

(2) Query format

| Field | Number of characters | ASCII mode character string (fixed) | Remarks |
|-------------------------|----------------------|-------------------------------------|-------------------------------------------------------------|
| Header | 1 | ':' | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 2 | '0', '3' | Reading registers |
| Start address [H] | 4 | '9', '0', '0', 'A' | Current speed monitor |
| Number of registers [H] | 4 | '0', '0', '0', '2' | Reading addresses 900A _H to 900B _H |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | 'CR', 'LF' | |
| Total number of bytes | 17 | | |

(3) Response format

A response message contains 16 bits of data per register.

| Field | Number of characters | ASCII mode character string (fixed) | Remarks |
|--------------------------|----------------------|-------------------------------------|--------------------------------------------------------------|
| Header | 1 | ':' | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 2 | '0', '3' | Reading registers |
| Number of data bytes [H] | 2 | '0', '4' | Reading 2 registers = 4 bytes |
| Data [H] | 8 | Current speed | Current speed [Hex] Indicated in units of 0.01 mm/sec. |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | 'CR', 'LF' | |
| Total number of bytes | 19 | | |

(4) Sample query

A sample query that reads the speed (address 900A_H) of a controller of axis No. 0 is shown below.

Query: 01 03 90 0A 00 02 60 [CR] [LF]

| Field | ASCII mode fixed character string | Converted ASCII code data [H] |
|-------------------------|-----------------------------------------------|----------------------------------|
| Start | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '3' | 3033 |
| Start address [H] | '9', '0', '0', 'A' | 39303041 |
| Number of registers [H] | '0', '0', '0', '2' | 30303032 |
| Error check [H] | '6', '0' (In accordance with LRC calculation) | 3630 |
| End | 'CR', 'LF' | 0D0A |

The response to the query is as follows.

Response: 01 03 04 00 00 26 FC D6 [CR] [LF]

| Field | ASCII mode fixed character string | Converted ASCII code data [H] |
|--------------------------|-----------------------------------------------|----------------------------------|
| Start | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '3' | 3033 |
| Number of data bytes [H] | '0', '4' (4 bytes = 2 registers) | 3034 |
| Data 1 [H] | '0', '0', '0', '0' | 30303030 |
| Data 2 [H] | '2', '6', 'F', 'C' | 32364643 |
| Error check [H] | 'D', '6' (In accordance with LRC calculation) | 4436 |
| End | 'CR', 'LF' | 0D0A |

The current speed is "000026FC" → Convert into decimal number → 9980 (× 0.01 mm/sec)

The current speed monitor is 99.8 mm/sec.

Note The data of the response example is simply an example and will vary depending on various conditions.

6.4.17 Current Ampere Reading <<CNO>>

(1) Function

The monitored data of motor current is indicated in mA.

The torque current command value is stored.

(2) Query format

| Field | Number of characters | ASCII mode character string (fixed) | Remarks |
|-------------------------|----------------------|-------------------------------------|-------------------------------------------------------------|
| Header | 1 | ':' | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 2 | '0', '3' | Reading registers |
| Start address [H] | 4 | '9', '0', '0', 'C' | Current ampere monitor |
| Number of registers [H] | 4 | '0', '0', '0', '2' | Reading addresses 900C _H to 900D _H |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | 'CR', 'LF' | |
| Total number of bytes | 17 | | |

(3) Response format

A response message contains 16 bits of data per register.

| Field | Number of characters | ASCII mode character string (fixed) | Remarks |
|--------------------------|----------------------|-------------------------------------|----------------------------------------------------------|
| Header | 1 | ':' | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 2 | '0', '3' | Reading registers |
| Number of data bytes [H] | 2 | '0', '4' | Reading 2 registers = 4 bytes |
| Data [H] | 8 | Motor current monitor | Motor current monitor [Hex] Indicated in mA. |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | 'CR', 'LF' | |
| Total number of bytes | 19 | | |

(4) Sample query

A sample query that reads the current ampere value (address 900C_H) of a controller of axis No. 0 is shown below.

Query: 01 03 90 0C 00 02 5E [CR] [LF]

| Field | ASCII mode fixed character string | Converted ASCII code data [H] |
|-------------------------|-----------------------------------------------|----------------------------------|
| Start | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '3' | 3033 |
| Start address [H] | '9', '0', '0', 'C' | 39303043 |
| Number of registers [H] | '0', '0', '0', '2' | 30303032 |
| Error check [H] | '5', 'E' (In accordance with LRC calculation) | 3545 |
| End | 'CR', 'LF' | 0D0A |

The response to the query is as follows.

Response: 01 03 04 00 00 01 C8 2F [CR] [LF]

| Field | ASCII mode fixed character string | Converted ASCII code data [H] |
|--------------------------|-----------------------------------------------|----------------------------------|
| Start | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '3' | 3033 |
| Number of data bytes [H] | '0', '4' (4 bytes = 2 registers) | 3034 |
| Data 1 [H] | '0', '0', '0', '0' | 30303030 |
| Data 2 [H] | '0', '1', 'C', '8' | 30314338 |
| Error check [H] | '2', 'F' (In accordance with LRC calculation) | 3246 |
| End | 'CR', 'LF' | 0D0A |

The current ampere value is "000001C8" → Convert into decimal number → 456 (mA)

The current ampere monitor value is 456 mA.

Note The data of the response example is simply an example and will vary depending on various conditions.

6.4.18 Deviation Reading <<DEVI>>

(1) Function

This query reads the deviation over a 1-ms period between the position command value and the feedback value (actual position). The unit is pulse. The number of pulses per one motor revolution in mechanical angle varies depending on the encoder used.

(2) Query format

| Field | Number of characters | ASCII mode character string (fixed) | Remarks |
|-------------------------|----------------------|-------------------------------------|-------------------------------------------------------------|
| Header | 1 | ':' | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 2 | '0', '3' | Reading registers |
| Start address [H] | 4 | '9', '0', '0', 'E' | Deviation monitor |
| Number of registers [H] | 4 | '0', '0', '0', '2' | Reading addresses 900E _H to 900F _H |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | 'CR', 'LF' | |
| Total number of bytes | 17 | | |

(3) Response format

A response message contains 16 bits of data per register.

| Field | Number of characters | ASCII mode character string (fixed) | Remarks |
|--------------------------|----------------------|-------------------------------------|----------------------------------------------------------|
| Header | 1 | ':' | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 2 | '0', '3' | Reading registers |
| Number of data bytes [H] | 2 | '0', '4' | Reading 2 registers = 4 bytes |
| Data [H] | 8 | Deviation monitor | Deviation monitor [Hex] Indicated in pulses. |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | 'CR', 'LF' | |
| Total number of bytes | 19 | | |

(4) Sample query

A sample query that reads the deviation (address 900E_H) of a controller of axis No. 0 is shown below.

Query: 01 03 90 0E 00 02 5C [CR] [LF]

| Field | ASCII mode fixed character string | Converted ASCII code data [H] |
|-------------------------|-----------------------------------------------|----------------------------------|
| Start | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '3' | 3033 |
| Start address [H] | '9', '0', '0', 'E' | 39303045 |
| Number of registers [H] | '0', '0', '0', '2' | 30303032 |
| Error check [H] | '5', 'C' (In accordance with LRC calculation) | 3543 |
| End | 'CR', 'LF' | 0D0A |

The response to the query is as follows.

Response: 01 03 04 00 00 00 83 75 [CR] [LF]

| Field | ASCII mode fixed character string | Converted ASCII code data [H] |
|--------------------------|-----------------------------------------------|----------------------------------|
| Start | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '3' | 3033 |
| Number of data bytes [H] | '0', '4' (4 bytes = 2 registers) | 3034 |
| Data 1 [H] | '0', '0', '0', '0' | 30303030 |
| Data 2 [H] | '0', '0', '8', '3' | 30303833 |
| Error check [H] | '7', '5' (In accordance with LRC calculation) | 3735 |
| End | 'CR', 'LF' | 0D0A |

The deviation monitor is "00000083" → Convert into decimal number → 131 pulse

The deviation over a 1-ms period between the position command value and the feedback value (actual position) is 131 pulses.

Note The data of the response example is simply an example and will vary depending on various conditions.

6.4.19 Total Time after Power On Reading <<STIM>>

(1) Function

This query reads the total time since the controller power was turned on. The unit is ms.

This value is not cleared by a software reset.

(2) Query format

| Field | Number of characters | ASCII mode character string (fixed) | Remarks |
|-------------------------|----------------------|-------------------------------------|-------------------------------------------------------------|
| Header | 1 | ':' | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 2 | '0', '3' | Reading registers |
| Start address [H] | 4 | '9', '0', '1', '0' | System timer |
| Number of registers [H] | 4 | '0', '0', '0', '2' | Reading addresses 9010 _H to 9011 _H |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | 'CR', 'LF' | |
| Total number of bytes | 17 | | |

(3) Response format

A response message contains 16 bits of data per register.

| Field | Number of characters | ASCII mode character string (fixed) | Remarks |
|--------------------------|----------------------|-------------------------------------|----------------------------------------------------------|
| Header | 1 | ':' | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 2 | '0', '3' | Reading registers |
| Number of data bytes [H] | 2 | '0', '4' | Reading 2 registers = 4 bytes |
| Data [H] | 8 | System timer | System timer [Hex] Indicated in ms. |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | 'CR', 'LF' | |
| Total number of bytes | 19 | | |

(4) Sample query

A sample query that reads the startup time (address 9010_H) of a controller of axis No. 0 is shown below.

Query: 01 03 90 10 00 02 5A [CR] [LF]

| Field | ASCII mode fixed character string | Converted ASCII code data [H] |
|-------------------------|-----------------------------------------------|----------------------------------|
| Start | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '3' | 3033 |
| Start address [H] | '9', '0', '1', '0' | 39303130 |
| Number of registers [H] | '0', '0', '0', '2' | 30303032 |
| Error check [H] | '5', 'A' (In accordance with LRC calculation) | 3541 |
| End | 'CR', 'LF' | 0D0A |

The response to the query is as follows.

Response: 01 03 04 02 38 C0 94 6A [CR] [LF]

| Field | ASCII mode fixed character string | Converted ASCII code data [H] |
|--------------------------|-----------------------------------------------|----------------------------------|
| Start | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '3' | 3033 |
| Number of data bytes [H] | '0', '4' (4 bytes = 2 registers) | 3034 |
| Data 1 [H] | '0', '2', '3', '8' | 30323338 |
| Data 2 [H] | 'C', '0', '9', '4' | 43303934 |
| Error check [H] | '6', 'A' (In accordance with LRC calculation) | 3641 |
| End | 'CR', 'LF' | 0D0A |

The system timer value is "0238C094" → Convert into decimal number → 37273748 ms

The total time since the controller power is turned on is 10.3538 hours.

Note The data of the response example is simply an example and will vary depending on various conditions.

6.4.20 Special Input Port Input Signal Status Query <<SIPM>>

(1) Function

This query reads the status of input ports other than the normal input port.

[Refer to 4.3.2 (16), "Data of special port monitor registers" for the data input via the special input port.]

(2) Query format

| Field | Number of characters | ASCII mode character string (fixed) | Remarks |
|-------------------------|----------------------|-------------------------------------|-------------------------------------------------------|
| Header | 1 | ':' | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 2 | '0', '3' | Reading registers |
| Start address [H] | 4 | '9', '0', '1', '2' | Special port monitor |
| Number of registers [H] | 4 | '0', '0', '0', '1' | Reading address 9012 _H |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | 'CR', 'LF' | |
| Total number of bytes | 17 | | |

(3) Response format

A response message contains 16 bits of data per register.

| Field | Number of characters | ASCII mode character string (fixed) | Remarks |
|--------------------------|----------------------|-------------------------------------|-------------------------------------------------------|
| Header | 1 | ':' | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 2 | '0', '3' | Reading registers |
| Number of data bytes [H] | 2 | '0', '2' | Reading 1 register = 2 bytes |
| Data [H] | 4 | Special port monitor | Refer to 4.3.2 (16), "List table." |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | 'CR', 'LF' | |
| Total number of bytes | 15 | | |

(4) Sample query

A sample query that reads the special input port (address 9012_H) of a controller of axis No. 0 is shown below.

Query: 01 03 90 12 00 01 59 [CR] [LF]

| Field | ASCII mode fixed character string | Converted ASCII code data [H] |
|-------------------------|-----------------------------------------------|----------------------------------|
| Start | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '3' | 3033 |
| Start address [H] | '9', '0', '1', '2' | 39303132 |
| Number of registers [H] | '0', '0', '0', '1' | 30303031 |
| Error check [H] | '5', '9' (in accordance with LRC calculation) | 3539 |
| End | 'CR', 'LF' | 0D0A |

The response to the query is as follows.

Response: 01 03 02 03 00 F7

| Field | ASCII mode fixed character string | Converted ASCII code data [H] |
|--------------------------|-----------------------------------------------|----------------------------------|
| Start | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '3' | 3033 |
| Number of data bytes [H] | '0', '2' (2 bytes = 1 register) | 3032 |
| Data 1 [H] | '0', '3', '0', '0' | 30333030 |
| Error check [H] | 'F', '7' (in accordance with LRC calculation) | 4637 |
| End | 'CR', 'LF' | 0D0A |

Note The data of the response example is simply an example and will vary depending on various conditions.

6.4.21 Zone Output Signal Status Reading <<ZONS>>

(1) Function

This query reads the status of zone output.

[Refer to 4.3.2 (17), "Data of zone status registers."]

(2) Query format

| Field | Number of characters | ASCII mode character string (fixed) | Remarks |
|-------------------------|----------------------|-------------------------------------|----------------------------------------------------------|
| Header | 1 | ':' | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 2 | '0', '3' | Reading registers |
| Start address [H] | 4 | '9', '0', '1', '3' | Zone status query |
| Number of registers [H] | 4 | '0', '0', '0', '1' | Reading address 9013 _H |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | 'CR', 'LF' | |
| Total number of bytes | 17 | | |

(3) Response format

A response message contains 16 bits of data per register.

| Field | Number of characters | ASCII mode character string (fixed) | Remarks |
|--------------------------|----------------------|-------------------------------------|----------------------------------------------------------|
| Header | 1 | ':' | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 2 | '0', '3' | Reading registers |
| Number of data bytes [H] | 2 | '0', '2' | Reading 1 register = 2 bytes |
| Data [H] | 4 | Zone status | Refer to 4.3.2 (17), "List table." |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | 'CR', 'LF' | |
| Total number of bytes | 15 | | |

(4) Sample query

A sample query that reads the zone status (address 9013_H) of a controller of axis No. 0 is shown below.

Query: 01 03 90 13 00 01 58 [CR] [LF]

| Field | ASCII mode fixed character string | Converted ASCII code data [H] |
|-------------------------|-----------------------------------------------|----------------------------------|
| Start | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '3' | 3033 |
| Start address [H] | '9', '0', '1', '3' | 39303133 |
| Number of registers [H] | '0', '0', '0', '1' | 30303031 |
| Error check [H] | '5', '8' (In accordance with LRC calculation) | 3538 |
| End | 'CR', 'LF' | 0D0A |

The response to the query is as follows.

Response: 01 03 02 00 00 FA [CR] [LF]

| Field | ASCII mode fixed character string | Converted ASCII code data [H] |
|--------------------------|-----------------------------------------------|----------------------------------|
| Start | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '3' | 3033 |
| Number of data bytes [H] | '0', '2' (2 bytes = 1 register) | 3032 |
| Data 1 [H] | '0', '0', '0', '0' | 30303030 |
| Error check [H] | 'F', 'A' (In accordance with LRC calculation) | 4641 |
| End | 'CR', 'LF' | 0D0A |

Note The data of the response example is simply an example and will vary depending on various conditions.

6.4.22 Position Complete Number Query <<POSS>>**Exected Program Number Register (Servo Press Type) <<POSS>>****(1) Function**

This query reads the position complete number or exected program number.

[Refer to "4.3.2 (18) Data of position number status register."]

(2) Query format

| Field | Number of characters | ASCII mode character string (fixed) | Remarks |
|-------------------------|----------------------|-------------------------------------|----------------------------------------------------------|
| Header | 1 | ':' | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 2 | '0', '3' | Reading registers |
| Start address [H] | 4 | '9', '0', '1', '4' | Position number/Exected program number status |
| Number of registers [H] | 4 | '0', '0', '0', '1' | Reading address 9014 _H |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | 'CR', 'LF' | |
| Total number of bytes | 17 | | |

(3) Response format

A response message contains 16 bits of data per register.

| Field | Number of characters | ASCII mode character string (fixed) | Remarks |
|--------------------------|----------------------|-----------------------------------------------|----------------------------------------------------------|
| Header | 1 | ':' | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 2 | '0', '3' | Reading registers |
| Number of data bytes [H] | 2 | '0', '2' | Reading 1 register = 2 bytes |
| Data [H] | 4 | Position number/Exected program number status | Refer to 4.3.2 (18), "List table." |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | 'CR', 'LF' | |
| Total number of bytes | 15 | | |

(4) Sample query

A sample query that reads the position complete (address 9014_H) of a controller of axis No. 0 is shown below.

Query: 01 03 90 14 00 01 57 [CR] [LF]

| Field | ASCII mode fixed character string | Converted ASCII code data [H] |
|-------------------------|-----------------------------------------------|----------------------------------|
| Start | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '3' | 3033 |
| Start address [H] | '9', '0', '1', '4' | 39303134 |
| Number of registers [H] | '0', '0', '0', '1' | 30303031 |
| Error check [H] | '5', '7' (in accordance with LRC calculation) | 3537 |
| End | 'CR', 'LF' | 0D0A |

The response to the query is as follows.

Response: 01 03 02 00 00 FA [CR] [LF]

| Field | ASCII mode fixed character string | Converted ASCII code data [H] |
|--------------------------|-----------------------------------------------|----------------------------------|
| Start | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '3' | 3033 |
| Number of data bytes [H] | '0', '2' (2 bytes = 1 register) | 3032 |
| Data 1 [H] | '0', '0', '0', '0' | 30303030 |
| Error check [H] | 'F', 'A' (in accordance with LRC calculation) | 4641 |
| End | 'CR', 'LF' | 0D0A |

Note The data of the response example is simply an example and will vary depending on various conditions

6.4.23 Controller Status Signal 5 <<SSSE>>

(1) Function

This query reads the internal operation status of the controller.
[Refer to 4.3.2 (19), "Data of expansion system status register."]

(2) Query format

| Field | Number of characters | ASCII mode character string (fixed) | Remarks |
|-------------------------|----------------------|-------------------------------------|----------------------------------------------------------|
| Header | 1 | ':' | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 2 | '0', '3' | Reading registers |
| Start address [H] | 4 | '9', '0', '1', '5' | Expansion system status register |
| Number of registers [H] | 1 | '0', '0', '0', '1' | Reading address 9015 _H |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | 'CR', 'LF' | |
| Total number of bytes | 14 | | |

(3) Response format

A response message contains 16 bits of data per register.

| Field | Number of characters | ASCII mode character string (fixed) | Remarks |
|--------------------------|----------------------|-------------------------------------|----------------------------------------------------------|
| Header | 1 | ':' | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 2 | '0', '3' | Internal status of controller |
| Number of data bytes [H] | 2 | '0', '2' | Reading 1 registers = 2 bytes |
| Data [H] | 4 | Expansion system status | Expansion system status [Hex] |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | 'CR', 'LF' | |
| Total number of bytes | 15 | | |

(4) Query sample

A sample query that reads the expansion system status register (address 9015_H) of a controller of axis No. 0 is shown below.

Query: 01039015000156 [CR] [LF]

| Field | ASCII mode fixed character string | Converted ASCII code data [H] |
|-------------------------|--------------------------------------------------|----------------------------------|
| Start | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '3' | 3033 |
| Start address [H] | '9', '0', '1', '5' | 39303135 |
| Number of registers [H] | '0', '0', '0', '1' | 30303031 |
| Error check [H] | '5', '6' (in accordance with LRC calculation) | 3536 |
| End | 'CR', 'LF' | 0D0A |

The response to the query is as follows.

Response: 0103020100F9 [CR] [LF]

| Field | ASCII mode fixed character string | Converted ASCII code data [H] |
|--------------------------|--------------------------------------------------|----------------------------------|
| Start | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '3' | 3033 |
| Number of data bytes [H] | '0', '2' (2 bytes = 1 register) | 3032 |
| Data 1 [H] | '0', '1', '0', '0' | 30313030 |
| Error check [H] | 'F', '9' (in accordance with LRC calculation) | 4639 |
| End | 'CR', 'LF' | 0D0A |

Note The data of the response example is simply an example and will vary depending on various conditions

6.4.24 Current Load Reading <<FBFC>> --- SCON-CA/CB Only

(1) Function

The monitored data of load cell measurement (push force) is read.

The unit is 0.01 N.

(2) Query format

| Field | Number of characters | ASC II mode character string (fixed) | Remarks |
|-------------------------|----------------------|--------------------------------------|--------------------------------------------------------|
| Header | 1 | ':' | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 2 | '0', '3' | Register reading |
| Start address [H] | 4 | '9', '0', '1', 'E' | Force feedback monitor |
| Number of registers [H] | 4 | '0', '0', '0', '2' | Reading address 901E _H to 901F _H |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | 'CR', 'LF' | |
| Total number of bytes | 17 | | |

(3) Response format

A response message contains 16 bits of data per register.

| Field | Number of characters | ASC II mode character string (fixed) | Remarks |
|--------------------------|----------------------|--------------------------------------|-------------------------------------------------------|
| Header | 1 | ':' | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 2 | '0', '3' | Register reading |
| Number of data bytes [H] | 2 | '0', '4' | Reading 2 register = 4 bytes |
| Data [H] | 8 | Position number status | Current push force [N] Unit: 0.01 N |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | 'CR', 'LF' | |
| Total number of bytes | 19 | | |

(4) Query sample

An example of use is shown, where the current measurement on the load cell connected to controller axis 0 is read.

Query: 01 03 90 0A 00 02 4C [CR] [LF]

| Field | Fixed character strings in ASCII mode | Converted ASCII code data [H] |
|-------------------------|-----------------------------------------------|-------------------------------|
| Start | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '3' | 3033 |
| Start address [H] | '9', '0', '1', 'E' | 39393145 |
| Number of registers [H] | '0', '0', '0', '2' | 30303032 |
| Error check [H] | '4', 'C' (in accordance with LRC calculation) | 3443 |
| End | 'CR', 'LF' | 0D0A |

The response ^(Note 1) to the query is as follows.

Response: 01 03 04 00 00 03 E4 [CR] [LF]

| Field | Fixed character strings in ASCII mode | Converted ASCII code data [H] |
|--------------------------|-----------------------------------------------|-------------------------------|
| Start | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '3' | 3033 |
| Number of data bytes [H] | '0', '4' (2 bytes = 1 register) | 3034 |
| Data 1 [H] | '0', '0', '0', '0' | 30303030 |
| Data 2 [H] | '0', '3', 'E', '4' | 30334534 |
| Error check [H] | '1', '1' (in accordance with LRC calculation) | 3131 |
| End | 'CR', 'LF' | 0D0A |

Example 1) The current measurement on the load cell is "000003E4," which is convert into a decimal number, or 996 ($\times 0.01$ N) \rightarrow The current push force is 9.96 N.

Example 2) If the current measurement reading on the load cell is "FFFFFF35" (tensile state^(Note 2)), the formula $\text{FFFFFFH} - \text{FFFFFF35H} + 1$ (1 must be added) applies. The result is converted into decimal number, or 203 ($\times 0.01$ N) \rightarrow The current tensile force^(Note 2) is 2.03 N.

Note 1 This is only one example of response. The specific response varies depending on each situation.

Note 2 If a force is applied in the tensile direction, the load cell will break.

6.4.25 Overload Label Monitor Reading <<OLLV>> --- SCON-CA/CAL/CB Only

(1) Function

Current load level to the motor is read in ratio.

The unit is 1 %.

[Refer to 4.3.2 (20) Overload level monitors]

(2) Query format

| Field | Number of characters | ASC II mode character string (fixed) | Remarks |
|-------------------------|----------------------|--------------------------------------|--------------------------------------------------------|
| Header | 1 | ':' | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 2 | '0', '3' | Register reading |
| Start address [H] | 4 | '9', '0', '2', '0' | Overload label monitor |
| Number of registers [H] | 4 | '0', '0', '0', '2' | Reading address 9020 _H to 9021 _H |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | 'CR', 'LF' | |
| Total number of bytes | 17 | | |

(3) Response format

A response message contains 16 bits of data per register.

| Field | Number of characters | ASC II mode character string (fixed) | Remarks |
|--------------------------|----------------------|--------------------------------------|-------------------------------------------------------|
| Header | 1 | ':' | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 2 | '0', '3' | Register reading |
| Number of data bytes [H] | 2 | '0', '4' | Reading 2 register = 4 bytes |
| Data [H] | 8 | Overload label | Unit: 1 % |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | 'CR', 'LF' | |
| Total number of bytes | 19 | | |

(4) Query sample

An example of use is shown, where the overload level on the actuator connected to controller axis 0 is read.

Query: 01 03 90 20 00 02 4A [CR] [LF]

| Field | Fixed character strings in ASCII mode | Converted ASCII code data [H] |
|-------------------------|-----------------------------------------------|-------------------------------|
| Start | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '3' | 3033 |
| Start address [H] | '9', '0', '2', '0' | 39393230 |
| Number of registers [H] | '0', '0', '0', '2' | 30303032 |
| Error check [H] | '4', 'A' (in accordance with LRC calculation) | 3441 |
| End | 'CR', 'LF' | 0D0A |

The response ^(Note 1) to the query is as follows.

Response: 01 03 04 00 00 00 46 B2 [CR] [LF]

| Field | Fixed character strings in ASCII mode | Converted ASCII code data [H] |
|--------------------------|-----------------------------------------------|-------------------------------|
| Start | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '3' | 3033 |
| Number of data bytes [H] | '0', '4' (4 bytes = 2 register) | 3034 |
| Data 1 [H] | '0', '0', '0', '0' | 30303030 |
| Data 1 [H] | '0', '0', '4', '6' | 30303436 |
| Error check [H] | 'B', '2' (in accordance with LRC calculation) | 4232 |
| End | 'CR', 'LF' | 0D0A |

Example 1) The current overload level is "00000046," is convert into a decimal number → 70
→ The current load level is 70 %.

Note 1 This is only one example of response. The specific response varies depending on each situation.

6.4.26 Press Program Alarm Code Reading <<ALMP>> --- Servo Press Type Only

(1) Function

Codes to show the press program condition or alarm status are read.

00_H is stored in the normal condition.

[Refer to instruction manual of servo press type controller for alarm code for details]

[Refer to 4.3.2 (21) Press program alarm codes]

(2) Query format

| Field | Number of characters | ASC II mode character string (fixed) | Remarks |
|-------------------------|----------------------|--------------------------------------|-------------------------------------------------------|
| Header | 1 | ':' | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 2 | '0', '3' | Register reading |
| Start address [H] | 4 | '9', '0', '2', '2' | Current generated alarm code |
| Number of registers [H] | 4 | '0', '0', '0', '1' | Reading address 9022 _H |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | 'CR', 'LF' | |
| Total number of bytes | 17 | | |

(3) Response format

A response message contains 16 bits of data per register.

| Field | Number of characters | ASC II mode character string (fixed) | Remarks |
|--------------------------|----------------------|--------------------------------------|-------------------------------------------------------|
| Header | 1 | ':' | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 2 | '0', '3' | Register reading |
| Number of data bytes [H] | 2 | '0', '2' | Reading 1 register = 2 bytes |
| Data [H] | 4 | Alarm code | Alarm code [Hex] |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | 'CR', 'LF' | |
| Total number of bytes | 15 | | |

(4) Query sample

An example of use is shown, where the alarm code (address 9022_H) on the press program connected to controller axis 0 is read.

Query: 01 03 90 22 00 01 49 [CR] [LF]

| Field | Fixed character strings in ASCII mode | Converted ASCII code data [H] |
|-------------------------|-----------------------------------------------|-------------------------------|
| Start | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '3' | 3033 |
| Start address [H] | '9', '0', '2', '2' | 39303232 |
| Number of registers [H] | '0', '0', '0', '1' | 30303031 |
| Error check [H] | '4', '9' (in accordance with LRC calculation) | 3439 |
| End | 'CR', 'LF' | 0D0A |

The response ^(Note 1) to the query is as follows.

Response: 01 03 02 00 03 F7 [CR] [LF]

| Field | Fixed character strings in ASCII mode | Converted ASCII code data [H] |
|--------------------------|-----------------------------------------------|-------------------------------|
| Start | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '3' | 3033 |
| Number of data bytes [H] | '0', '2' (2 bytes = 1 register) | 3032 |
| Data 1 [H] | '0', '0', '0', '3' | 30303033 |
| Error check [H] | 'F', '7' (in accordance with LRC calculation) | 4637 |
| End | 'CR', 'LF' | 0D0A |

The alarm issued in this example is "0003" ... It is the program startup alarm at axis operation.
[Refer to instruction manual of servo press type controller for alarm code for details]

Note 1 This is only one example of response. The specific response varies depending on each situation.

6.4.27 Alarm Generated Press Program Reading <<ALMP>> --- Servo Press Type Only

(1) Function

The press program number that an alarm is issued is read.

00_H is stored in the normal condition.

[Refer to 4.3.2 (22) Alarm generated press program No.]

(2) Query format

| Field | Number of characters | ASC II mode character string (fixed) | Remarks |
|-------------------------|----------------------|--------------------------------------|-------------------------------------------------------|
| Start | 1 | ‘.’ | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 2 | ‘0’, ‘3’ | Register reading |
| Start address [H] | 4 | ‘9’, ‘0’, ‘2’, ‘3’ | Alarm generated program number |
| Number of registers [H] | 4 | ‘0’, ‘0’, ‘0’, ‘1’ | Reading address 9023 _H |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | ‘CR’, ‘LF’ | |
| Total number of bytes | 17 | | |

(3) Response format

A response message contains 16 bits of data per register.

| Field | Number of characters | ASC II mode character string (fixed) | Remarks |
|--------------------------|----------------------|--------------------------------------|-------------------------------------------------------|
| Start | 1 | ‘.’ | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 2 | ‘0’, ‘3’ | Register reading |
| Number of data bytes [H] | 2 | ‘0’, ‘2’ | Reading 1 register = 2 bytes |
| Data [H] | 4 | Program number | Program number [Hex] |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | ‘CR’, ‘LF’ | |
| Total number of bytes | 15 | | |

(4) Query sample

An example of use is shown, where the press program alarm No. to controller axis 0 is read.

Query: 01 03 90 23 00 01 48 [CR] [LF]

| Field | Fixed character strings in ASCII mode | Converted ASCII code data [H] |
|-------------------------|-----------------------------------------------|-------------------------------|
| Start | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '3' | 3033 |
| Start address [H] | '9', '0', '2', '3' | 39303233 |
| Number of registers [H] | '0', '0', '0', '1' | 30303031 |
| Error check [H] | '4', '8' (in accordance with LRC calculation) | 3438 |
| End | 'CR', 'LF' | 0D0A |

The response ^(Note 1) to the query is as follows.

Response: 01 03 02 00 05 F5 [CR] [LF]

| Field | Fixed character strings in ASCII mode | Converted ASCII code data [H] |
|--------------------------|-----------------------------------------------|-------------------------------|
| Start | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '3' | 3033 |
| Number of data bytes [H] | '0', '2' (2 bytes = 1 register) | 3032 |
| Data 1 [H] | '0', '0', '0', '5' | 30303035 |
| Error check [H] | 'F', '5' (in accordance with LRC calculation) | 4635 |
| End | 'CR', 'LF' | 0D0A |

The press program number that an alarm has been issued in this example is No. 5.

Note 1 This is only one example of response. The specific response varies depending on each situation.

6.4.28 Press Program Status Register Reading <<PPST>> --- Servo Press Type Only

(1) Function

Internal operation condition in the press program is read.
[Refer to 4.3.2 (23) Press program status registers]

(2) Query format

| Field | Number of characters | ASC II mode character string (fixed) | Remarks |
|-------------------------|----------------------|--------------------------------------|-------------------------------------------------------|
| Start | 1 | ':' | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 2 | '0', '3' | Register reading |
| Start address [H] | 4 | '9', '0', '2', '4' | Press program status register |
| Number of registers [H] | 4 | '0', '0', '0', '1' | Reading address 9024 _H |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | 'CR', 'LF' | |
| Total number of bytes | 17 | | |

(3) Response format

A response message contains 16 bits of data per register.

| Field | Number of characters | ASC II mode character string (fixed) | Remarks |
|--------------------------|----------------------|--------------------------------------|-------------------------------------------------------|
| Start | 1 | ':' | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 2 | '0', '3' | Register reading |
| Number of data bytes [H] | 2 | '0', '2' | Reading 1 register = 2 bytes |
| Data [H] | 4 | Press program status register | Press program status [Hex] |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | 'CR', 'LF' | |
| Total number of bytes | 15 | | |

(4) Query sample

An example of use is shown, where the press program status (address 9024_H) connected to controller axis 0 is read.

Query: 01 03 90 24 00 01 47 [CR] [LF]

| Field | Fixed character strings in ASCII mode | Converted ASCII code data [H] |
|-------------------------|-----------------------------------------------|-------------------------------|
| Start | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '3' | 3033 |
| Start address [H] | '9', '0', '2', '4' | 39303234 |
| Number of registers [H] | '0', '0', '0', '1' | 30303031 |
| Error check [H] | '4', '7' (in accordance with LRC calculation) | 3437 |
| End | 'CR', 'LF' | 0D0A |

The response ^(Note 1) to the query is as follows.

Response: 01 03 02 01 02 05 [CR] [LF]

| Field | Fixed character strings in ASCII mode | Converted ASCII code data [H] |
|--------------------------|-----------------------------------------------|-------------------------------|
| Start | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '3' | 3033 |
| Number of data bytes [H] | '0', '2' (2 bytes = 1 register) | 3032 |
| Data 1 [H] | '0', '1', '0', '2' | 30313032 |
| Error check [H] | '0', '5' (in accordance with LRC calculation) | 3035 |
| End | 'CR', 'LF' | 0D0A |

Note 1 This is only one example of response. The specific response varies depending on each situation.

6.4.29 Press Program Judgement Status Register Reading <<PPJD>> --- Servo Press Type Only

(1) Function

Judgement condition in the press program is read.

[Refer to 4.3.2 (24) Press program judgement status registers]

(2) Query format

| Field | Number of characters | ASC II mode character string (fixed) | Remarks |
|-------------------------|----------------------|--------------------------------------|-------------------------------------------------------|
| Start | 1 | ':' | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 2 | '0', '3' | Register reading |
| Start address [H] | 2 | '9', '0', '2', '5' | Press program status register |
| Number of registers [H] | 4 | '0', '0', '0', '1' | Reading address 9025 _H |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | 'CR', 'LF' | |
| Total number of bytes | 15 | | |

(3) Response format

A response message contains 16 bits of data per register.

| Field | Number of characters | ASC II mode character string (fixed) | Remarks |
|--------------------------|----------------------|-----------------------------------------|-------------------------------------------------------|
| Start | 1 | ':' | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 2 | '0', '3' | Register reading |
| Number of data bytes [H] | 2 | '0', '2' | Reading 1 register = 2 bytes |
| Data [H] | 4 | Press program judgement status register | Press program judgement status [Hex] |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | 'CR', 'LF' | |
| Total number of bytes | 15 | | |

(4) Query sample

An example of use is shown, where the press program status (address 9025_H) connected to controller axis 0 is read.

Query: 01 03 90 25 00 01 46 [CR] [LF]

| Field | Fixed character strings in ASCII mode | Converted ASCII code data [H] |
|-------------------------|-----------------------------------------------|-------------------------------|
| Start | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '3' | 3033 |
| Start address [H] | '9', '0', '2', '5' | 39303235 |
| Number of registers [H] | '0', '0', '0', '1' | 30303031 |
| Error check [H] | '4', '6' (in accordance with LRC calculation) | 3436 |
| End | 'CR', 'LF' | 0D0A |

The response ^(Note 1) to the query is as follows.

Response: 01 03 02 01 05 F4 [CR] [LF]

| Field | Fixed character strings in ASCII mode | Converted ASCII code data [H] |
|--------------------------|-----------------------------------------------|-------------------------------|
| Start | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '3' | 3033 |
| Number of data bytes [H] | '0', '2' (2 bytes = 1 register) | 3032 |
| Data 1 [H] | '0', '1', '0', '5' | 30313035 |
| Error check [H] | 'F', '4' (in accordance with LRC calculation) | 4634 |
| End | 'CR', 'LF' | 0D0A |

Note 1 This is only one example of response. The specific response varies depending on each situation.

6.5 Operation Commands and Data Rewrite (Used function code 05)

6.5.1 Writing to Coil

*) Please refer to
"6.2 ASCII Code Table."

(1) Function

Change (write) the status of DO (Discrete Output) of a slave to either ON or OFF.

In case of broadcast transmission, the coils at the specified address of all slaves are rewritten.

(2) Start address list

| Start address [H] | Symbol | Function | Start address [H] | Symbol | Function |
|----------------------|--------|-------------------------------------------|----------------------|--------|------------------------------|
| 0401 | SFTY | Safety speed command | 049B | ENMV | Axis operation permission |
| 0403 | SON | Servo ON command | 049C | PHOM | Program home return movement |
| 0407 | ALRS | Alarm reset command | 049D | SSTP | Search stop |
| 0408 | BKRL | Brake forced-release command | 049E | FPST | Program compulsoly finish |
| 040A | STP | Pause command | 049F | PSTR | Program start |
| 040B | HOME | Home return command | | | |
| 040C | CSTR | Positioning start command | | | |
| 0411 | JISL | Jog/inch switching | | | |
| 0414 | MOD | Teaching mode command | | | |
| 0415 | TEAC | Position data load command | | | |
| 0416 | JOG+ | Jog+ command | | | |
| 0417 | JOG- | Jog- command | | | |
| 0418 | ST7 | Start position 7 (solenoid valve mode) | | | |
| 0419 | ST6 | Start position 6 (solenoid valve mode) | | | |
| 041A | ST5 | Start position 5 (solenoid valve mode) | | | |
| 041B | ST4 | Start position 4 (solenoid valve mode) | | | |
| 041C | ST3 | Start position 3 (solenoid valve mode) | | | |
| 041D | ST2 | Start position 2 (solenoid valve mode) | | | |
| 041E | ST1 | Start position 1 (solenoid valve mode) | | | |
| 041F | ST0 | Start position 0 (solenoid valve mode) | | | |
| 0426 | CLBR | Load cell calibration command | | | |
| 0427 | PMSL | PIO/Modbus switching specification | | | |
| 042C | STOP | Deceleration stop | | | |

6.5.2 Safety Speed Enable/Disable Switching (SFTY)

(1) Function

This query enables/disables the speed specified by user parameter No. 35, "Safety speed."
Enabling the safety speed in the MANU mode will limit the speeds of all movement commands.

(2) Query format

| Field | Number of characters | ASCII mode character string (fixed) | Remarks |
|-----------------------|----------------------|-------------------------------------|------------------------------------------------------------------------------------------------------|
| Header | 1 | ‘.’ | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) 00 _H when broadcast is specified |
| Function code [H] | 2 | ‘0’, ‘5’ | Write to a single coil DO. |
| Start address [H] | 4 | ‘0’, ‘4’ ‘0’, ‘1’ | Safety speed command |
| Changed data [H] | 4 | Arbitrary | Safety speed enabled: ‘F’, ‘F’, ‘0’, ‘0’ Safety speed disabled: ‘0’, ‘0’, ‘0’, ‘0’ |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | ‘CR’, ‘LF’ | |
| Total number of bytes | 17 | | |

(3) Response

If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to section 7) will be returned, or no response will be returned.

(4) Sample query

A sample query that enables the safety speed of a controller of axis No. 0 is shown below.

Query: 01 05 04 01 FF 00 F6

| Field | ASCII mode 8-bit data | Converted ASCII code data [H] |
|-------------------|-----------------------------------------------|-------------------------------|
| Start | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '5' | 3035 |
| Start address [H] | '0', '4', '0', '1' | 30343031 |
| Changed data [H] | 'F', 'F', '0', '0' | 46463030 |
| Error check [H] | 'F', '6' (In accordance with LRC calculation) | 4636 |
| End | 'CR', 'LF' | 0D0A |

If the change is successful, the response message will be the same as the query.

6.5.3 Servo ON/OFF <<SON>>

(1) Function

Control ON/OFF of the servo.

When "Servo ON" is specified by the new data, the servo will turn ON after elapse of the manufacturer parameter "Servo ON delay time." However, the following conditions must be satisfied:

- The EMG status bit in device status register 1 is 0.
- The major failure status bit in device status register 1 is 0.
- The enable status bit in device status register 2 is 1.
- The auto servo OFF status in the system status register is 0.

(2) Query Format

| Field | Number of characters | ASCII mode character string (fixed) | Remarks |
|-----------------------|----------------------|-------------------------------------|------------------------------------------------------------------------------------------------------|
| Header | 1 | ':' | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) 00 _H when broadcast is specified |
| Function code [H] | 2 | '0', '5' | Write to a single coil DO |
| Start address [H] | 4 | '0', '4' '0', '3' | Servo ON/OFF command |
| Changed data [H] | 4 | Arbitrary | Servo ON: 'F', 'F', '0', '0' Servo OFF: '0', '0', '0', '0' |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | 'CR', 'LF' | |
| Total number of bytes | 17 | | |

Note If a teaching pendant or PC software is connected, the servo is turned OFF, and then the teaching pendant/PC software is removed, all before the control establishes communication with the host, the servo cannot be turned ON/OFF via commands received from with the host.

In this case, restore the controller power, or make sure the connected tool of the SIO port is removed while the servo is ON.

(3) Response

If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to section 7) will be returned, or no response will be returned.

(4) Sample query

A sample query that turns the servo of a controller of axis No. 0 on is shown below.

Query: 01 05 04 03 FF 00 F4

| Field | ASCII mode 8-bit data | Converted ASCII code data [H] |
|-------------------|-----------------------------------------------|-------------------------------|
| Start | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '5' | 3035 |
| Start address [H] | '0', '4', '0', '3' | 30343033 |
| Changed data [H] | 'F', 'F', '0', '0' | 46463030 |
| Error check [H] | 'F', '4' (In accordance with LRC calculation) | 4634 |
| End | 'CR', 'LF' | 0D0A |

If the change is successful, the response message will be the same as the query.

6.5.4 Alarm Reset <<ALRS>>

(1) Function

When the alarm reset edge is turned on (the data is first set to FF00_H and then changed to 0000_H), **alarms will be reset.**

If any alarm cause has not been removed, the same alarm will be generated again. If the alarm reset edge is turned on while the actuator is paused, **the remaining travel will be cancelled.**

When alarms are reset, make sure to write changed data of 0000_H to restore the normal status.

(2) Query format

| Field | Number of characters | ASCII mode character string (fixed) | Remarks |
|-----------------------|----------------------|-------------------------------------|------------------------------------------------------------------------------------------------------|
| Header | 1 | ‘.’ | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) 00 _H when broadcast is specified |
| Function code [H] | 2 | ‘0’, ‘5’ | Write to a single coil DO. |
| Start address [H] | 4 | ‘0’, ‘4’ ‘0’, ‘7’ | Alarm reset command |
| Changed data [H] | 4 | Arbitrary | Execute alarm reset: ‘F’, ‘F’, ‘0’, ‘0’ Normal: ‘0’, ‘0’, ‘0’, ‘0’ |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | ‘CR’, ‘LF’ | |
| Total number of bytes | 17 | | |

(3) Response

If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to section 7) will be returned, or no response will be returned.

(4) Query sample

A sample query that resets the alarms of a controller of axis No. 0 is shown below.

First time 01 05 04 07 FF 00 F0 --- Execute alarm reset

Second time 01 05 04 07 00 00 EF --- Restore normal status

| Field | ASCII mode 8-bit data | Converted ASCII code data [H] |
|-------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------|
| Start | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '5' | 3035 |
| Start address [H] | '0', '4', '0', '7' | 30343037 |
| Changed data [H] | First time: 'F', 'F', '0', '0' Second time: '0', '0', '0', '0' (Write 0000 _H after resetting alarms to restore the normal status.) | 46463030 30303030 |
| Error check [H] | First time: 'F', '0' (in accordance with LRC calculation) Second time: 'E', 'F' (in accordance with LRC calculation) | 4630 4546 |
| End | 'CR', 'LF' | 0D0A |

If the change is successful, the response message will be the same as the query.

6.5.5 Brake Forced Release <<BKRL>>

(1) Function

Brake control is linked to servo ON/OFF. The brake can be forcefully released even when the servo is ON.

(2) Query format

| Field | Number of characters | ASCII mode character string (fixed) | Remarks |
|-----------------------|----------------------|-------------------------------------|------------------------------------------------------------------------------------------------------|
| Header | 1 | ‘.’ | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) 00 _H when broadcast is specified |
| Function code [H] | 2 | ‘0’, ‘5’ | Write to a single coil DO |
| Start address [H] | 4 | ‘0’, ‘4’, ‘0’, ‘8’ | Break forced-release command |
| Changed data [H] | 4 | Arbitrary | Brake forced release: ‘F’, ‘F’, ‘0’, ‘0’ Normal: ‘0’, ‘0’, ‘0’, ‘0’ |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | ‘CR’, ‘LF’ | |
| Total number of bytes | 17 | | |

Note If a teaching pendant or PC software is connected, the servo is turned OFF, and then the teaching pendant/PC software is removed, all before the control establishes communication with the host, the servo cannot be turned ON/OFF via commands received from with the host. In this case, restore the controller power, or make sure the connected tool of the SIO port is removed while the servo is ON.

(3) Response

If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to section 7) will be returned, or no response will be returned.

(4) Sample query

A sample query that forcefully releases the brake of a controller of axis No. 0 is shown below.

Query: 01 05 04 08 FF 00 EF

| Field | ASCII mode 8-bit data | Converted ASCII code data [H] |
|-------------------|-----------------------------------------------|-------------------------------|
| Start | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '5' | 3035 |
| Start address [H] | '0', '4', '0', '8' | 30343038 |
| Changed data [H] | 'F', 'F', '0', '0' | 46463030 |
| Error check [H] | 'E', 'F' (In accordance with LRC calculation) | 4546 |
| End | 'CR', 'LF' | 0D0A |

If the change is successful, the response message will be the same as the query.

6.5.6 Pause <<STP>>

(1) Function

If the pause command is transmitted during movement, the actuator decelerates and stops. If the status is set back to normal again, the actuator resumes moving for the remaining distance.

As long as the pause command is being transmitted, all motor movement is inhibited.

If the alarm reset command bit is set while the actuator is paused, the remaining travel will be cancelled.

If this bit is set during home return, the movement command will be held if the actuator has not yet reversed after contacting the mechanical end. If the actuator has already reversed after contacting the mechanical end, home return will be repeated from the beginning.

(2) Query format

| Field | Number of characters | ASCII mode character string (fixed) | Remarks |
|-----------------------|----------------------|-------------------------------------|-----------------------------------------------------------------|
| Header | 1 | “.” | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) |
| Function code [H] | 2 | ‘0’, ‘5’ | Write to a single coil DO. |
| Start address [H] | 4 | ‘0’, ‘4’ ‘0’, ‘A’ | Pause command |
| Changed data [H] | 4 | Arbitrary | Pause command: ‘F’, ‘F’, ‘0’, ‘0’ Normal: ‘0’, ‘0’, ‘0’, ‘0’ |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | ‘CR’, ‘LF’ | |
| Total number of bytes | 17 | | |

(3) Response

If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to section 7) will be returned, or no response will be returned.

(4) Sample query

A sample query that pauses a controller of axis No. 0 is shown below.

Query: 01 05 04 0A FF 00 ED

| Field | ASCII mode 8-bit data | Converted ASCII code data [H] |
|-------------------|-----------------------------------------------|-------------------------------|
| Start | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '5' | 3035 |
| Start address [H] | '0', '4', '0', 'A' | 30343041 |
| Changed data [H] | 'F', 'F', '0', '0' | 46463030 |
| Error check [H] | 'E', 'D' (in accordance with LRC calculation) | 4544 |
| End | 'CR', 'LF' | 0D0A |

If the change is successful, the response message will be the same as the query.

6.5.7 Home return <<HOME>>

(1) Function

Home return operation will start if a rising edge in the home return command signal is detected (the data is first set to 0000_H and then changed to FF00_H). Once the home return is completed, the HEND bit will become 1. This command can be input as many times as desired even after home return has been completed once.

(2) Query format

| Field | Number of characters | ASCII mode character string (fixed) | Remarks |
|-----------------------|----------------------|-------------------------------------|------------------------------------------------------------------------------------------------------|
| Header | 1 | ‘.’ | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) 00 _H when broadcast is specified |
| Function code [H] | 2 | ‘0’, ‘5’ | Write to a single coil DO. |
| Start address [H] | 4 | ‘0’, ‘4’ ‘0’, ‘B’ | Home return command |
| Changed data [H] | 4 | Arbitrary | Execute home return: ‘F’, ‘F’, ‘0’, ‘0’ Normal: ‘0’, ‘0’, ‘0’, ‘0’ |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | ‘CR’, ‘LF’ | |
| Total number of bytes | 17 | | |

Note If a teaching pendant or PC software is connected, the servo is turned OFF, and then the teaching pendant/PC software is removed, all before the control establishes communication with the host, the servo cannot be turned ON/OFF via commands received from omit the host. In this case, restore the controller power, or make sure the connected tool of the SIO port is removed while the servo is ON.

(3) Response

If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to section 7) will be returned, or no response will be returned.

(4) Sample query

A sample query that executes home return operation of a controller of axis No. 0 is shown below.

Query:

First time: 01 05 04 0B 00 00 EB --- Set normal status

Second time: 01 05 04 0B FF 00 EC --- Execute home return

| Field | ASCII mode 8-bit data | Converted ASCII code data [H] |
|-------------------|-------------------------------------------------------------------------------------------------------------------------|-------------------------------|
| Start | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '5' | 3035 |
| Start address [H] | '0', '4', '0', 'B' | 30343042 |
| Changed data [H] | First time: '0', '0', '0', '0' Second time: 'F', 'F', '0', '0' (Send data twice to set the edge.) | 30303030 46463030 |
| Error check [H] | First time: 'E', 'B' (In accordance with LRC calculation) Second time: 'E', 'C' (In accordance with LRC calculation) | 4542 4543 |
| End | 'CR', 'LF' | 0D0A |

If the change is successful, the response message will be the same as the query.

6.5.8 Positioning Start Command <<CSTR>>

(1) Function

If the rising edge of the positioning start command is detected (the data is first set to FF00_H and then changed to 0000_H), the actuator will move to the position specified by the position number stored in the position number command register (POSR:0D03_H). If nothing is done after the position start command (FF00_H is read and no new data is written), a position complete will not be output even when the actuator enters the positioning band (write 0000_H and restore the normal status).

If this command is executed when home return has never been performed after the power is turned on (when the HEND bit is 0), the actuator will perform home return and then start moving to the target position.

* The target position, speed and all other operation parameters must be set in the position table (nonvolatile memory) of the controller in advance.

(2) Query format

| Field | Number of characters | ASCII mode character string (fixed) | Remarks |
|-----------------------|----------------------|-------------------------------------|------------------------------------------------------------------------------------------------------|
| Header | 1 | ‘:’ | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) 00 _H when broadcast is specified |
| Function code [H] | 2 | ‘0’, ‘5’ | Write to a single coil DO. |
| Start address [H] | 4 | ‘0’, ‘4’, ‘0’, ‘C’ | Positioning start command |
| Changed data [H] | 4 | Arbitrary | Positioning start command: ‘F’, ‘F’, ‘0’, ‘0’ Normal: ‘0’, ‘0’, ‘0’, ‘0’ |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | ‘CR’, ‘LF’ | |
| Total number of bytes | 17 | | |

(3) Response

If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to section 7) will be returned, or no response will be returned.

(4) Sample query

A sample query that moves the actuator of a controller of axis No. 0 to the position specified by the position number stored in the position number command register (POSR:0D03_H) is shown below.

Query:

First time: 01 05 04 0C FF 00 EB --- Movement command

Second time: 01 05 04 0C 00 00 EA --- Normal status

| Field | ASCII mode 8-bit data | Converted ASCII code data [H] |
|-------------------|-------------------------------------------------------------------------------------------------------------------------|-------------------------------|
| Start | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '5' | 3035 |
| Start address [H] | '0', '4', '0', 'C' | 30343043 |
| Changed data [H] | First time: 'F', 'F', '0', '0' Second time: '0', '0', '0', '0' (Restore the normal status.) | 46463030 30303030 |
| Error check [H] | First time: 'E', 'B' (In accordance with LRC calculation) Second time: 'E', 'A' (In accordance with LRC calculation) | 4542 4541 |
| End | 'CR', 'LF' | 0D0A |

If the change is successful, the response message will be the same as the query.

6.5.9 Jog/Inch Switching <<JISL>>

(1) Function

This bit switches between jogging and inching.

If this bit switches while the actuator is jogging, the actuator will decelerate to a stop.

If this bit switches while the actuator is inching, the inching movement will continue.

(2) Query format

| Field | Number of characters | ASCII mode character string (fixed) | Remarks |
|-----------------------|----------------------|-------------------------------------|------------------------------------------------------------------------------------------------------|
| Header | 1 | ‘.’ | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) 00 _H when broadcast is specified |
| Function code [H] | 2 | ‘0’, ‘5’ | Write to a single coil DO. |
| Start address [H] | 4 | ‘0’, ‘4’, ‘1’, ‘1’ | Jog/Inch Switching |
| Changed data [H] | 4 | Arbitrary | Inching operation status: ‘F’, ‘F’, ‘0’, ‘0’ Jogging operation status: ‘0’, ‘0’, ‘0’, ‘0’ |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | ‘CR’, ‘LF’ | |
| Total number of bytes | 17 | | |

(3) Response

If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to section 7) will be returned, or no response will be returned.

(4) Sample query

A sample query that switches the operation of a controller of axis No. 0 to inching is shown below.

Query: 01 05 04 11 FF 00 E6

| Field | ASCII mode 8-bit data | Converted ASCII code data [H] |
|-------------------|-----------------------------------------------|-------------------------------|
| Start | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '5' | 3035 |
| Start address [H] | '0', '4', '1', '1' | 30343131 |
| Changed data [H] | 'F', 'F', '0', '0' | 46463030 |
| Error check [H] | 'E', '6' (In accordance with LRC calculation) | 4536 |
| End | 'CR', 'LF' | 0D0A |

If the change is successful, the response message will be the same as the query.

6.5.10 Teaching Mode Command <<MOD>>

(1) Function

This bit switches between the normal operation mode and teaching mode.

(2) Query format

| Field | Number of characters | ASCII mode character string (fixed) | Remarks |
|-----------------------|----------------------|-------------------------------------|------------------------------------------------------------------------------------------------------|
| Header | 1 | ‘:’ | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) 00 _H when broadcast is specified |
| Function code [H] | 2 | ‘0’, ‘5’ | Write to a single coil DO. |
| Start address [H] | 4 | ‘0’, ‘4’, ‘1’, ‘4’ | Switch between the normal mode and the teaching mode. |
| Changed data [H] | 4 | Arbitrary | Teaching mode: ‘F’, ‘F’, ‘0’, ‘0’ Normal operation mode: ‘0’, ‘0’, ‘0’, ‘0’ |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | ‘CR’, ‘LF’ | |
| Total number of bytes | 17 | | |

(3) Response

If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to section 7) will be returned, or no response will be returned.

(4) Sample query

A sample query that switches the operation mode of a controller of axis No. 0 to teaching mode is shown below.

Query: 01 05 04 14 FF 00 E3

| Field | ASCII mode 8-bit data | Converted ASCII code data [H] |
|-------------------|-----------------------------------------------|-------------------------------|
| Start | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '5' | 3035 |
| Start address [H] | '0', '4', '1', '4' | 30343134 |
| Changed data [H] | 'F', 'F', '0', '0' | 46463030 |
| Error check [H] | 'E', '3' (In accordance with LRC calculation) | 4533 |
| End | 'CR', 'LF' | 0D0A |

If the change is successful, the response message will be the same as the query.

6.5.11 Position Data Load Command <<TEAC>>

(1) Function

The current position is acquired by writing this command (write FF00_H) when the teaching mode command (6.5.10) is FF00_H (teaching command).

The current position data will be written in the position number specified by the position number command register when the aforementioned condition was detected.

If other position data fields are empty, the default parameter values will be written at the same time in the empty fields other than the target position (positioning band INP, speed VCMD, acceleration/deceleration speed ACMD, and control flag CTLF).

After sending this command (write FF00_H), keep the status as is for 20 ms or longer.

(2) Query format

| Field | Number of characters | ASCII mode character string (fixed) | Remarks |
|-----------------------|----------------------|-------------------------------------|------------------------------------------------------------------------------------------------------|
| Header | 1 | ':' | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) 00 _H when broadcast is specified |
| Function code [H] | 2 | '0', '5' | Write to a single coil DO. |
| Start address [H] | 4 | '0', '4', '1', '5' | Position data load command |
| Changed data [H] | 4 | Arbitrary | Position data load command: 'F', 'F', '0', '0' Normal: '0', '0', '0', '0' |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | 'CR', 'LF' | |
| Total number of bytes | 17 | | |

(3) Response

If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to section 7) will be returned, or no response will be returned.

(4) Sample query

A sample query that acquires the current position when a controller of axis No. 0 is in the teaching mode is shown below.

Query: 01 05 04 15 FF 00 E2

| Field | ASCII mode 8-bit data | Converted ASCII code data [H] |
|-------------------|-----------------------------------------------|-------------------------------|
| Start | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '5' | 3035 |
| Start address [H] | '0', '4', '1', '5' | 30343135 |
| Changed data [H] | 'F', 'F', '0', '0' | 46463030 |
| Error check [H] | 'E', '2' (In accordance with LRC calculation) | 4532 |
| End | 'CR', 'LF' | 0D0A |

If the change is successful, the response message will be the same as the query.

6.5.12 Jog+ Command <<JOG+>>

(1) Function

- The actuator performs either jog or inching operation.
If the jog+ command (changed data FF00_H) is sent when the jog/inch switching command (6.5.9) is set to 0000_H (set to jog), the actuator will jog in the direction opposite home. The speed and acceleration/deceleration speed conform to the PIO jog speed set by user parameter No. 26 and rated acceleration/deceleration speed, respectively.
If the jog+ command (changed data 0000_H) is sent or the jog- command (6.5.13, changed data FF00_H) is sent while the actuator is moving, the actuator will decelerate to a stop.
- If the jog+ command rising edge is set while the jog/inch switching command (6.5.9) is FF00_H (set to inching), the actuator will inch in the direction opposite home. The speed, travel and acceleration/deceleration speed conform to user parameter No. 26 (PIO jogging speed), user parameter No. 48 (PIO inching distance), and rated acceleration/deceleration speed, respectively.

(2) Query format

| Field | Number of characters | ASCII mode character string (fixed) | Remarks |
|-----------------------|----------------------|-------------------------------------|------------------------------------------------------------------------------------------------------|
| Header | 1 | ‘.’ | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) 00 _H when broadcast is specified |
| Function code [H] | 2 | ‘0’, ‘5’ | Write to a single coil DO. |
| Start address [H] | 4 | ‘0’, ‘4’, ‘1’, ‘6’ | Jog+ command |
| Changed data [H] | 4 | Arbitrary | Jog+ command: ‘F’, ‘F’, ‘0’, ‘0’ Normal: ‘0’, ‘0’, ‘0’, ‘0’ |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | ‘CR’, ‘LF’ | |
| Total number of bytes | 17 | | |

(3) Response

If the change is successful, the response message will be the same as the query.
If invalid data is sent, an exception response (refer to section 7) will be returned, or no response will be returned.

(4) Sample query

[1] A sample query that makes a controller of axis No. 0 jog is shown below.

Query: 01 05 04 16 FF 00 E1

| Field | ASCII mode 8-bit data | Converted ASCII code data [H] |
|-------------------|-----------------------------------------------|-------------------------------|
| Start | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '5' | 3035 |
| Start address [H] | '0', '4', '1', '6' | 30343136 |
| Changed data [H] | 'F', 'F', '0', '0' | 46463030 |
| Error check [H] | 'E', '1' (In accordance with LRC calculation) | 4531 |
| End | 'CR', 'LF' | 0D0A |

If the change was successful, the response message will be the same as the query.

[2] A sample query that makes a controller of axis No. 0 inch is shown below.

Query:

First time: 01 05 04 16 FF 00 E1 --- Inching movement

Second time: 01 05 04 16 00 00 E0 --- Restore normal status

| Field | ASCII mode 8-bit data | Converted ASCII code data [H] |
|-------------------|-------------------------------------------------------------------------------------------------------------------------|-------------------------------|
| Start | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '5' | 3035 |
| Start address [H] | '0', '4', '1', '6' | 30343046 |
| Changed data [H] | First time: 'F', 'F', '0', '0' Second time: '0', '0', '0', '0' (Restore the normal status.) | 46463030 30303030 |
| Error check [H] | First time: 'E', '1' (In accordance with LRC calculation) Second time: 'E', '0' (In accordance with LRC calculation) | 4531 4530 |
| End | 'CR', 'LF' | 0D0A |

If the change is successful, the response message will be the same as the query.

6.5.13 Jog- Command <<JOG->>

(1) Function

- The actuator performs either jog or inching operation.
If the jog- command (changed data FF00_H) is sent when the jog/inch switching command (6.5.9) is set to 0000_H (set to jog), the actuator will jog in the direction of home. The speed and acceleration/deceleration speed conform to the PIO jog speed set by user parameter No. 26 and rated acceleration/deceleration speed, respectively.
If the jog- command (changed data 0000_H) is sent or the jog+ command (6.5.12, changed data FF00_H) is sent while the actuator is moving, the actuator will decelerate to a stop.
- If the jog- command rising edge is set while the jog/inch switching command (6.5.9) is FF00_H (set to inching), the actuator will inch in the direction of home. The speed, travel and acceleration/deceleration speed conform to user parameter No. 26 (PIO jogging speed), user parameter No. 48 (PIO inching distance), and rated acceleration/deceleration speed, respectively.

(2) Query format

| Field | Number of characters | ASCII mode character string (fixed) | Remarks |
|-----------------------|----------------------|-------------------------------------|------------------------------------------------------------------------------------------------------|
| Header | 1 | ‘.’ | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) 00 _H when broadcast is specified |
| Function code [H] | 2 | ‘0’, ‘5’ | Write to a single coil DO. |
| Start address [H] | 4 | ‘0’, ‘4’, ‘1’, ‘7’ | Jog- command |
| Changed data [H] | 4 | Arbitrary | Jog- command: ‘F’, ‘F’, ‘0’, ‘0’ Normal: ‘0’, ‘0’, ‘0’, ‘0’ |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | ‘CR’, ‘LF’ | |
| Total number of bytes | 17 | | |

(3) Response

If the change is successful, the response message will be the same as the query.
If invalid data is sent, an exception response (refer to section 7) will be returned, or no response will be returned.

(4) Sample query

[1] A sample query that makes a controller of axis No. 0 jog is shown below.

Query: 01 05 04 17 EF 00 E0

| Field | ASCII mode 8-bit data | Converted ASCII code data [H] |
|-------------------|-----------------------------------------------|-------------------------------|
| Start | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '5' | 3035 |
| Start address [H] | '0', '4', '1', '7' | 30343137 |
| Changed data [H] | 'F', 'F', '0', '0' | 46463030 |
| Error check [H] | 'E', '0' (in accordance with LRC calculation) | 4530 |
| End | 'CR', 'LF' | 0D0A |

If the change was successful, the response message will be the same as the query.

[2] A sample query that makes a controller of axis No. 0 inch is shown below.

Query:

First time: 01 05 04 17 FF 00 E0 --- Inching movement

Second time: 01 05 04 17 00 00 DF --- Restore normal status

| Field | ASCII mode 8-bit data | Converted ASCII code data [H] |
|-------------------|-------------------------------------------------------------------------------------------------------------------------|-------------------------------|
| Start | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '5' | 3035 |
| Start address [H] | '0', '4', '1', '7' | 30343047 |
| Changed data [H] | First time: 'F', 'F', '0', '0' Second time: '0', '0', '0', '0' (Restore the normal status.) | 46463030 30303030 |
| Error check [H] | First time: 'E', '0' (in accordance with LRC calculation) Second time: 'D', 'F' (in accordance with LRC calculation) | 4530 4446 |
| End | 'CR', 'LF' | 0D0A |

If the change is successful, the response message will be the same as the query.

6.5.14 Start Positions 0 to 7 <<ST0 to ST7>> (Limited to solenoid valve mode)

(1) Function

The actuator moves to the specified position number position.

The movement command for start positions 0 to 7 is effective only when solenoid valve mode is selected.

The movement command is sent by enabling either one of ST0 to ST7 in “6.5.14 (5) Start address” (write new value FF00_H when 0000_H is set).

If a position other than the valid start positions is selected, “085: Moving position number error” will be generated.

Either level operation or edge operation can be selected using user parameter No. 27, “Movement command type.”

(2) Query format

| Field | Number of characters | ASCII mode character string (fixed) | Remarks |
|-----------------------|----------------------|-------------------------------------|------------------------------------------------------------------------------------------------------|
| Header | 1 | ‘.’ | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) 00 _H when broadcast is specified |
| Function code [H] | 2 | ‘0’, ‘5’ | Write to a single coil DO |
| Start address [H] | 4 | Arbitrary | Refer to 6.5.14 (5), “Start address.” |
| Changed data [H] | 4 | Arbitrary | *1 Operation command: ‘F’, ‘F’, ‘0’, ‘0’ Operation command: ‘0’, ‘0’, ‘0’, ‘0’ |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | ‘CR’, ‘LF’ | |
| Total number of bytes | 17 | | |

*1 If user parameter No. 27 “Movement command type” is set to “level operation, ” the actuator decelerates to a stop by overwriting FF00_H with 0000_H.

(3) Response

If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to section 7) will be returned, or no response will be returned.

(4) Query sample

A sample query that moves a controller of axis No. 0 to start position 2 is shown below.
Sample start position setting

| | | | | |
|---|-------|--------|------|------|
| 0 | 0.00 | 150.00 | 0.30 | 0.30 |
| 1 | 25.00 | 150.00 | 0.30 | 0.30 |
| 2 | 50.00 | 150.00 | 0.30 | 0.30 |
| 3 | 0.00 | 150.00 | 0.20 | 0.20 |

Fig.6.2

Query

First time 01 05 04 1D 00 00 D9 --- Write 0000_H to set the edge

Second time 01 05 04 1D FF 00 DA --- Movement command

| Field | ASCII mode 8-bit data | Converted ASCII code data [H] |
|-------------------|-------------------------------------------------------------------------------------------------------------------------|-------------------------------|
| Start | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '5' | 3035 |
| Start address [H] | '0', '4', '1', 'D' | 30343044 |
| Changed data [H] | First time: '0', '0', '0', '0' Second time: 'F', 'F', '0', '0' | 30303030 46463030 |
| Error check [H] | First time: 'D', '9' (In accordance with LRC calculation) Second time: 'D', 'A' (In accordance with LRC calculation) | 4439 4441 |
| End | 'CR', 'LF' | 0D0A |

If the change is successful, the response message will be the same as the query.

(5) Start address

| Address | Symbol | Name | Function |
|---------|--------|------------------|--------------------|
| 0418 | ST7 | Start position 7 | Move to position 7 |
| 0419 | ST6 | Start position 6 | Move to position 6 |
| 041A | ST5 | Start position 5 | Move to position 5 |
| 041B | ST4 | Start position 4 | Move to position 4 |
| 041C | ST3 | Start position 3 | Move to position 3 |
| 041D | ST2 | Start position 2 | Move to position 2 |
| 041E | ST1 | Start position 1 | Move to position 1 |
| 041F | ST0 | Start position 0 | Move to position 0 |

6.5.15 Load Cell Calibration Command <<CLBR>> --- A dedicated load cell must be connected.

(1) Function --- SCON-CA only

The dedicated load cell is calibrated.

The factory setting of your load cell is that the ON status corresponds to a no-load state. If you want to define the reference state as a condition where a work part (load) is installed, calibrate the load cell.

Also calibrate the load cell in other situations as necessary (readjustment, inspection, etc.).

(2) Query format


| Field | Number of characters | ASCII mode character string (fixed) | Remarks |
|-----------------------|----------------------|-------------------------------------|------------------------------------------------------------------------------------------------------|
| Header | 1 | ‘.’ | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) 00 _H when broadcast is specified |
| Function code [H] | 2 | ‘0’, ‘5’ | Write to a single coil DO |
| Start address [H] | 2 | ‘0’, ‘4’, ‘2’, ‘6’ | Load cell calibration command |
| Changed data [H] | 2 | Arbitrary | Calibration command: FF00 _H Normal operation: 0000 _H |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | ‘CR’, ‘LF’ | |
| Total number of bytes | 17 | | |

(3) Calibration procedure

- [1] Stop the actuator operation. (The load cell cannot be calibrated while the actuator is performing any axis operation or push-motion operation or being paused, in which case 0E1 (load cell calibration error) alarm generates.)
- [2] Turn this signal ON and keep it ON for at least 20 ms.
- [3] When the calibration is complete, the calibration complete signal (CEND of device status register 1 explained in 4.3.2 (12)) turns ON. After confirming that the CEND has turned ON, turn OFF the CLBR.
If the calibration was unsuccessful, a 0E1 (load cell calibration error) alarm generates.



Caution: Normal operation commands are not accepted while the CLBR is ON.

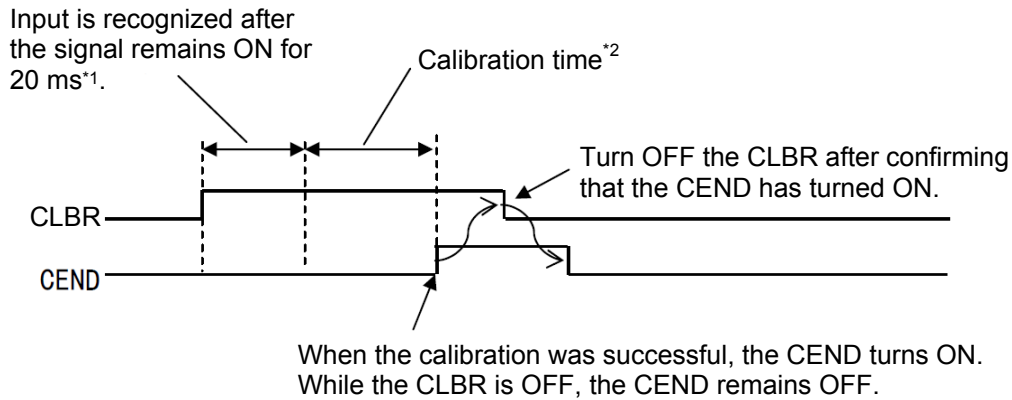

*1 If the CLBR is turned OFF during this period, calibration will not be performed because the signal is not yet recognized as having been input.

*2 If the CLBR is turned OFF during this period, an alarm will generate.

(4) Response

A response message to be sent following a successful change should be the same as the query. If any invalid data has been sent, an exception response (refer to 7) will be returned or no response will be returned at all.

(5) Example of use

Calibrate the dedicated load cell connected to controller axis 0.

Query 01 05 04 26 FF 00 D1

| Field | ASCII mode 8-bit data | Converted ASCII code data [H] |
|-------------------|-----------------------------------------------|-------------------------------|
| Start | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '5' | 3035 |
| Start address [H] | '0', '4', '2', '6' | 30343236 |
| Changed data [H] | 'F', ' ', 'F'; '0', '0' | 46463030 |
| Error check [H] | 'D', '1' (In accordance with LRC calculation) | 4431 |
| End | 'CR', 'LF' | 0D0A |

If the change is successful, the response message will be the same as the query.

6.5.16 PIO/Modbus Switching Setting <<PMSL>>

(1) Function

PIO external command signals can be enabled or disabled.

(2) Query format

| Field | Number of characters | ASCII mode character string (fixed) | Remarks |
|-----------------------|----------------------|-------------------------------------|------------------------------------------------------------------------------------------------------|
| Header | 1 | ‘:’ | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) 00 _H when broadcast is specified |
| Function code [H] | 2 | ‘0’, ‘5’ | Write to a single coil DO. |
| Start address [H] | 4 | ‘0’, ‘4’, ‘2’, ‘7’ | PIO/Modbus switching setting |
| Changed data [H] | 4 | Arbitrary | *1 Enable Modbus commands: ‘F’, ‘F’, ‘0’, ‘0’ Disable Modbus commands: ‘0’, ‘0’, ‘0’, ‘0’ |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | ‘CR’, ‘LF’ | |
| Total number of bytes | 17 | | |

*1 • Enable Modbus commands (ON) (disable PIO command): FF00_H
Operation via PIO signals is not possible.

• Disable Modbus commands (OFF) (enable PIO command): 0000_H
Operation via external PIO signals is possible.

Supplement If the Modbus command is enabled, the PIO status at change is maintained.
If the Modbus command is switched to disabled, the operation status changes according to the current PIO status. Note that even if the status of signals that operate via edge detection has been changed, edge detection is ignored.

(3) Precaution

- In the models equipped with operation model setting switch, it should be set to “PIO Command Valid” when it is set to AUTO mode, and “PIO Command Invalid” when set to MANU mode.
- On a non-PIO model, the default setting is “Disable PIO commands.”
- If IAI’s tool (teaching pendant or PC software) is connected, “Teaching modes 1, 2” and “Monitor modes 1, 2” are available as tool modes. The correspondence between these modes and PIO enable/disable specifications are as follows:
“Monitor modes 1, 2” → “Enable PIO commands”
“Teaching modes 1, 2” → “Disable PIO commands”

(4) Response

If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to section 7) will be returned, or no response will be returned.

(5) Query sample

A sample query that enables the Modbus command of the operation of a controller of axis No. 0 is shown below.

Query: 01 05 04 27 FF 00 D0

| Field | ASCII mode 8-bit data | Converted ASCII code data [H] |
|-------------------|-----------------------------------------------|-------------------------------|
| Start | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '5' | 3035 |
| Start address [H] | '0', '4', '2', '7' | 30343237 |
| Changed data [H] | 'F', 'F', '0', '0' | 46463030 |
| Error check [H] | 'D', '0' (in accordance with LRC calculation) | 4430 |
| End | 'CR', 'LF' | 0D0A |

If the change is successful, the response message will be the same as the query.

6.5.17 Deceleration Stop <<STOP>>

(1) Function

The actuator will start decelerating to a stop upon detection of the deceleration stop command (write FF00_H) rising edge.

(2) Query format

| Field | Number of characters | ASCII mode character string (fixed) | Remarks |
|-----------------------|----------------------|-------------------------------------|---------------------------------------------------------------------------------------------------------------------------------|
| Header | 1 | ‘.’ | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) 00 _H when broadcast is specified |
| Function code [H] | 2 | ‘0’, ‘5’ | Write to a single coil DO |
| Start address [H] | 4 | ‘0’, ‘4’, ‘2’, ‘C’ | Deceleration stop setting |
| Changed data [H] | 4 | Arbitrary | Deceleration stop command (ON): ‘F’, ‘F’, ‘0’, ‘0’ * The controller automatically resets the value to 0000 _H . |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | ‘CR’, ‘LF’ | |
| Total number of bytes | 17 | | |

(3) Response

If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to section 7) will be returned, or no response will be returned.

(4) Sample query

A sample query that sends the deceleration stop command to a controller of axis No. 0 is shown below.

Query: 01 05 04 2C FF 00 CB

| Field | ASCII mode 8-bit data | Converted ASCII code data [H] |
|-------------------|-----------------------------------------------|-------------------------------|
| Start | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '5' | 3035 |
| Start address [H] | '0', '4', '2', 'C' | 30343243 |
| Changed data [H] | 'F', 'F', '0', '0' | 46463030 |
| Error check [H] | 'C', 'B' (In accordance with LRC calculation) | 4342 |
| End | 'CR', 'LF' | 0D0A |

If the change is successful, the response message will be the same as the query.

6.5.18 Axis operation permission <<ENMV>> --- Servo Press Type Only

(1) Function

The setting can be switched on permission activated/inactivated.

(2) Query format

| Field | Number of characters | ASCII mode character string (fixed) | Remarks |
|-----------------------|----------------------|-------------------------------------|------------------------------------------------------------------------------------------------------|
| Header | 1 | ‘:’ | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) 00 _H when broadcast is specified |
| Function code [H] | 2 | ‘0’, ‘5’ | Write to a single coil DO |
| Start address [H] | 4 | ‘0’, ‘4’, ‘9’, ‘B’ | Axis operation permission setting |
| Changed data [H] | 4 | Arbitrary | Permission activated : FF00 _H Permission inactivated : 0000 _H . |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | ‘CR’, ‘LF’ | |
| Total number of bytes | 17 | | |

(3) Response

If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to section 7) will be returned, or no response will be returned.

(4) Sample query

Movement of the actuator connected to Axis No. 0 gets activated.

Query: 01 05 04 9B FF 00 5C

| Field | ASCII mode 8-bit data | Converted ASCII code data [H] |
|-------------------|-----------------------------------------------|-------------------------------|
| Start | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '5' | 3035 |
| Start address [H] | '0', '4', '9', 'B' | 30343942 |
| Changed data [H] | 'F', 'F', '0', '0' | 46463030 |
| Error check [H] | '5', 'C' (In accordance with LRC calculation) | 3543 |
| End | 'CR', 'LF' | 0D0A |

If the change is successful, the response message will be the same as the query.

6.5.19 Program Home Position Movement <<PHOM>> --- Servo Press Type Only

(1) Function

Raise the program home-return edge (write FF00_H under the condition of change data being 0000_H), and the movement will be made to the program home position set in each press program.

(2) Query format

| Field | Number of characters | ASCII mode character string (fixed) | Remarks |
|-----------------------|----------------------|-------------------------------------|------------------------------------------------------------------------------------------------------|
| Header | 1 | ‘.’ | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) 00 _H when broadcast is specified |
| Function code [H] | 2 | ‘0’, ‘5’ | Write to a single coil DO |
| Start address [H] | 4 | ‘0’, ‘4’, ‘9’, ‘C’ | Home-return movement setting |
| Changed data [H] | 4 | Arbitrary | Home-return movement execution: FF00 _H Normally : 0000 _H |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | ‘CR’, ‘LF’ | |
| Total number of bytes | 17 | | |

(3) Response

If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to section 7) will be returned, or no response will be returned.

(4) Sample query

Movement of the actuator connected to Axis No. 0 gets activated.

First time : 01 05 04 9C 00 00 5A...Write the 0000_H twice to raise the edge

Second time : 01 05 04 9C FF 00 5B...Movement command

| Field | ASCII mode 8-bit data | Converted ASCII code data [H] |
|-------------------|--------------------------------------------------------------------------------------------------------------------------|-------------------------------|
| Start | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '5' | 3035 |
| Start address [H] | '0', '4', '9', 'C' | 30343943 |
| Changed data [H] | First time : '0', '0', '0', '0' Second time: 'F', 'F', '0', '0' | 30303030 46463030 |
| Error check [H] | First time : '5', 'A' (In accordance with LRC calculation) Second time: '5', 'B' (In accordance with LRC calculation) | 3542 3541 |
| End | 'CR', 'LF' | 0D0A |

If the change is successful, the response message will be the same as the query.

6.5.20 Search Stop <<SSTP>> --- Servo Press Type Only

(1) Function

Setting can be switched whether to finish the press program or not after search operation is completed.

(2) Query format

| Field | Number of characters | ASCII mode character string (fixed) | Remarks |
|-----------------------|----------------------|-------------------------------------|------------------------------------------------------------------------------------------------------------------|
| Header | 1 | ‘.’ | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) 00 _H when broadcast is specified |
| Function code [H] | 2 | ‘0’, ‘5’ | Write to a single coil DO |
| Start address [H] | 4 | ‘0’, ‘4’, ‘9’, ‘D’ | Search operation stop setting |
| Changed data [H] | 4 | Arbitrary | Stopped after search operation: FF00 _H Not stopped after search operation: 0000 _H |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | ‘CR’, ‘LF’ | |
| Total number of bytes | 17 | | |

(3) Response

If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to section 7) will be returned, or no response will be returned.

(4) Sample query

After search of the actuator connected to Axis No. 0, press program will be stopped.

Query: 01 05 04 9D FF 00 5A

| Field | ASCII mode 8-bit data | Converted ASCII code data [H] |
|-------------------|-----------------------------------------------|-------------------------------|
| Start | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '5' | 3035 |
| Start address [H] | '0', '4', '9', 'D' | 30343944 |
| Changed data [H] | 'F', 'F', '0', '0' | 46463030 |
| Error check [H] | '5', 'A' (In accordance with LRC calculation) | 3541 |
| End | 'CR', 'LF' | 0D0A |

If the change is successful, the response message will be the same as the query.

6.5.21 Program compulsory finish <<FPST>> --- Servo Press Type Only

(1) Function

Raise the press program compulsory complete edge (write FF00_H under the condition of change data being 0000_H), and the press program will be compulsorily finished. While the change data retains FF00_H, the start command of the press program cannot be received.

(2) Query format

| Field | Number of characters | ASCII mode character string (fixed) | Remarks |
|-----------------------|----------------------|-------------------------------------|------------------------------------------------------------------------------------------------------|
| Header | 1 | ‘.’ | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) 00 _H when broadcast is specified |
| Function code [H] | 2 | ‘0’, ‘5’ | Write to a single coil DO |
| Start address [H] | 4 | ‘0’, ‘4’, ‘9’, ‘E’ | Program compulsory finish setting |
| Changed data [H] | 4 | Arbitrary | Program compulsory finish: FF00 _H Normally: 0000 _H |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | ‘CR’, ‘LF’ | |
| Total number of bytes | 17 | | |

(3) Response

If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to section 7) will be returned, or no response will be returned.

(4) Sample query

Press program of the actuator connected to Axis No. 0 will be compulsorily finished.

First time : 01 05 04 9E 00 00 58...Write the 0000H twice to raise the edge

Second time : 01 05 04 9E FF 00 59...Compulsoly finish

| Field | ASCII mode 8-bit data | Converted ASCII code data [H] |
|-------------------|--------------------------------------------------------------------------------------------------------------------------------|-------------------------------|
| Start | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '5' | 3035 |
| Start address [H] | '0', '4', '9', 'E' | 30343945 |
| Changed data [H] | First time : '0', '0', '0', '0' Second time: 'F', 'F', '0', '0' | 30303030 46463030 |
| Error check [H] | First time : '5', '8' (in accordance with CRC calculation) Second time: '5', '9' (in accordance with CRC calculation) | 3538 3539 |
| End | 'CR', 'LF' | 0D0A |

If the change is successful, the response message will be the same as the query.

6.5.22 Program Start <<PSTR>> --- Servo Press Type Only

(1) Function

Raise the program start edge (write FF00_H under the condition of change data being 0000_H), and the press program in the program number set in POSR Register will be executed.

(2) Query format

| Field | Number of characters | ASCII mode character string (fixed) | Remarks |
|-----------------------|----------------------|-------------------------------------|------------------------------------------------------------------------------------------------------|
| Header | 1 | ‘.’ | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) 00 _H when broadcast is specified |
| Function code [H] | 2 | ‘0’, ‘5’ | Write to a single coil DO |
| Start address [H] | 4 | ‘0’, ‘4’, ‘9’, ‘F’ | Program start setting |
| Changed data [H] | 4 | Arbitrary | Program start: FF00 _H Normally: 0000 _H . |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | ‘CR’, ‘LF’ | |
| Total number of bytes | 17 | | |

(3) Response

If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to section 7) will be returned, or no response will be returned.

(4) Sample query

Press program of the actuator connected to Axis No. 0 will be executed.

First time : 01 05 04 9F 00 00 57...Write the 0000H twice to raise the edge

Second time: 01 05 04 9F FF 00 58...Program executed

| Field | ASCII mode 8-bit data | Converted ASCII code data [H] |
|-------------------|-------------------------------------------------------------------------------------------------------------------------------|-------------------------------|
| Start | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '5' | 3035 |
| Start address [H] | '0', '4', '9', 'F' | 30343946 |
| Changed data [H] | First time: '0', '0', '0', '0' Second time: 'F', 'F', '0', '0' | 30303030 46463030 |
| Error check [H] | First time: '5', '7' (in accordance with CRC calculation) Second time: '5', '8' (in accordance with CRC calculation) | 3537 3538 |
| End | 'CR', 'LF' | 0D0A |

If the change is successful, the response message will be the same as the query.

6.6 Control Information Direct Writing (Used function code 06)

6.6.1 Writing to Registers

*) Please refer to
"6.2 ASCII Code Table."

(1) Function

These queries change (write) data in registers of a slave.

In case of broadcast, data of registers of the same address of all slaves is changed.

[Refer to the details of device controller register 1 in 4.3.2 (5).]

[Refer to the details of device controller register 2 in 4.3.2 (6).]

[Refer to the details of the position number command register and position movement specification register and program number command register (Servo Press) type in 4.3.2 (7).]

(2) Start address list

| Address | Symbol | Name | Byte |
|---------|--------|----------------------------------------------------------------------|------|
| 0D00 | DRG1 | Device control register 1 | 2 |
| 0D01 | DRG2 | Device control register 2 | 2 |
| 0D03 | POSR | Position number command register/ Program number command register | 2 |
| 9800 | POSR | Position movement command register | 2 |

The registers above are control command registers. The bits of these registers are assigned to input ports by PIO patterns when "PIO/Modbus Switch Status (PMSS) [refer to 4.3.2 (14)] is set to "disable Modbus commands (enable PIO commands). These registers can be rewritten when the Modbus commands are enabled (PIO commands are disabled).

(3) Query format

Specify the address and data of the register whose data is to be changed in the query message.
Data to be changed shall be specified as 16-bit data in the changed data area of the query.

| Field | Number of characters (Number of bytes) | ASCII mode fixed character string | Remarks |
|-----------------------|-------------------------------------------|-----------------------------------------|---------------------------------------------------------------------------------------------------------|
| Header | 1 | “:” | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) 00 _H when broadcast is specified |
| Function code [H] | 2 | “0”, “6” | Writing to registers |
| Start address [H] | 4 | Arbitrary | Refer to 6.6.1 (2), “Start address list.” |
| Changed data [H] | 4 | | 4.3.2 (5) to 4.3.2. (7), Refer to “List of changed data.” |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | “CR”, “LF” | |
| Total number of bytes | 17 | | |

(4) Response

If the change is successful, the response message will be the same as the query.

If invalid data is sent, an exception response (refer to section 7) will be returned, or no response will be returned.

(5) Query sample

Examples of different operations are shown in [1] to [3] below.

[1] A sample query that turns the servo of a controller of axis No. 0 on and then executes home return operation is performed.

Query

First time 01 06 0D 00 10 00 DC --- Servo ON

Second time 01 06 0D 00 10 10 CC --- Home return

| Field | ASCII mode 8-bit data | Converted ASCII code data [H] |
|-------------------|-------------------------------------------------------------------------------------------------------------------------|-------------------------------|
| Start | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '6' | 3036 |
| Start address [H] | '0', 'D', '0', '0' | 30443030 |
| Changed data [H] | First time: '1', '0', '0', '0' Second time: '1', '0', '1', '0' | 31303030 31303130 |
| Error check [H] | First time: 'D', 'C' (in accordance with CRC calculation) Second time: 'C', 'C' (in accordance with CRC calculation) | 4443 4343 |
| End | 'CR', 'LF' | 0D0A |

Note 1 Home return is not performed even if 1010_H is sent to change the data while the servo is OFF (refer to the timing chart at startup of each RC controller).

Note 2 To keep the previous status, send the previous status even if there is no change. As in the example above, keep the servo ON bit as 1 at home return as well.

If the change is successful, the response message will be the same as the query.

[2] Move to position No. 1 using the position movement specification register (address 9800_H).

Before this operation, perform the operation in example [1] above to complete a home return.

Query (Silent intervals are inserted before and after the query.)

01 06 98 00 00 01 60

| Field | ASCII mode 8-bit data | Converted ASCII code data [H] |
|-------------------|-----------------------------------------------|-------------------------------|
| Start | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '6' | 3036 |
| Start address [H] | '9', '8', '0', '0' | 39383030 |
| Changed data [H] | '0', '0', '0', '1' | 30303031 |
| Error check [H] | '6', '0' (in accordance with CRC calculation) | 3630 |
| End | 'CR', 'LF' | 0D0A |

Note As soon as a position number is written to this register, the actuator starts moving. The CSTR (start signal) is not required.

A response message to be sent following a successful change should be the same as the query.

- [3] Move to position No. 1 using the position number command register (address 0D03_H).
Before this operation, perform the operation in example [1] above to complete a home return.
Query (Silent intervals are inserted before and after the query.)

First time 01 06 0D 03 00 01 E8 --- Specify position No. 1

Second time 01 06 0D 00 10 00 DC--- Turn OFF the CSTR (start signal)

Third time 01 06 0D 00 10 08 D4--- Turn ON the CSTR (start signal)

| Field | ASCII mode 8-bit data | Converted ASCII code data [H] |
|-------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------|
| Start | ':' | 3A |
| Slave address [H] | '0', '1' | 3031 |
| Function code [H] | '0', '6' | 3036 |
| Start address [H] | First time: '0', 'D', '0', '3' Second time: '0', 'D', '0', '0' Third time: '0', 'D', '0', '0' | 30443033 30443030 30443030 |
| Changed data [H] | First time: '0', '0', '0', '1' Second time: '1', '0', '0', '0' Third time: '1', '0', '0', '8' | 30303031 31303030 31303038 |
| Error check [H] | First time: 'E', '8'(in accordance with CRC calculation) Second time: 'D', 'C'(in accordance with CRC calculation) Third time: 'D', '4'(in accordance with CRC calculation) | 4538 4443 4434 |
| End | 'CR', 'LF' | 0D0A |

Note To keep the previous status, send the previous status even if there is no change. As in the example above, keep the servo ON bit as 1 at home return as well.

If the change is successful, the response message will be the same as the query.

6.7 Positioning Data Direct Writing (Used function code 10)

6.7.1 Numerical Value Movement Command

*) Please refer to
"6.2 ASCII Code Table."

(1) Function

Specify the target position in PTP positioning operation using absolute coordinates. It is possible to command the actuator to move via numerical values by writing directly to the group of registers at addresses from 9900_H to 9908_H (can be set in one message).

Values of all registers, other than the control flag specification register (address: 9908_H), will become effective once the values are sent after the power is supplied. If there is no need to change the target position, positioning band, speed, acceleration/deceleration, push-current limiting value and control specification, therefore, each subsequent numerical movement command can be issued simply by writing a desired register that can effect an actual movement command based on changing of the applicable register alone (refer to "Start address list").

(2) Start address list

This group of registers is used to move the actuator by specifying the target position coordinates, positioning band, speed, push-current limiting value, control flag specification and so on as numerical values.

Data of start addresses in the list (6 registers in total) can be changed with one transmission.

| Address [H] | Symbol | Name | Sign | Able to effect an actual movement command by changing the applicable register alone | Register size | Byte size | Unit |
|-------------|--------|----------------------------------------------------|------|-------------------------------------------------------------------------------------|---------------|-----------|-------------|
| 9900 | PCMD | Target position specification register | ○ | ○ | 2 | 4 | 0.01 mm |
| 9902 | INP | Positioning band specification register | | × | 2 | 4 | 0.01 mm |
| 9904 | VCMD | Speed specification register | | ○ | 2 | 4 | 0.01 mm/sec |
| 9906 | ACMD | Acceleration/deceleration specification register | | ○ | 1 | 2 | 0.01 G |
| 9907 | PPOW | Push-current limiting value specification register | | ○ | 1 | 2 | % |
| 9908 | CTLF | Control flag specification register | | × Initialization after each movement | 1 | 2 | - |

(3) Query format

1 register = 2 bytes = 16-bit data

| Field | Number of characters (number of bytes) | ASCII mode fixed character string | Remarks |
|-------------------------|-------------------------------------------|--------------------------------------------------------|----------------------------------------------------------------------------------------------------|
| Header | 1 | “.” | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) 00 _H if broadcast is specified |
| Function code [H] | 2 | “1”, “0” | Numerical value specification |
| Start address [H] | 4 | Arbitrary | Refer to 6.7.1. (2), “Start address list” |
| Number of registers [H] | 4 | Arbitrary | Refer to 6.7.1 (2), “Start address list” |
| Number of bytes [H] | 2 | In accordance with the number of registers above | Enter the value twice as large as the number of registers specified above |
| Changed data 1 [H] | 4 | | Refer to 6.7.1 (2), “Start address list” |
| Changed data 2 [H] | 4 | | Refer to 6.7.1 (2), “Start address list” |
| Changed data 3 [H] | 4 | | Refer to 6.7.1 (2), “Start address list” |
| : | : | | |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | “CR”, “LF” | |
| Total number of bytes | Up to 256 | | |

(4) Response format

When normally changed, the response message responds with a copy of the query message excluding the number of bytes and changed data.

| Field | Number of characters (number of bytes) | ASCII mode fixed character string | Remarks |
|-------------------------|-------------------------------------------|-----------------------------------------|----------------------------------------------------------------------------------------------------|
| Header | 1 | “.” | |
| Slave address [H] | 2 | Arbitrary | Axis number + 1 (01 _H to 10 _H) 00 _H if broadcast is specified |
| Function code [H] | 2 | “1”, “0” | Numerical value specification |
| Start address [H] | 4 | Arbitrary | Refer to 6.7.1 (2), “Start address list” |
| Number of registers [H] | 4 | Arbitrary | Refer to 6.7.1 (2), “Start address list” |
| Error check [H] | 2 | LRC calculation result | |
| Trailer | 2 | “CR”, “LF” | |
| Total number of bytes | 17 | | |

(5) Detailed explanation of registers

■ Target position specification register (PCMD)

This register specifies the target position in PTP positioning operation using absolute coordinates. The value of this register is set in units of 0.01 mm in a range of -999999 to 999999 (FFF0BDC1_H^(Note 1) to 00F423F_H). When the absolute coordinate is indicated, operation starts with 0.2mm in front^(Note 2) of the soft limit setting value as the target position if the setting of the parameter exceeds the soft limit. The actuator will start moving when the lower word of this register (symbol: PCMD, address: 9900H) is rewritten. In other words, **a numerical movement command can be issued simply by writing a target position in this register.**

Note 1 To set a negative value, use a two's complement.

Note 2 For a revolution axis set to Index Mode, the soft limit setting value is the target position.

■ Positioning band register (INP)

This register is used in two different ways depending on the type of operation.

The first way is the normal positioning operation, where it specifies the allowable difference between the target position and current position to be used in the detection of position complete.

The second way is the push-motion operation, where it specifies the push-motion band. The value of this register is set in units of 0.01 mm in a range of 1 to 999999 (1_H to 000F423F_H). Whether the normal operation or push-motion operation is specified by the applicable bit in the control flag specification register as explained later.

Changing this register alone will not start actuator movement.



Caution: It is necessary that the positioning band is at or more than the value figured out with the formulas below.

- For Servomotor: Actuator Lead Length ÷ Encoder Pulse
 - For Pulse Motor: Actuator Lead Length ÷ Encoder Pulse × 3
- Apply the servomotor formula for RCP6 Actuator

■ Speed specification register (VCMD)

This register specifies the moving speed. The value of this register is set in units of 0.01 mm/sec in a range of 1 to 999999 (1_H to 000F423F_H). If the specified value exceeds the maximum speed set by a parameter, an alarm will generate the moment a movement start command is issued.

The actuator will start moving when this lower word of this register is rewritten. In other words, the speed can be changed while the actuator is moving, simply by rewriting this register.

■ Acceleration/deceleration specification register (ACMD)

This register specifies the acceleration or deceleration. The value of this register is set in units of 0.01 G in a range of 1 to 300 (1_H to 012C_H). If the specified value exceeds the maximum acceleration or deceleration set by a parameter, an alarm will generate the moment a movement start command is issued.

The actuator will start moving when this register is rewritten. In other words, the acceleration/deceleration can be changed while the actuator is moving, simply by rewriting this register.

■ Push-current limiting value (PPOW)

Set the current limit during push-motion operation in PPOW. Set an appropriate value by referring to the table below.

| Actuator model name | Pushable range [%] | Settable range (input value) [H] |
|-----------------------------------|----------------------------|----------------------------------|
| Actuator other than RCS2-RA13R | 20 to 70 ^(Note) | 33 to B2 |
| RCS2-RA13R | 20 to 200 | 33 to 1FE |

Note The setting ranges may vary depending on the actuator.

[For details, refer to the IAI catalog or operation manual of each actuator.]

The actuator will start moving when this register is rewritten. In other words, the current limiting value can be changed during push-motion operation simply by rewriting this register.

Sample push-motion current setting

● When setting the current to 20%

$255 (100\%) \times 0.2 (20\%) = 51 \rightarrow 33_{\text{H}}$ (convert into hexadecimal number)

■ Control Flag Specification Register (CTLF)

Set the method of operation.

If push-motion operation or incremental operation (pitch feed) is selected, set this register every time a movement command is issued. (This is because the register will be overwritten with the default value every time the actuator moves.)

CTLF bit structure

| | 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 | |
|-----|----|----|------|------|----|----|---|---|------|------|------|------|-----|-----|------|---|-----|
| MSB | - | - | NTC1 | NTC0 | - | - | - | - | MOD1 | MOD0 | GSL1 | GSL0 | INC | DIR | PUSH | - | LSB |

Bit 1 (PUSH) = 0: Normal operation (default)

1: Push-motion operation

Bit 2 (DIR) = 0: The direction of push-motion operation after completion of approach is defined as the forward direction (default).

1: The direction of push-motion operation after completion of approach is defined as the reverse direction.

This bit is used to calculate the direction of final stop position from PCMD. If this bit is set incorrectly, therefore, the target position will deviate from the specified position by a distance corresponding to " $2 \times \text{INP}$," as shown in Fig. 6.3 below.

If bit 1 is set to 0, the setting of this bit is invalid.

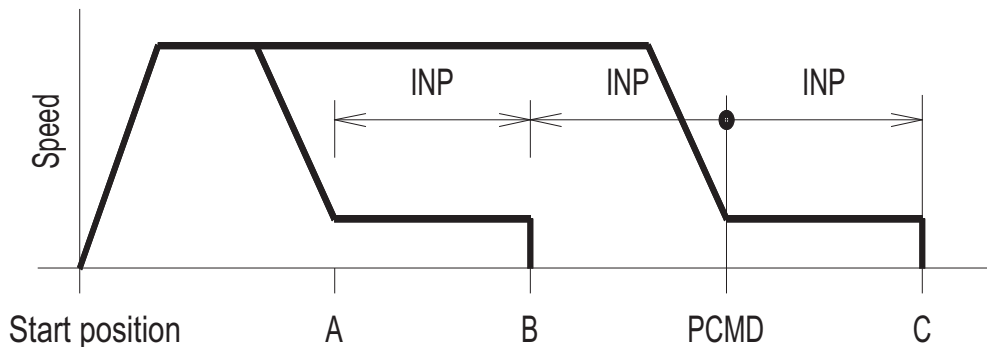


Fig. 6.3 Operating Direction in Push-motion Operation

Bit 3 (INC) = 0: Normal operation (default)

1: Incremental operation (pitch feed)

Setting this bit to 1 will enable the actuator to operate relative to the current position.

In this operation, the actuator behaves differently between normal operation and push-motion operation (CTLF bit 1). While the travel is calculated with respect to the target position (PCMD) in normal operation, it is calculated relative to the current position in push-motion operation (when bit 1 = 1).

Here, since relative coordinate calculation involves adding up pulses in mm, followed by conversion, unlike a calculation method involving addition after pulse conversion, **“repeated relative movements will not cause position deviation as a result of cumulative errors corresponding to fraction pulses that are not divisible with certain lead settings”.**

Bit 4 (GSL0), 5 (GSL1) = Refer to the table below.

(ACON-CA/CB/CYB and SCON-CA/CAL/CB/Servo Press Type only)

Do not attempt to change the number from 0 for those other than the models above.

Doing so may cause an error in operation.

| GSL1 | GSL0 | Function |
|------|------|-----------------------------------|
| 0 | 0 | Select parameter set 0 (default). |
| 0 | 1 | Select parameter set 1 |
| 1 | 0 | Select parameter set 2 |
| 1 | 1 | Select parameter set 3 |

You can register a maximum of four servo gain parameter sets consisting of six parameters and move the actuator to each position by selecting a different parameter set every time. [For details, refer to the operation manual for your controller.]

Bit 6 (MOD0), 7 (MOD1) = Refer to the table below.

(ACON-C/CY/SE/CA/CB/CYB, DCON-CA/CB/CYB, PCON-CA/CFA/CB/CFB/CYB, SCON-C/CA/CAL/CB and ERC3 only, and SCON Servo Press Type is not applicable)

| MOD1 | MOD0 | Function |
|------|------|-----------------------------|
| 0 | 0 | Trapezoid pattern (default) |
| 0 | 1 | S-motion |
| 1 | 0 | Primary delay filter |
| 1 | 1 | Cannot be used. |

These signals are used to select the acceleration/deceleration pattern characteristics. Set one of the patterns before issuing an actuator movement command. [For details, refer to the operation manual for your controller.]

Bit 12 (NTC0), 13 (NTC1) = Refer to the table below.

(ACON-CA/CB/CYB and SCON-CA/CAL/CB only, and SCON Servo Press Type is not applicable)

| NTC1 | NTC0 | Function |
|------|------|-----------------------------------------|
| 0 | 0 | Do not use vibration control (default). |
| 0 | 1 | Select parameter set 1 |
| 1 | 0 | Select parameter set 2 |
| 1 | 1 | Select parameter set 3 |

When vibration control is used, you can register a maximum of three parameter sets and move the actuator to each position by selecting a different parameter set every time. [For details, refer to the operation manual for your controller.]

(6) Example of use

Examples of different operations are shown in [1] to [7] below.

[1] Move by changing the target position. (All data other than the target position are the default values of their respective parameters.)

Conditions: The operation conditions conform to the default speed, default acceleration/deceleration and default positioning band set by the controller's user parameters. Only the target position is changed to move the actuator.

Supplement: Controller's user parameters

- Default speed (parameter No. 8) → Maximum speed of the applicable actuator as specified in the catalog
- Default acceleration/deceleration (parameter No. 9) → Rated acceleration of the applicable actuator as specified in the catalog
- Default positioning band (parameter No. 10) → Default value = 0.1 mm

Write the target position specification register (9900_H) (Example 1)



Start of movement

(Example 1) Target position: 50 mm

| Target position [mm] | Positioning band [mm] | Speed [mm/s] | Acceleration/deceleration [G] | Push [%] | Control flag |
|----------------------|-----------------------|--------------|-------------------------------|----------|--------------|
| 50 | Need not be set. | | | | |

■ Query : 01 10 9900 0002 04 0000 1388 B5[CR][LF]

■ Response : 01 10 9900 0002 54[CR][LF]

--- The query message is copied, except for the number of bytes and new data, and returned as a response.

■ Breakdown of Query Message

| Field | ASCII mode fixed character string | Converted ASCII code data [H] | Remarks |
|-----------------------|-----------------------------------|-------------------------------|-------------------------------------------------------------------------------------|
| Header | ':' | 3A | |
| Slave address | '0', '1' | 3031 | Axis number + 1 |
| Function code | '1', '0' | 3130 | |
| Start address | '9', '9', '0', '0' | 39393030 | The start address is the target position specification register 9900 _H . |
| Number of registers | '0', '0', '0', '2' | 30303032 | Specify 9900 _H through 9901 _H as the addresses to be written. |
| Number of bytes | '0', '4' | 3034 | 2 (registers) × 2 = 4 (bytes) → 4 _H |
| | '0', '0', '0', '0' | 30303030 | |
| Changed data 2 [H] | '1', '3', '8', '8' | 31333838 | 50 [mm] × 100 = 5000 → 1388 _H |
| Error check | 'B', '5' | 4235 | LRC checksum calculation result → B5 _H |
| Trailer | 'CR', 'LF' | 0D0A | |
| Total number of bytes | 27 | | |

[2] Move by changing the target position. (as well as data other than the target position).

Conditions: Want to move the actuator by changing the target position, speed and acceleration/deceleration every time.

Write the target position specification register (9900_H) through acceleration/deceleration specification register (9906_H)^(Example 2)



Start of movement

(Example 2) Target position: 50 mm

| Target position [mm] | Positioning band [mm] | Speed [mm/s] | Acceleration/deceleration [G] | Push [%] | Control flag |
|----------------------|-----------------------|--------------|-------------------------------|------------------|--------------|
| 50 | 0.1 | 100 | 0.3 | Need not be set. | |

■ Query : 01 10 9900 0007 0E 0000 1388 0000 000A 0000 2710 001E 47[CR][LF]

■ Response : 01 10 9900 0007 4F[CR][LF]

--- The query message is copied, except for the number of bytes and new data, and returned as a response.

■ Breakdown of Query Message

| Field | ASCII mode fixed character string | Converted ASCII code data [H] | Remarks |
|---------------------------------------------------------------|-----------------------------------|-------------------------------|-------------------------------------------------------------------------------------|
| Header | ':' | 3A | |
| Slave address | '0', '1' | 3031 | Axis number + 1 |
| Function code | '1', '0' | 3130 | |
| Start address | '9', '9', '0', '0' | 39393030 | The start address is the target position specification register 9900 _H . |
| Number of registers | '0', '0', '0', '7' | 30303039 | Specify 9900 _H through 9906 _H as the addresses to be written. |
| Number of bytes | '0', 'E' | 3132 | 7 (registers) × 2 = 14 (bytes) → E _H |
| New data 1, 2 (target position) Input unit (0.01 mm) | '0', '0', '0', '0' | 30303030 | All upper bits of the 32-bit data are 0. |
| | '1', '3', '8', '8' | 31333838 | 50 [mm] × 100 = 5000 → 1388 _H |
| New data 3, 4 (Positioning band) Input unit (0.01 mm) | '0', '0', '0', '0' | 30303030 | All upper bits of the 32-bit data are 0. |
| | '0', '0', '0', 'A' | 30303041 | 0.1 [mm] × 100 = 10 → 000A _H |
| New data 5, 6 (Speed) Input unit (0.01 mm/sec) | '0', '0', '0', '0' | 30303030 | All upper bits of the 32-bit data are 0. |
| | '2', '7', '1', '0' | 32373130 | 100 [mm/s] × 100 = 10000 → 2710 _H |
| New data 7 (Acceleration/deceleration) Input unit (0.01 G) | '0', '0', '1', 'E' | 30303145 | 0.3 [G] × 100 = 30 → 001E _H |
| Error check | '4', '7' | 3437 | LRC checksum calculation result → 47 _H |
| Trailer | 'CR', 'LF' | 0D0A | |
| Total number of bytes | 47 | | |

[3] Change the speed while the actuator is moving.

Conditions: Change the target position, speed and acceleration/deceleration each time the actuator is moved, with the actuator speed changed at a given time during movement.

Write the target position specification register (9900_H) through acceleration/deceleration specification register (9906_H)^(Example 2)



Start of movement



Write the speed specification registers (9904_H and 9905_H)^(Example 3)



The actuator continues with the normal operation at the new speed

(Example 3) Change the speed from 100 mm/s to 50 mm/s while the actuator is moving.

| Target position [mm] | Positioning band [mm] | Speed [mm/s] | Acceleration/ deceleration [G] | Push [%] | Control flag |
|-------------------------|--------------------------|-----------------|--------------------------------------|------------------|-----------------|
| 50 | 0.1 | 100 → 50 | 0.3 | Need not be set. | |

- (1) Start the movement at a speed of 100 mm/s. [Refer to Example [2], "Move by changing the speed" above.]

■ Query : 01 10 9900 0007 0E 0000 1388 0000 000A 0000 2710 001E 47[CR][LF]

■ Response : 01 10 9900 0007 4F[CR][LF]

- (2) Change the speed to 50 mm/s.

■ Query : 01 10 9904 0002 04 0000 1388 B1[CR][LF]

■ Response : 01 10 9904 0002 50[CR][LF]

--- The query message is copied, except for the number of bytes and new data, and returned as a response.

- Breakdown of Query Message (Change the speed to 50 mm/s. [Refer to the above example for the query message used to start the movement at 100 mm/s.]

| Field | ASCII mode fixed character string | Converted ASCII code data [H] | Remarks |
|------------------------|--------------------------------------|----------------------------------|-------------------------------------------------------------------------------------|
| Header | ':' | 3A | |
| Slave address | '0', '1' | 3031 | Axis number + 1 |
| Function code | '1', '0' | 3130 | |
| Start address | '9', '9', '0', '4' | 39393034 | The start address is the target position specification register 9904 _H . |
| Number of registers | '0', '0', '0', '2' | 30303032 | Specify 9904 _H through 9905 _H as the addresses to be written. |
| Number of bytes | '0', '4' | 3034 | 2 (registers) × 2 = 4 (bytes) → 4 _H |
| Changed data 5, 6 [H] | '0', '0', '0', '0' | 30303030 | All upper bits of the 32-bit data are 0. |
| Input unit (0.01 mm/s) | '1', '3', '8', '8' | 31333838 | 50 [mm] × 100 = 5000 → 1388 _H |
| Error check | 'B', '1' | 4231 | LRC check calculation result → B1 _H |
| Trailer | 'CR', 'LF' | 0D0A | |
| Total number of bytes | 27 | | |

[4] Move in the incremental (pitch feed) mode.

Conditions: The operation conditions conform to the default speed, default acceleration/deceleration and default positioning band set by the controller's user parameters. Only the pitch width is changed to move the actuator.

Write the target position specification register (9900_H) through control flag specification register (9908_H: Incremental setting) (Example 4)



Start of movement

Supplement: Addresses 9900_H and 9908_H alone cannot be changed in a single data transmission. Since all addresses are sequential, send two messages if 9900_H and 9908_H alone are changed.
If you want to send only one message, write all addresses from 9900_H to 9908_H.

(Example 4) Move in the incremental mode by setting the pitch to 10 mm.

| Pitch [mm] | Positioning band [mm] | Speed [mm/s] | Acceleration/ deceleration [G] | Push [%] | Control flag |
|---------------|-----------------------------|-----------------|--------------------------------------|-------------|---------------------------|
| 10 | 0.1 | 100 | 0.3 | 0 | Incremental (bit3 = 1) |

■ Query: 01 10 9900 0009 12 0000 03E8 0000 000A 0000 2710 001E 0000 0008 E9[CR][LF]

■ Response: 01 10 9900 0009 4D[CR][LF]

-- The query message is copied, except for the number of bytes and new data, and returned as a response.

■ Breakdown of Query Message

| Field | ASCII mode fixed character string | Converted ASCII code data [H] | Remarks |
|-----------------------------------------------|-----------------------------------------|-------------------------------------|-------------------------------------------------------------------------------------|
| Header | ':' | 3A | |
| Slave address | '0', '1' | 3031 | Axis No. 0 + 1 |
| Function code | '1', '0' | 3130 | |
| Start address | '9', '9', '0', '0' | 39393030 | The start address is the target position specification register 9900 _H . |
| Number of registers | '0', '0', '0', '9' | 30303039 | Specify 9900 _H through 9908 _H as the addresses to be written. |
| Number of bytes | '1', '2' | 3132 | 9 (registers) × 2 = 18 (bytes) → 12 _H |
| Changed data 1, 2 (target position) | '0', '0', '0', '0' | 30303030 | All upper bits of the 32-bit data are 0. |
| Input unit (0.01 mm) | '0', '3', 'E', '8' | 30334538 | 10 [mm] × 100 = 1000 → 03E8 _H |
| Changed data 3, 4 (positioning band) | '0', '0', '0', '0' | 30303030 | All upper bits of the 32-bit data are 0. |
| Input unit (0.01 mm) | '0', '0', '0', 'A' | 30303041 | 0.1 [mm] × 100 = 10 → 000A _H |
| Changed data 5, 6 (speed) | '0', '0', '0', '0' | 30303030 | All upper bits of the 32-bit data are 0. |
| Input unit (0.01 mm/sec) | '2', '7', '1', '0' | 32373130 | 100 [mm/s] × 100 = 10000 → 2710 _H |
| Changed data 7 (acceleration/deceleration) | '0', '0', '1', 'E' | 30303145 | 0.3 [G] × 100 = 30 → 001E _H |
| Input unit (0.01 G) | | | |
| Changed data 8 (push) | '0', '0', '0', '0' | 30303030 | 0 [%] → 0 _H |
| Input unit (%) | | | |
| Changed data 9 (control flag) | '0', '0', '0', '8' | 30303038 | (Incremental setting) 1000b → 0008 _H |
| Error check | 'E', '9' | 4539 | LRC check calculation result → E9 _H |
| Trailer | 'CR', 'LF' | 0D0A | |
| Total number of bytes | 55 | | |

[5] Change the speed during incremental movement (pitch feed).

Conditions: Change the target position, speed and acceleration/deceleration each time the actuator is moved, with the positioning band changed at a given time during movement.

Write the target position specification register (9900_H) through control flag specification register (9908_H: Incremental setting) ^(Example 4)



Start of incremental movement



Write the speed specification register (9904_H) through control flag specification register (9908_H: Incremental setting) ^(Example 5)



The actuator continues with the incremental movement at the new speed.

Supplement: After the control flag specification register (9908_H) is set, the register will return to the default value (0_H: Normal movement) once the actuator starts moving. Accordingly, you must set the control flag specification register (9908_H) and send it again if another incremental or push-motion operation is to be performed.

(Example 5) Change the speed from 100 mm/s to 50 mm/s while the actuator is moving.

| Pitch [mm] | Positioning band [mm] | Speed [mm/s] | Acceleration/ deceleration [G] | Push [%] | Control flag |
|---------------|-----------------------------|-----------------|--------------------------------------|-------------|---------------------------|
| 10 | 0.1 | 100 → 50 | 0.3 | 0 | Incremental (bit3 = 1) |

- (1) Start moving at a speed of 100 mm/s. [Refer to Example [4], “Moving in the incremental (pitch feed) mode” above.]

■ Query : 01 10 9900 0009 12 0000 03E8 0000 000A 0000 2710 001E 0000 0008 E9[CR][LF]

■ Response : 01 10 9900 0009 4D[CR][LF]

- (2) Change the speed to 50 mm/s.

■ Query : 01 10 9904 0005 0A 0000 1388 001E 0000 0008 82[CR][LF]

■ Response: 01 10 9904 0005 4D[CR][LF]

--- The query message is copied, except for the number of bytes and new data, and returned as a response.

- Breakdown of Query Message (Change the speed to 50 mm/s. [Refer to the above example for the query message used to start the movement at 100 mm/s.]

| Field | ASCII mode fixed character string | Converted ASCII code data [H] | Remarks |
|----------------------------------------------------------------------|-----------------------------------------|-------------------------------------|-------------------------------------------------------------------------------------|
| Header | ‘.’ | 3A | |
| Slave address | ‘0’, ‘1’ | 3031 | Axis No. 0 + 1 |
| Function code | ‘1’, ‘0’ | 3130 | |
| Start address | ‘9’, ‘9’, ‘0’, ‘4’ | 39393034 | The start address is the target position specification register 9904 _H . |
| Number of registers | ‘0’, ‘0’, ‘0’, ‘5’ | 30303032 | Specify 9904 _H through 9908 _H as the addresses to be written. |
| Number of bytes | ‘0’, ‘A’ | 3034 | 5 (registers) × 2 = 10(bytes) → A _H |
| Changed data 1, 2 (target position) Input unit (0.01 mm) | ‘0’, ‘0’, ‘0’, ‘0’ | 30303030 | All upper bits of the 32-bit data are 0. |
| | ‘1’, ‘3’, ‘8’, ‘8’ | 31333838 | 50 [mm/s] × 100 = 5000 → 1388 _H |
| Changed data 7 (acceleration/deceleration) Input unit (0.01 G) | ‘0’, ‘0’, ‘1’, ‘E’ | 30303145 | 0.3 [G] × 100 = 30 → 001E _H |
| Changed data 8 (push) Input unit (%) | ‘0’, ‘0’, ‘0’, ‘0’ | 30303030 | 0 [%] → 0 _H |
| Changed data 9 (control flag) | ‘0’, ‘0’, ‘0’, ‘8’ | 30303038 | (Incremental setting) 1000b → 0008 _H |
| Error check | ‘8’, ‘2’ | 3832 | LRC check calculation result → 82 _H |
| Trailer | ‘CR’, ‘LF’ | 0D0A | |
| Total number of bytes | 39 | | |

[6] Perform a push-motion operation. (changing pushing force during push-operation)

Conditions: Perform push-motion operation by changing the push force at a desired time while the actuator is pushing the work part.

Write the target position specification register (9900_H) through control flag specification register (9908_H: Push-motion setting) ^(Example 6)



Start push-motion operation



Write the push-current limit specification register (9907_H) through control flag specification register (9908_H: Push-motion setting) ^(Example 7)



The actuator continues with the push-motion operation with the new push force

(Example 6) Perform a push-motion operation for 20 mm from the 50-mm position at a current-limiting value of 70%.

| Target position [mm] | Positioning band [mm] | Speed [mm/s] | Acceleration/deceleration [G] | Push [%] | Control flag |
|----------------------|-----------------------|--------------|-------------------------------|----------|--------------------------------------------------|
| 50 | 20 | 100 | 0.3 | 70 | Push-motion operation (bit1 = 1, bit2 = 0, 1) |

■ Query: 01 10 9900 0009 12 0000 1388 0000 07D0 0000 2710 001E 00B2 0006 BC[CR][LF]

■ Response: 01 10 9900 0009 4D[CR][LF]

--- The query message is copied, except for the number of bytes and new data, and returned as a response.

■ Breakdown of Query Message

| Field | ASCII mode fixed character string | Converted ASCII code data [H] | Remarks |
|------------------------------------------------------------------|-----------------------------------|-------------------------------|-------------------------------------------------------------------------------------|
| Header | ‘.’ | 3A | |
| Slave address | ‘0’, ‘1’ | 3031 | Axis No. 0 + 1 |
| Function code | ‘1’, ‘0’ | 3130 | |
| Start address | ‘9’, ‘9’, ‘0’, ‘0’ | 39393030 | The start address is the target position specification register 9900 _H . |
| Number of registers | ‘0’, ‘0’, ‘0’, ‘9’ | 30303039 | Specify 9900 _H through 9908 _H as the addresses to be written. |
| Number of bytes | ‘1’, ‘2’ | 3132 | 9 (registers) × 2 = 18 (bytes) → 12 _H |
| New data 1, 2 (target position) Input unit (0.01 mm) | ‘0’, ‘0’, ‘0’, ‘0’ | 30303030 | All upper bits of the 32-bit data are 0. |
| | ‘1’, ‘3’, ‘8’, ‘8’ | 31333838 | 50 [mm] × 100 = 5000 → 1388 |
| New data 3, 4 (positioning band) Input unit (0.01 mm) | ‘0’, ‘0’, ‘0’, ‘0’ | 30303030 | All upper bits of the 32-bit data are 0. |
| | ‘0’, ‘7’, ‘D’, ‘0’ | 30374430 | 20 [mm] × 100 = 2000 → 07D0 _H |
| New data 5, 6 (speed) Input unit (0.01 mm/sec) | ‘0’, ‘0’, ‘0’, ‘0’ | 30303030 | All upper bits of the 32-bit data are 0. |
| | ‘2’, ‘7’, ‘1’, ‘0’ | 32373130 | 100 [mm/s] × 100 = 10000 → 2710 _H |
| New data 7 (acceleration/deceleration) Input unit (0.01 G) | ‘0’, ‘0’, ‘1’, ‘E’ | 30303145 | 0.3 [G] × 100 = 30 → 001E _H |
| New data 8 (push) Input unit (%) | ‘0’, ‘0’, ‘B’, ‘2’ | 30304232 | 70 [%] → B2 _H |
| New data 9 (control flag) | ‘0’, ‘0’, ‘0’, ‘6’ | 30303036 | (Push setting) 1000b → 0006 _H |
| Error check | ‘B’, ‘C’ | 4243 | LRC check calculation result → BC _H |
| Trailer | ‘CR’, ‘LF’ | 0D0A | |
| Total number of bytes | 55 | | |

(Example 7) Change the push current limit from 70% to 50% during a push-motion operation.

| Target position [mm] | Positioning band [mm] | Speed [mm/s] | Acceleration/ deceleration [G] | Push [%] | Control flag |
|-------------------------|--------------------------|-----------------|--------------------------------------|-------------|--------------------------------------------------|
| 50 | 20 | 100 | 0.3 | 70 → 50 | Push-motion operation (bit1 = 1, bit2 = 1) |

■ Query: 01 10 9907 0002 04 007F 0006 C4[CR][LF]

■ Response: 01 10 9907 0002 4D[CR][LF]

--- The query message is copied, except for the number of bytes and new data, and returned as a response.

■ Breakdown of Query Message

| Field | ASCII mode fixed character string | Converted ASCII code data [H] | Remarks |
|-----------------------------------------|-----------------------------------------|-------------------------------------|-------------------------------------------------------------------------------------|
| Header | ':' | 3A | |
| Slave address | '0', '1' | 3031 | Axis No. 0 + 1 |
| Function code | '1', '0' | 3130 | |
| Start address | '9', '9', '0', '7' | 39393037 | The start address is the target position specification register 9907 _H . |
| Number of registers | '0', '0', '0', '2' | 30303032 | Specify 9907 _H through 9908 _H as the addresses to be written. |
| Number of bytes | '0', '4' | 3034 | 2 (registers) × 2 = 4 (bytes) → 4 _H |
| Changed data 8 (push) Input unit (%) | '0', '0', '7', 'F' | 30303746 | 50 [%] → 7F _H |
| Changed data 9 (control flag) | '0', '0', '0', '6' | 30303036 | (Push setting) 1000b → 0006 _H |
| Error check | 'C', '4' | 4334 | LRC check calculation result → C4 _H |
| Trailer | 'CR', 'LF' | 0D0A | |
| Total number of bytes | 27 | | |

[7] Note (changing positioning band during movement)

The positioning band cannot be changed while the actuator is moving.

Conditions: Change the target position, speed and acceleration/deceleration each time the actuator is moved, with the positioning band changed at a given time during movement.
(Cannot be changed. If data is written, the data is reflected in the next positioning.)

Write the target position specification register (9900_H) through acceleration/deceleration specification register (9906_H)



Start normal operation



Write the positioning band specification registers (9902_H and 9903_H)



The actuator continues with the normal operation at the original positioning band setting

Supplement: Writing the positioning band specification registers alone cannot effect an actual movement command.

Therefore, the data changed by writing the positioning band specification registers (9902_H and 9903_H) will become effective when the next movement command is executed.

6.7.2 Writing Position Table Data

(1) Function

Position table data can be changed using this query.

Every time an access is made to the start address list (address +0000_H to +000E_H), it is read out of the non-volatile memory in the unit of 1 position data, and gets stored to the non-volatile memory (EEPROM, FeRAM) after the writing is executed. Check the limit for number of writing from the basic specifications described in an instruction manual for each controller.

* The EEPROM has a rewrite life of approx. 100,000 times due to device limitations. If the position table data is written frequently, the EEPROM will reach its rewrite life quickly and a failure may occur. Accordingly, be careful not to let unexpected loops, etc., occur due to the logics on the host side. There is no limit to number of writing for FeRAM.

(2) Start address list

In a query input, each address is calculated using the formula below:

$$1000_{\text{H}} + (16 \times \text{Position number})_{\text{H}} + \text{Address (Offset)}_{\text{H}}$$

(Example) Change the speed command register for position No. 200

$$1000_{\text{H}} + (16 \times 200 = 3200)_{\text{H}} + 4_{\text{H}}$$

$$= 1000_{\text{H}} + \text{C80}_{\text{H}} + 4_{\text{H}}$$

$$= 1\text{C84}_{\text{H}}$$

“1C84” becomes the input value for the start address field of this query.

Note The maximum position number varies depending on the controller model and the PIO pattern currently specified.

■ Position data change registers

| Address | Symbol | Name | Sign | Register size | Byte size | Input unit |
|---------|--------|-----------------------------|------|---------------|-----------|-------------|
| +0000 | PCMD | Target position | ○ | 2 | 4 | 0.01 mm |
| +0002 | INP | Positioning band | | 2 | 4 | 0.01 mm |
| +0004 | VCMD | Speed command | | 2 | 4 | 0.01 mm/sec |
| +0006 | ZNMP | Individual zone boundary + | ○ | 2 | 4 | 0.01 mm |
| +0008 | ZNLP | Individual zone boundary - | ○ | 2 | 4 | 0.01 mm |
| +000A | ACMD | Acceleration command | | 1 | 2 | 0.01 G |
| +000B | DCMD | Deceleration command | | 1 | 2 | 0.01 G |
| +000C | PPOW | Push-current limiting value | | 1 | 2 | % |
| +000D | LPOW | Load current threshold | | 1 | 2 | % |
| +000E | CTLF | Control flag specification | | 1 | 2 | |

* Addresses starting with “+” indicate offsets.

Note RCP6S, RCM-P6PC, RCM-P6AC and RCM-P6DC cannot write in to this address. They return an exceptional response.

(3) Query format

1 register = 2 bytes = 16-bit data

| Field | ASCII mode fixed character string | Number of characters (Number of bytes) | Remarks |
|-------------------------|----------------------------------------------|-------------------------------------------------|------------------------------------------------------------------------------------------------------|
| Header | ‘:’ | 1 | |
| Slave address [H] | Arbitrary | 2 | Axis number + 1 (01 _H to 10 _H) 00 _H when broadcast is specified |
| Function code [H] | ‘1’, ‘0’ | 2 | |
| Start address [H] | Arbitrary | 4 | Refer to 6.7.2 (2), “Start address list.” |
| Number of registers [H] | Arbitrary | 4 | Refer to 6.7.2 (2), “Start address list.” |
| Number of bytes [H] | In accordance with the above registers | 2 | A value corresponding to twice the number of registers specified above is input. |
| Changed data 1 [H] | | 4 | Refer to 6.7.2 (2), “Start address list.” |
| Changed data 2 [H] | | 4 | Refer to 6.7.2 (2), “Start address list.” |
| Changed data 3 [H] | | 4 | Refer to 6.7.2 (2), “Start address list.” |
| : | | : | |
| Error check [H] | LRC calculation result | 2 | |
| Trailer | ‘CR’, ‘LF’ | 2 | |
| Total number of bytes | | Up to 256 | |

(4) Response format

If the change is successful, a response message that is effectively a copy of the query message, except for the byte count and new data, will be returned.

| Field | ASCII mode fixed character string | Number of characters (Number of bytes) | Remarks |
|-------------------------|-----------------------------------------|-------------------------------------------------|------------------------------------------------------------------------------------------------------|
| Header | ‘:’ | 1 | |
| Slave address [H] | Arbitrary | 2 | Axis number + 1 (01 _H to 10 _H) 00 _H when broadcast is specified |
| Function code [H] | ‘1’, ‘0’ | 2 | |
| Start address [H] | Arbitrary | 4 | Refer to 6.7.2 (2), “Start address list.” |
| Number of registers [H] | Arbitrary | 4 | Refer to 6.7.2 (2), “Start address list.” |
| Error check [H] | LRC calculation result | 2 | |
| Trailer | ‘CR’, ‘LF’ | 2 | |
| Total number of bytes | | 17 | |

(5) Detailed explanation of registers

■ Target Position (PCMD)

This register specifies the target position using absolute coordinates or by an relative distance. The value of this register is set in units of 0.01 mm in a range of -999999 to 999999 (FFF0BDC1_H ^(Note 1) to 000F423F_H). When the absolute coordinate is indicated, operation starts with 0.2mm in front^(Note 2) of the soft limit setting value as the target position if the setting of the parameter exceeds the soft limit. The actuator will start moving when the lower word of this register (symbol: PCMD, address: 9900_H) is rewritten. In other words, **a numerical movement command can be issued simply by writing a target position in this register.**

Note 1 To set a negative value, use a two's complement.

Note 2 For a revolution axis set to Index Mode, the soft limit setting value is the target position.

■ Positioning band Specification Register (INP)

This register is used in two different ways depending on the type of operation. The first way is the normal positioning operation, where it specifies the allowable difference between the target position and current position to be used in the detection of position complete. The second way is the push-motion operation, where it specifies the push-motion band. The value of this register is set in units of 0.01 mm in a range of 1 to 999999 (1_H to 000F423F_H).

Whether the normal operation or push-motion operation is specified by the applicable bit in the control flag specification register as explained later.



Caution: It is necessary that the positioning band is at or more than the value figured out with the formulas below.

- For Servomotor: $\text{Actuator Lead Length} \div \text{Encoder Pulse}$
 - For Pulse Motor: $\text{Actuator Lead Length} \div \text{Encoder Pulse} \times 3$
- Apply the servomotor formula for RCP6 Actuator

■ Speed Specification Register (VCMD)

This register specifies the moving speed in positioning. The value of this register is set in units of 0.01 mm/sec in a range of 1 to 999999 (1_H to 000F423F_H). If the specified value exceeds the maximum speed set by a parameter, an alarm will generate the moment a movement start command is issued.

■ Individual Zone Boundaries \pm (ZNMP, ZNLP)

These registers output zone signals that are effective only during positioning, separately from the zone boundaries set by parameters.

Set in ZNMP the positive zone signal output boundary expressed using absolute coordinates, and set the negative zone signal output boundary in ZNLP. The corresponding bit in the zone register remains ON while the current position is within these positive and negative boundaries.

The value of this register is set in units of 0.01 mm, and in a range of -999999 to 999999 (FFF0BDC1_H ^(Note) to 000F423F_H) for both registers. However, ZNMP must be greater than ZNLP. Set the same value in both ZNMP and ZNLP to disable the individual zone output.

Note To set a negative value, use a two's complement.

■ Acceleration specification register (ACMD)

This register specifies the acceleration during positioning. The value of this register is set in units of 0.01 G in a range of 1 to 300 (1_H to 012C_H). If the specified value exceeds the maximum acceleration set by a parameter, an alarm will generate the moment a movement start command is issued.

■ Deceleration specification register (DCMD)

This register specifies the deceleration during positioning. The value of this register is set in units of 0.01 G in a range of 1 to 300 (1_H to 012C_H). If the specified value exceeds the maximum deceleration set by a parameter, an alarm will generate the moment a movement start command is issued.

■ Push-current limiting value (PPOW)

Set the current limit during push-motion operation in PPOW. Set an appropriate value by referring to the table below.

| Actuator model name | Pushable range [%] | Settable range (input value) [H] |
|-----------------------------------|----------------------------|----------------------------------|
| Actuator other than RCS2-RA13R | 20 to 70 ^(Note) | 33 to B2 |
| RCS2-RA13R | 20 to 200 | 33 to 1FE |

Note The setting ranges may vary depending on the actuator.

[For details, refer to the IAI catalog or operation manual of each actuator.]

Sample push-motion current setting

● When setting the current to 20%

$255 (100\%) \times 0.2 (20\%) = 51 \rightarrow 33_{\text{H}}$ (convert into hexadecimal number)

■ Load Output Current Threshold (LPOW)

To perform load output judgment, set the current threshold in LPOW. Set an appropriate value according to the actuator used, just like the push current limit (PPOW). If load output judgment is not performed, set 0.

■ Control Flag Specification Register (CTLF)

[Refer to the control flag specification register in 6.7.1 (5).]

(6) Sample query

A sample query that rewrites all data of position No. 12 of axis No. 0 is shown below.

Axis No. 0

| Target position [mm] | Positioning band [mm] | Speed [mm/sec] | Individual zone boundary+ [mm] | Individual zone boundary- [mm] | Acceleration [G] | Deceleration [G] | Push [%] | Threshold | Movement control |
|----------------------|-----------------------|----------------|--------------------------------|--------------------------------|------------------|------------------|----------|-----------|------------------|
| 100 | 0.1 | 200 | 60 | 40 | 0.01 | 0.3 | 0 | 0 | Normal movement |

■ Query 01 10 10C0 000F 1E 0000 2710 0000 000A 0000 4E20 0000 1770

0000 0FA0 0001 001E 0000 0000 0000 EE[CR][LF]

■ Received response 01 10 10C0 000F 10[CR][LF]

■ Breakdown of Query Message

| Field | ASCII mode fixed character string | Converted ASCII code data [H] | Remarks |
|-----------------------------------------------------------------------|-----------------------------------|-------------------------------|-----------------------------------------------------------------------------------------------------------|
| Header | ':' | 3A | |
| Slave address | '0', '1' | 3031 | Axis No. 0 + 1 |
| Function code | '1', '0' | 3130 | |
| Start address | '1', '0', 'C', '0' | 31304330 | The start address is the target position specification register 10C0 _H for position No. 12. *1 |
| Number of registers | '0', '0', '0', 'F' | 30303046 | Total 15 registers of register symbols PCMD to CTLF are specified to be written. |
| Number of bytes | '1', 'E' | 3145 | 15 (registers) × 2 = 30 (bytes) → 1E _H |
| New data 1, 2 (target position) Input unit (0.01 mm) | '0', '0', '0', '0' | 30303030 | All upper bits of the 32-bit data are 0. |
| | '2', '7', '1', '0' | 32373130 | 100 (mm) × 100 = 10000 → 2710 _H |
| New data 3, 4 (positioning band) Input unit (0.01 mm) | '0', '0', '0', '0' | 30303030 | All upper bits of the 32-bit data are 0. |
| | '0', '0', '0', 'A' | 30303041 | 0.1 (mm) × 100 = 10 → 000A _H |
| New data 5, 6 (speed) Input unit (0.01 mm/sec) | '0', '0', '0', '0' | 30303030 | All upper bits of the 32-bit data are 0. |
| | '4', 'E', '2', '0' | 34453230 | 200 (mm/sec) × 100 = 20000 → 4E20 _H |
| New data 7, 8 (individual zone boundary +) Input unit (0.01 mm) | '0', '0', '0', '0' | 30303030 | All upper bits of the 32-bit data are 0. |
| | '1', '7', '7', '0' | 31373730 | 60 (mm) × 100 = 6000 → 1770 _H |
| | '0', 'F', 'A', '0' | 30464130 | 40 (mm) × 100 = 4000 → 0FA0 _H |

Continue to the next page

| Field | ASCII mode fixed character string | Converted ASCII code data [H] | Remarks |
|-------------------------------------------------------------------------------|-----------------------------------------|-------------------------------------|---------------------------------------------------------------------------|
| Changed data 9, 10 (individual zone boundary -) Input unit (0.01 mm) | '0', '0', '0', '0' | 30303030 | All upper bits of the 32-bit data are 0. |
| | '0', 'F', 'A', '0' | 30464130 | 40 (mm) × 100 = 4000 → 0FA0 _H |
| Changed data 11 (acceleration) Input unit (0.01 G) | '0', '0', '0', '1' | 30303031 | 0.01 (G) × 100 = 1 → 0001 _H |
| Changed data 12 (deceleration) Input unit (0.01 G) | '0', '0', '1', 'E' | 30303145 | 0.3 (G) × 100 = 30 → 001E _H |
| Changed data 13 (push) Input unit [%] | '0', '0', '0', '0' | 30303030 | 0 (%) → 0 _H |
| Changed data 14 (threshold) Input unit [%] | '0', '0', '0', '0' | 30303030 | 0 (%) → 0 _H |
| Changed data 15 (control flag) | '0', '0', '0', '0' | 30303030 | All bits are 0 in the normal operation mode. 0000b → 0000 _H |
| Error check | 'E', 'E' | 4545 | LRC check calculation result → EE _H |
| Trailer | 'CR', 'LF' | 0D0A | |
| Total number of bytes | 79 | | |

*1) Calculation of start address

In the example, all data of position No. 12 is changed. Accordingly, the target position address of position No. 12 is set in the start address field of this query.

$$\begin{aligned}
 &1000_{\text{H}} + (16 \times 12 = 192)_{\text{H}} + 0_{\text{H}} \\
 &= 1000_{\text{H}} + \text{C0}_{\text{H}} + 0_{\text{H}} \\
 &= 10\text{C0}_{\text{H}}
 \end{aligned}$$

“10C0” becomes the input value for the start address field of this query.

Shown below are the screens of IAI's PC software for RC controller, indicating how position data changes before and after a query message is sent.

(Note) It is not possible to connect both PC software and Modbus at the same time. The example below shows the case when switching the connection between PC software and Modbus.

■ Before a query is sent

| No | Position [mm] | Speed [mm/s] | ACC [G] | DCL [G] | Push [%] | LoTh [%] | Pos.band [mm] | Zone + [mm] | Zone - [mm] | ACC/DCL mode | ABS INC | Cmd Mode | Stop Mode |
|----|---------------|--------------|---------|---------|----------|----------|---------------|-------------|-------------|--------------|---------|----------|-----------|
| 11 | | | | | | | | | | | | | |
| 12 | | | | | | | | | | | | | |
| 13 | | | | | | | | | | | | | |

Fig. 6.4

■ After a query is sent

| No | Position [mm] | Speed [mm/s] | ACC [G] | DCL [G] | Push [%] | LoTh [%] | Pos.band [mm] | Zone + [mm] | Zone - [mm] | ACC/DCL mode | ABS INC | Cmd Mode | Stop Mode |
|----|---------------|--------------|---------|---------|----------|----------|---------------|-------------|-------------|--------------|---------|----------|-----------|
| 11 | | | | | | | | | | | | | |
| 12 | 100.00 | 150.00 | 0.30 | 0.30 | 0 | 0 | 0.10 | 60.00 | 40.00 | 0 | 0 | 0 | 0 |
| 13 | | | | | | | | | | | | | |

Fig. 6.5

* The overwritten data is not displayed until the button  is pressed or the Edit Position Data window is reopened.

7 Troubleshooting



7.1 Responses at Errors (Exception Responses)

In each query (command), except for a broadcast query message, the master issues a query by expecting a “successful” response(response), and the applicable slave must return a response to the query. If the query is processed successfully, the slave returns a “successful” response. If an error occurs, however, the slave returns an exception response.

The slave responds to a query in one of the following four ways:

- (1) The slave receives the query successfully, processes it successfully, and then returns a “successful” response.
- (2) The slave returns no response because the query could not be received due to a communication error, etc. The master generates a timeout error.
- (3) The slave also returns no response if the query is received but is found invalid because a LRC/CRC error is detected. In this case, the master also generates a timeout error.
- (4) If the query is received properly without generating errors but it cannot be processed for some reason (such as when the applicable register does not exist), the slave returns an exception response that contains an exception code indicating the content of exception.

Example of exception response generation

(Sample query message using Read Input Status)

| Field | Sample value [Hex] | ASCII mode character string | RTU mode 8 bits [Hex] |
|-------------------|-----------------------|--------------------------------|--------------------------|
| Header | | “.” | None |
| Slave address | 03 _H | ‘0,’ ‘3’ | 03 _H |
| Function code | 02 _H | ‘0,’ ‘2’ | 02 _H |
| Start address [H] | 04 _H | ‘0,’ ‘4’ | 04 _H |
| Start address (L) | A1 _H | ‘A,’ ‘1’ | A1 _H |
| Number of DIs [H] | 00 _H | ‘0,’ ‘0’ | 00 _H |
| Number of DIs (L) | 14 _H | ‘1,’ ‘4’ | 14 _H |
| Error check | | LRC (2 characters) | CRC (16 bits) |
| Trailer | | CR/LF | None |
| | Total bytes | 17 | 8 |

If input status 04A1_H does not exist, the following exception response will be returned.

Sample exception response from a slave

| Field | Sample value [Hex] | ASCII mode character string | RTU mode 8 bits [Hex] |
|----------------|-----------------------|--------------------------------|--------------------------|
| Header | | “.” | None |
| Slave address | 03 _H | ‘0,’ ‘3’ | 03 _H |
| Function code | 82 _H | ‘8,’ ‘2’ | 82 _H |
| Exception code | 02 _H | ‘0,’ ‘2’ | 02 _H |
| Error check | | LRC (2 characters) | CRC (16 bits) |
| Trailer | | CR/LF | None |
| | Total bytes | 11 | 5 |

The exception response consists of the slave address field, function code field, and data field. In the slave address field, the applicable slave address is set as in the slave address field of a “successful” response. In the function code field, the function code in the query is set, and then the MSB (most significant bit of the function code) of this field is set to 1. This allows the master to recognize that the message is not a “successful” response, but an exception response. An exception code indicating the content of exception is set in the data field.

Example) Query function code "02_H" (00000010b)
 → Exception response function code "82_H" (10000010b)

■ Exception codes

The table below lists the exception codes that may generate in RC Series controllers, as well as the contents of respective codes.

| Code [Hex] | Exception code | Function | Remarks |
|-----------------|----------------------|--------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------|
| 01 _H | Illegal Function | Indicates that the function is invalid. | The query cannot be executed because a major error has occurred on the slave side due to function errors. |
| 02 _H | Illegal Data Address | Indicates that the data address is invalid. | Use of the data address value is not permitted. |
| 03 _H | Illegal Data Value | Indicates that the data is invalid. | Use of the data value is not permitted. |
| 04 _H | Slave Device Failure | Indicates that the query cannot be executed because an irremediable error occurred in the slave. | The query cannot be executed because a major error has occurred on the slave side. |

7.2 Notes

- When referencing registers using Modbus functions, registers belonging to multiple categories cannot be read simultaneously using a single message. To reference registers belonging to multiple categories, read them using multiple messages by classifying the corresponding addresses by category.
- The explanations in this specification apply commonly to RC controller Series models supporting “Protocol M.” For the specifications and other items specific to each model, refer to the RC controller’s operation manual that comes with the applicable controller.

7.3 When Communication Fails


Select an applicable item and perform the processing enclosed with □.

The specific processing details are explained after the flowchart; check the details indicated by the * symbol.


○ = Yes, X = No

Symptom: Cannot communicate normally!

Was communication possible until now?

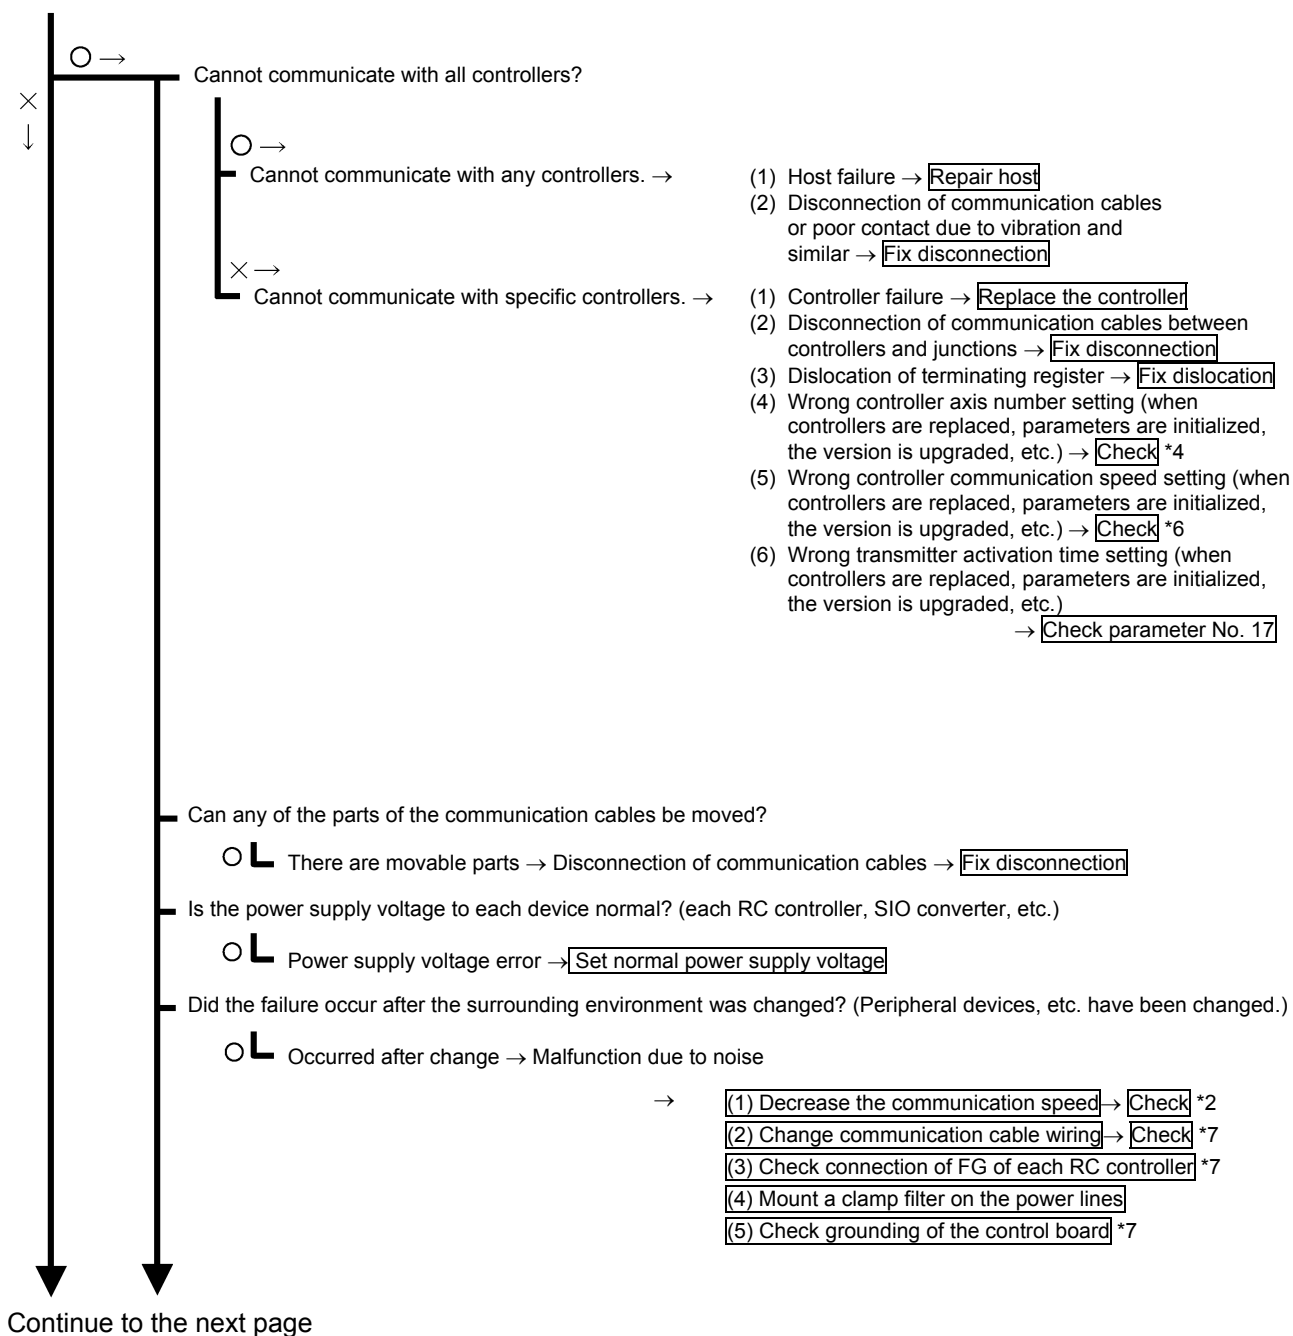

Continued from the previous page

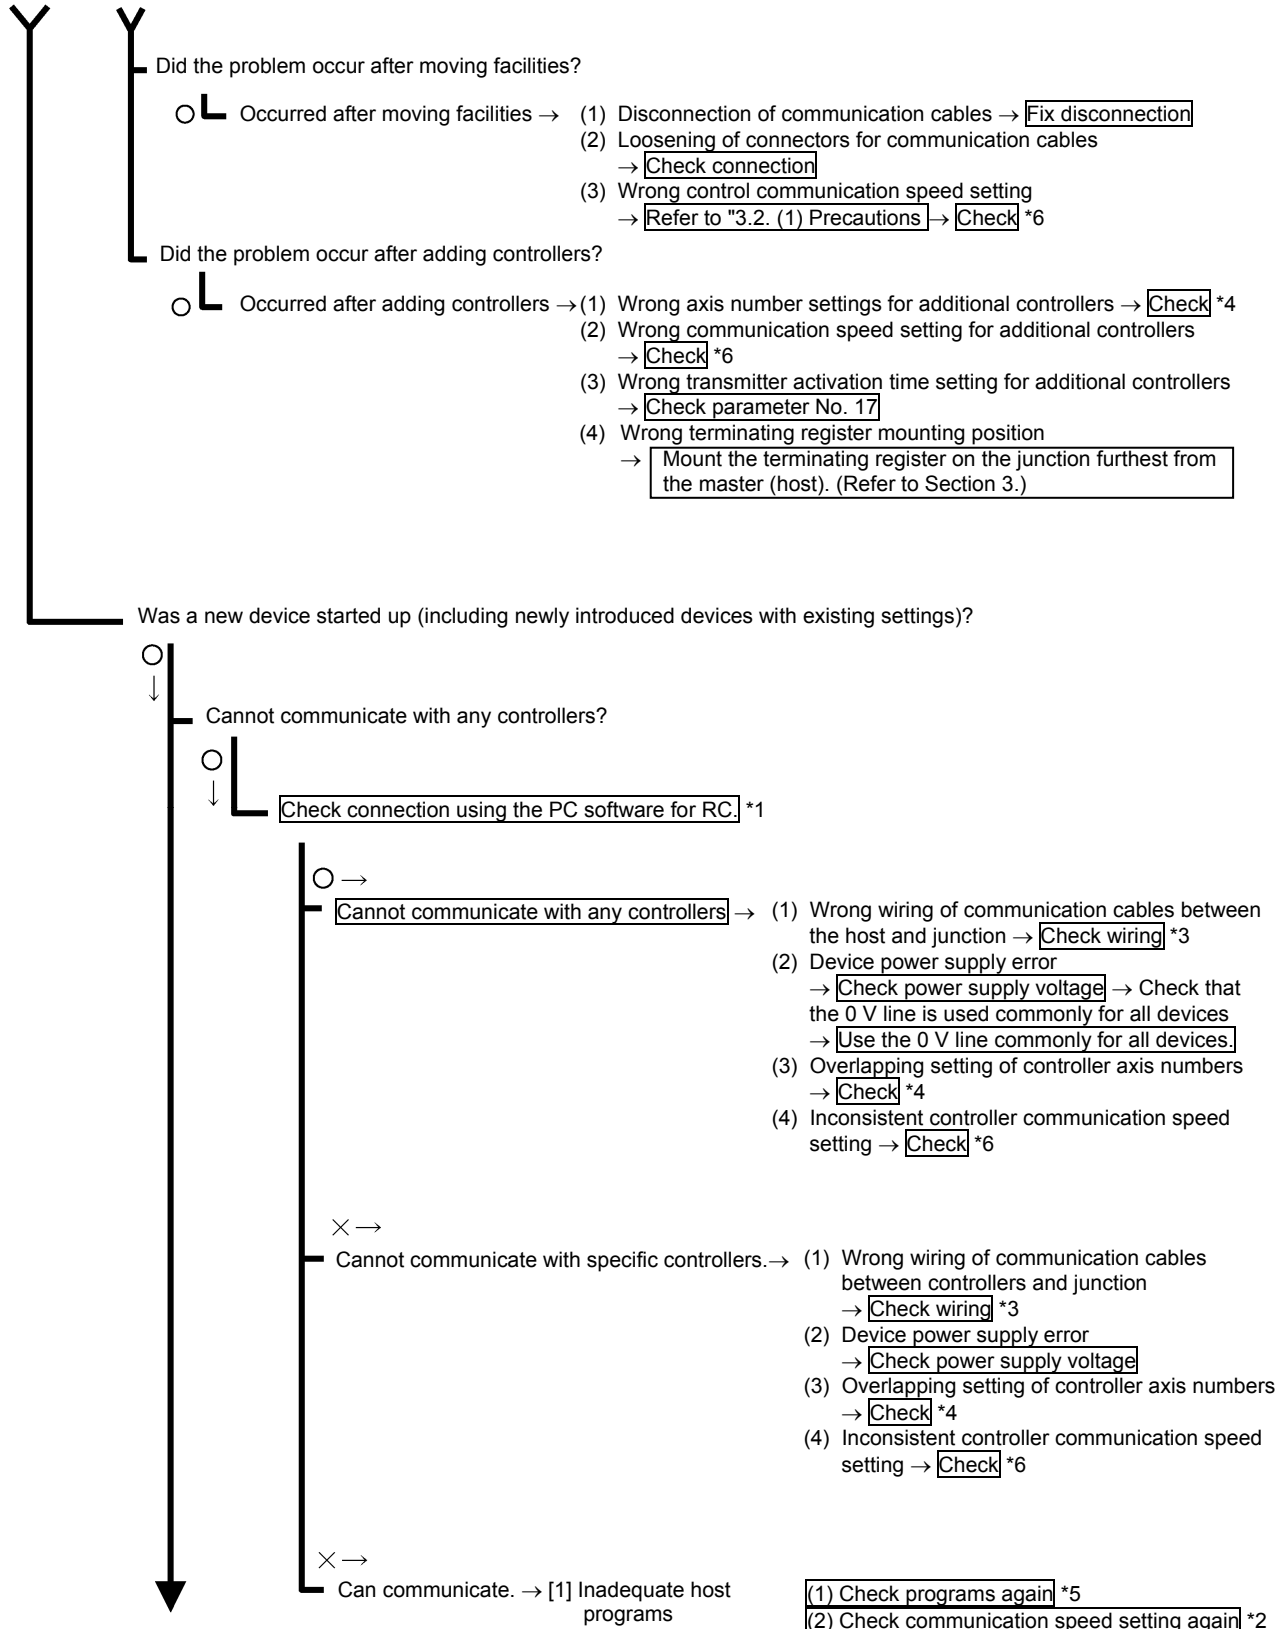

Continue to the next page

Continued from the previous page

Y

Cannot communicate with specific controllers.

○ L

- [1] Wrong wiring of communication cables between controllers and junction → Check wiring *3
- [2] Device power supply error → Check power supply voltage → Check that the 0 V line is used commonly for all devices → Use the 0 V line commonly for all devices.

Cannot communicate from time to time?

○ L

- [1] Malfunction due to noise →
 - (1) Decrease the communication speed Check *2
 - (2) Change communication cable wiring Check *7
 - (3) Check connection of FG of each RC controller *7
 - (4) Mount a clamp filter on the power lines
 - (5) Check grounding of the control board *7
- [2] Inadequate host programs → Check programs again (occurrence of communication buffer overflow, etc.?)

*1 Connect a PC to the host following the procedure explained in sections 3.1, 3.2 and 3.3.

[1] Start the PC software.

[2] Select [Application Setting] from the [Setting] menu.

Check that the port is set to the port number of the PC used and that the last axis number is set to a value larger than the number of connected axes in the Communication Setting window.

(If any settings are wrong, correct the settings and then restart the PC for RC.)

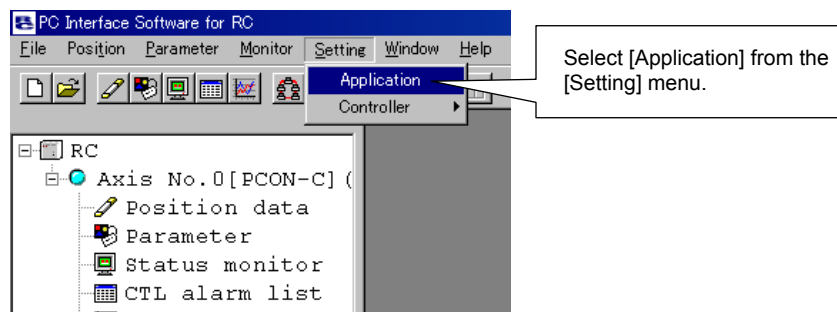


Fig.9.1

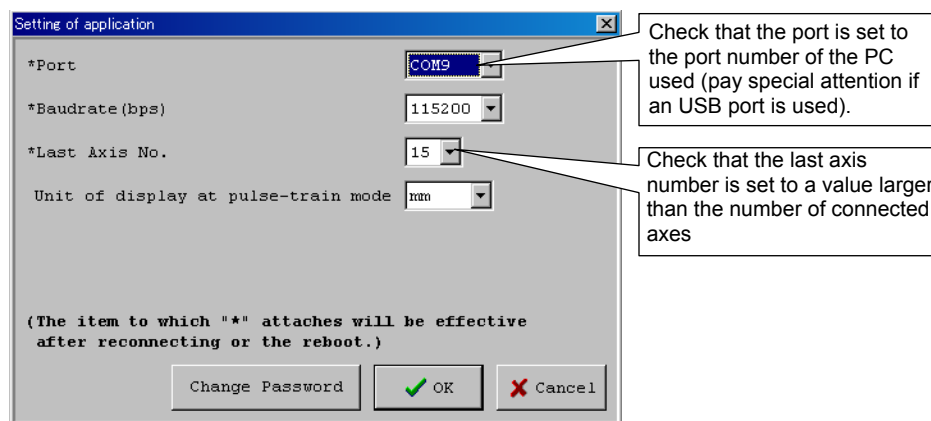


Fig. 9.2

- [3] Select [Edit/Teach] from the [Position] menu.
The Position Data Edit Axis Selection window appears, displaying the connected axes.
Axes for which connected axis numbers are displayed can communicate normally.

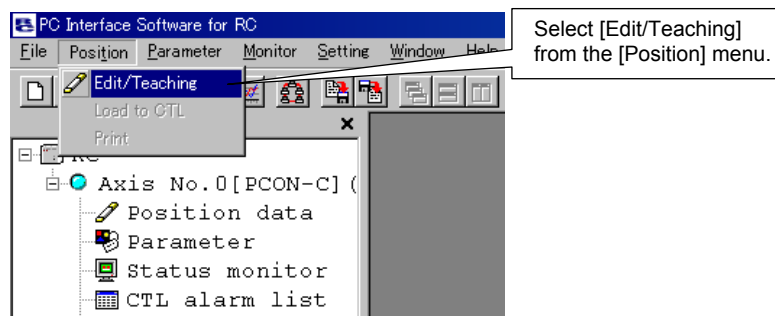


Fig.9.3

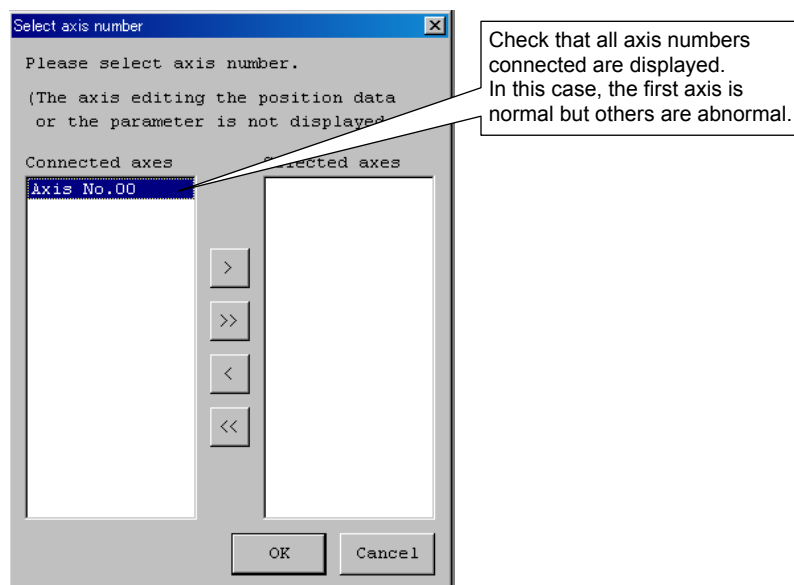


Fig. 9.4


- *2 Refer to section 3.6 to decrease the communication speed.
- *3 Refer to sections 3.1, 3.2 and 3.3 to check wiring again.
- *4 Refer to section 3.5 to check the axis number settings again (check that there are no overlapping numbers).
- *5 Check again that the procedure in section 3.4 is followed correctly.
 - [1] If queries other than those that use a function code 03 are used, check that the PIO/Modbus switching in sections 5.4.16 (RTU) and 6.5.16 (ASCII) is set to the Modbus side.
 - [2] Unless the RC controller is restarted using the PC software for RC, the communication speed setting selected when connecting the PC software for RC is maintained. In this case, restart the RC controller.

- *6 Refer to section 3.6 to check the communication speed setting again.
Set the same communication speed for all RC controllers as well as the host.
Check (2) in *5.
- *7 Wire communication cables such that they do not run in parallel with power cables and cables that send pulse signals.
Check that the communication cable is properly shielded (recommendation: 1-point ground).
Check that the setting environment and noise countermeasures live up to the specifications given in the instruction manual of each RC controller.

If the problems are not solved after checking above step, please contact us.

In this case, please let us know about the phenomena occurring and the result of checking the items in the flowchart as well.

8 Reference Materials

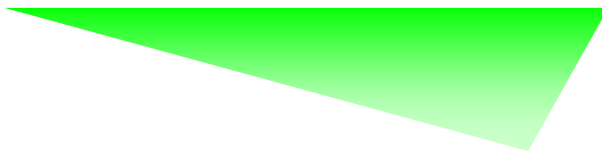

8.1 CRC Check Calculation

Sample C functions used for CRC calculation are shown below.

They are equivalent to the CRC calculation functions stated in the published Modbus Protocol Specification (PI-MBUS-300 Rev. J).

```

unsigned short CalcCRC16swap(
    unsigned char*   puchMsg,           /* message to calculate */
    unsigned short   usDataLen)         /* quantity of bytes in message */
{
    unsigned char    uchCRCHI = 0xFF;   /* high byte of CRC initialized */
    unsigned char    uchCRCLo = 0xFF;   /* low byte of CRC initialized */
    unsigned int      ulIndex;           /* will index into CRC lookup table */

    while(usDataLen--)                  /* pass through message buffer */
    {
        ulIndex = uchCRCHI ^ *puchMsg++; /* calculate the CRC */
        uchCRCHI = uchCRCLo ^ auchCRCHI[ulIndex];
        uchCRCLo = auchCRCLo[ulIndex];
    }
    return (uchCRCHI << 8 | uchCRCLo);
}

const unsigned char auchCRCHI[] =
/* Table of CRC values for high-order byte */
    0x00, 0xC1, 0x81, 0x40, 0x01, 0xC0, 0x80, 0x41, 0x01, 0xC0, 0x80, 0x41, 0x00, 0xC1, 0x81, 0x40,
    0x01, 0xC0, 0x80, 0x41, 0x00, 0xC1, 0x81, 0x40, 0x00, 0xC1, 0x81, 0x40, 0x01, 0xC0, 0x80, 0x41,
    0x01, 0xC0, 0x80, 0x41, 0x00, 0xC1, 0x81, 0x40, 0x00, 0xC1, 0x81, 0x40, 0x01, 0xC0, 0x80, 0x41,
    0x00, 0xC1, 0x81, 0x40, 0x01, 0xC0, 0x80, 0x41, 0x01, 0xC0, 0x80, 0x41, 0x00, 0xC1, 0x81, 0x40,
    0x01, 0xC0, 0x80, 0x41, 0x00, 0xC1, 0x81, 0x40, 0x00, 0xC1, 0x81, 0x40, 0x01, 0xC0, 0x80, 0x41,
    0x00, 0xC1, 0x81, 0x40, 0x01, 0xC0, 0x80, 0x41, 0x01, 0xC0, 0x80, 0x41, 0x00, 0xC1, 0x81, 0x40,
    0x00, 0xC1, 0x81, 0x40, 0x01, 0xC0, 0x80, 0x41, 0x01, 0xC0, 0x80, 0x41, 0x00, 0xC1, 0x81, 0x40,
    0x01, 0xC0, 0x80, 0x41, 0x00, 0xC1, 0x81, 0x40, 0x00, 0xC1, 0x81, 0x40, 0x01, 0xC0, 0x80, 0x41,
    0x01, 0xC0, 0x80, 0x41, 0x00, 0xC1, 0x81, 0x40, 0x00, 0xC1, 0x81, 0x40, 0x01, 0xC0, 0x80, 0x41,

```

```

0x01, 0xC0, 0x80, 0x41, 0x00, 0xC1, 0x81, 0x40, 0x00, 0xC1, 0x81, 0x40, 0x01, 0xC0, 0x80, 0x41,
0x00, 0xC1, 0x81, 0x40, 0x01, 0xC0, 0x80, 0x41, 0x01, 0xC0, 0x80, 0x41, 0x00, 0xC1, 0x81, 0x40,
0x00, 0xC1, 0x81, 0x40, 0x01, 0xC0, 0x80, 0x41, 0x01, 0xC0, 0x80, 0x41, 0x00, 0xC1, 0x81, 0x40,
0x01, 0xC0, 0x80, 0x41, 0x00, 0xC1, 0x81, 0x40, 0x00, 0xC1, 0x81, 0x40, 0x01, 0xC0, 0x80, 0x41,
0x00, 0xC1, 0x81, 0x40, 0x01, 0xC0, 0x80, 0x41, 0x01, 0xC0, 0x80, 0x41, 0x00, 0xC1, 0x81, 0x40,
0x01, 0xC0, 0x80, 0x41, 0x00, 0xC1, 0x81, 0x40, 0x00, 0xC1, 0x81, 0x40, 0x01, 0xC0, 0x80, 0x41,
0x01, 0xC0, 0x80, 0x41, 0x00, 0xC1, 0x81, 0x40, 0x00, 0xC1, 0x81, 0x40, 0x01, 0xC0, 0x80, 0x41,
0x00, 0xC1, 0x81, 0x40, 0x01, 0xC0, 0x80, 0x41, 0x01, 0xC0, 0x80, 0x41, 0x00, 0xC1, 0x81, 0x40,
0x00, 0xC1, 0x81, 0x40, 0x01, 0xC0, 0x80, 0x41, 0x01, 0xC0, 0x80, 0x41, 0x00, 0xC1, 0x81, 0x40,
};

```

```
const unsigned char auchCRCLo[] =
```

```
/* Table of CRC values for low-order byte */
```

```

0x00, 0xC0, 0xC1, 0x01, 0xC3, 0x03, 0x02, 0xC2, 0xC6, 0x06, 0x07, 0xC7, 0x05, 0xC5, 0xC4, 0x04,
0xCC, 0x0C, 0x0D, 0xCD, 0x0F, 0xCF, 0xCE, 0x0E, 0x0A, 0xCA, 0xCB, 0x0B, 0xC9, 0x09, 0x08, 0xC8,
0xD8, 0x18, 0x19, 0xD9, 0x1B, 0xDB, 0xDA, 0x1A, 0x1E, 0xDE, 0xDF, 0x1F, 0xDD, 0x1D, 0x1C, 0xDC,
0x14, 0xD4, 0xD5, 0x15, 0xD7, 0x17, 0x16, 0xD6, 0xD2, 0x12, 0x13, 0xD3, 0x11, 0xD1, 0xD0, 0x10,
0xF0, 0x30, 0x31, 0xF1, 0x33, 0xF3, 0xF2, 0x32, 0x36, 0xF6, 0xF7, 0x37, 0xF5, 0x35, 0x34, 0xF4,
0x3C, 0xFC, 0xFD, 0x3D, 0xFF, 0x3F, 0x3E, 0xFE, 0xFA, 0x3A, 0x3B, 0xFB, 0x39, 0xF9, 0xF8, 0x38,
0x28, 0xE8, 0xE9, 0x29, 0xEB, 0x2B, 0x2A, 0xEA, 0xEE, 0x2E, 0x2F, 0xEF, 0x2D, 0xED, 0xEC, 0x2C,
0xE4, 0x24, 0x25, 0xE5, 0x27, 0xE7, 0xE6, 0x26, 0x22, 0xE2, 0xE3, 0x23, 0xE1, 0x21, 0x20, 0xE0,
0xA0, 0x60, 0x61, 0xA1, 0x63, 0xA3, 0xA2, 0x62, 0x66, 0xA6, 0xA7, 0x67, 0xA5, 0x65, 0x64, 0xA4,
0x6C, 0xAC, 0xAD, 0x6D, 0xAF, 0x6F, 0x6E, 0xAE, 0xAA, 0x6A, 0x6B, 0xAB, 0x69, 0xA9, 0xA8, 0x68,
0x78, 0xB8, 0xB9, 0x79, 0xBB, 0x7B, 0x7A, 0xBA, 0xBE, 0x7E, 0x7F, 0xBF, 0x7D, 0xBD, 0xBC, 0x7C,
0xB4, 0x74, 0x75, 0xB5, 0x77, 0xB7, 0xB6, 0x76, 0x72, 0xB2, 0xB3, 0x73, 0xB1, 0x71, 0x70, 0xB0,
0x50, 0x90, 0x91, 0x51, 0x93, 0x53, 0x52, 0x92, 0x96, 0x56, 0x57, 0x97, 0x55, 0x95, 0x94, 0x54,
0x9C, 0x5C, 0x5D, 0x9D, 0x5F, 0x9F, 0x9E, 0x5E, 0x5A, 0x9A, 0x9B, 0x5B, 0x99, 0x59, 0x58, 0x98,
0x88, 0x48, 0x49, 0x89, 0x4B, 0x8B, 0x8A, 0x4A, 0x4E, 0x8E, 0x8F, 0x4F, 0x8D, 0x4D, 0x4C, 0x8C,
0x44, 0x84, 0x85, 0x45, 0x87, 0x47, 0x46, 0x86, 0x82, 0x42, 0x43, 0x83, 0x41, 0x81, 0x80, 0x40,
};

```


8.2 Configuration of Systems that Use both SIO and PIO

It is possible to monitor the current position and other values via the SIO (communication) by running the RC controller with PIO. All queries that use function code 03 for either RTU and ASCII can be monitored. Set the PIO/Modbus Switchover in 5.4.16 or 6.5.16 to PIO, and for the RC controllers equipped with the operation mode setting switch, set it to AUTO when in use.

The following RC controller models can use both PIO and SIO. (Safety Category Type described)

- PCON-C/CG/CA/CFA/CB/CGB/CFB/CGFB, PCON-CY, PCON-PL/PO,
- ACON-C/CG/CA/CB/CGB, ACON-CY, ACON-PL/PO,
- SCON-C/CA/CAL/CGAL/CB/CGB, DCON-CA/CB/CGB,
- PCON-CYB/PLB/POB, ACON-CYB/PLB/POB, DCON-CYB/PLB/POB,
- ERC2(PIO), ERC3

Example 1 of system configuration that uses both SIO and PIO

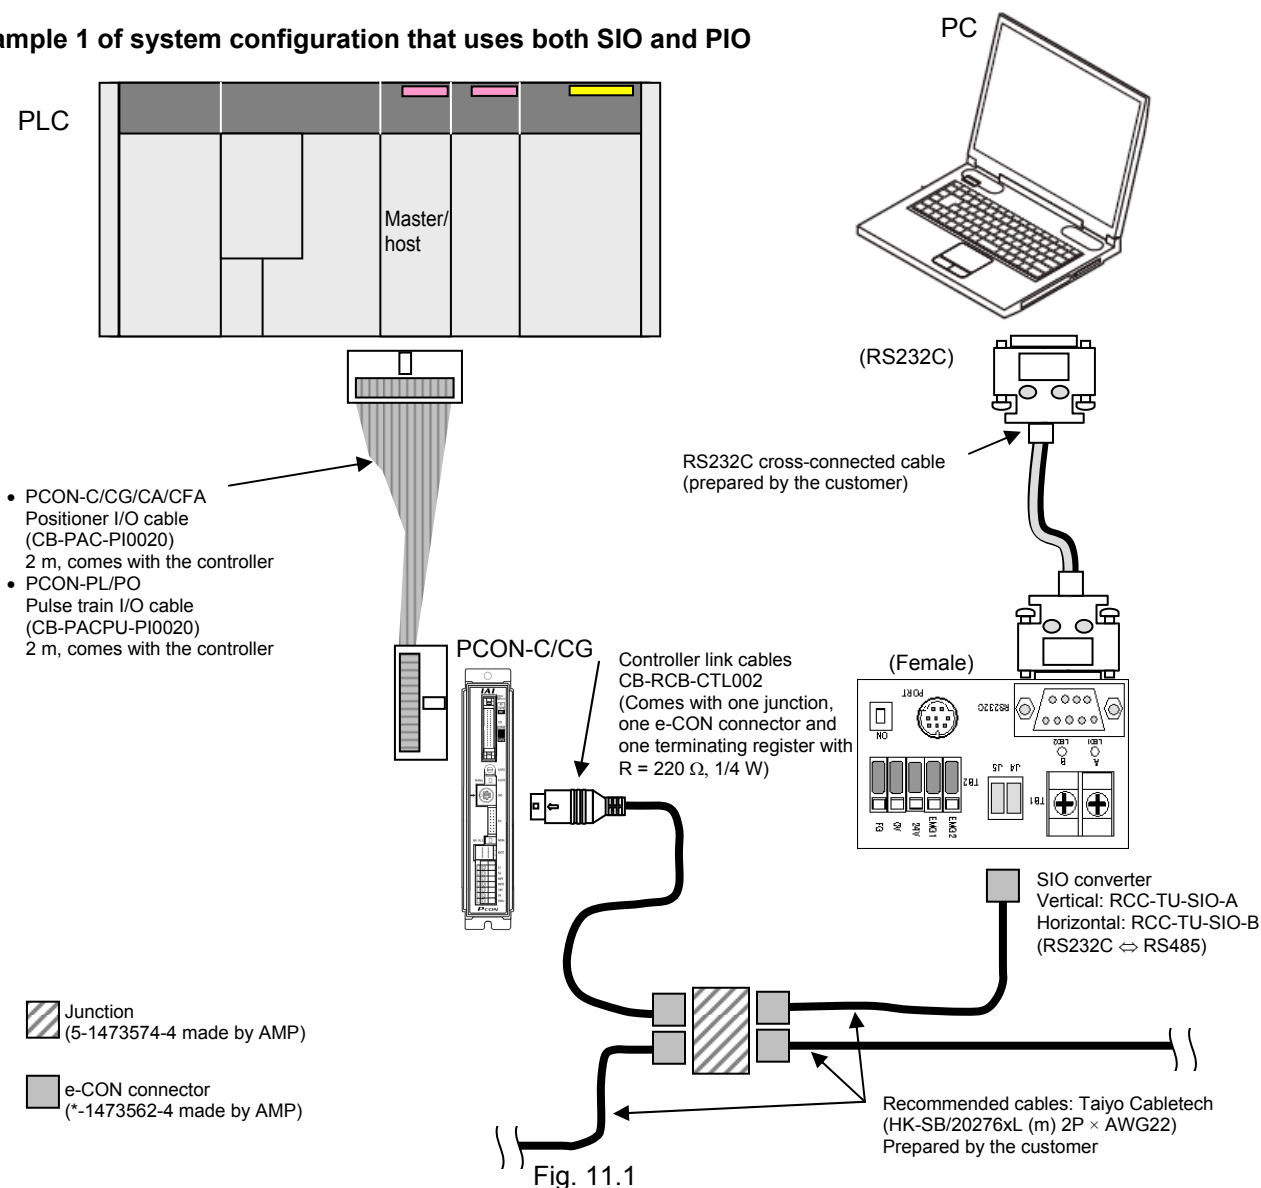

Example 2 of system configuration that uses both SIO and PIO

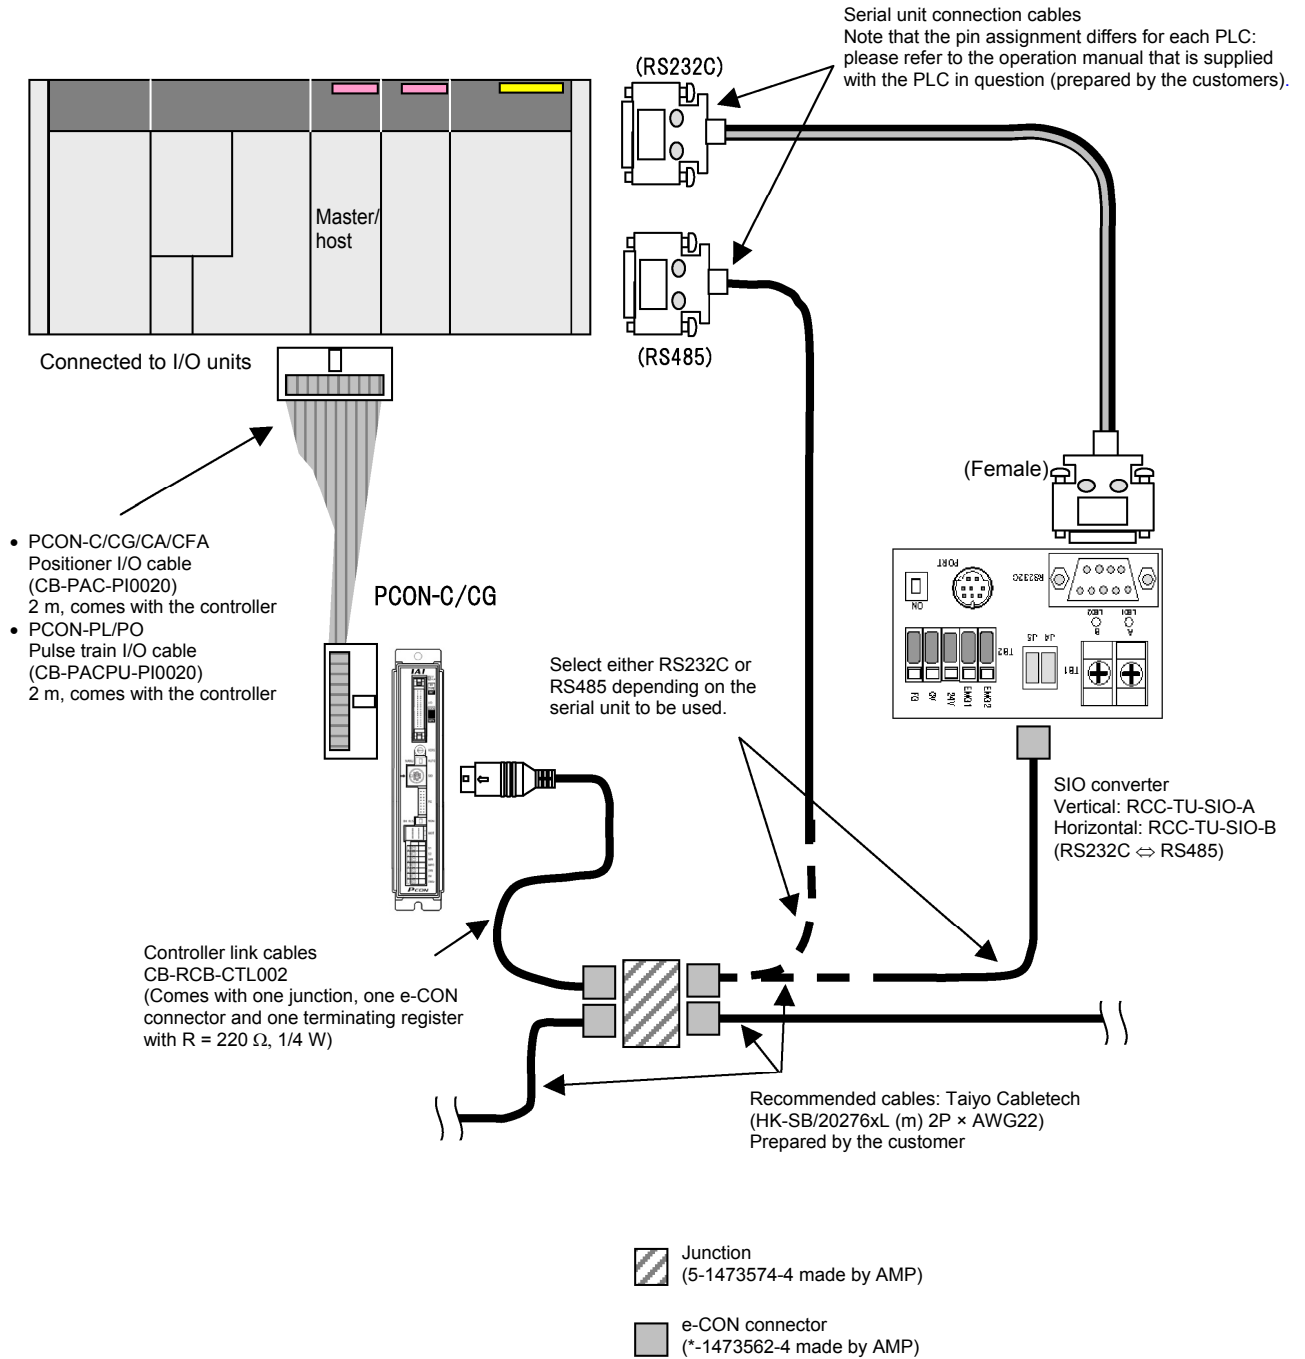


Fig. 11.2

8.3 Regarding Option Units

8.3.1 SIO converter (vertical specification: RCB-TU-SIO-A, horizontal specification: RCB-TU-SIO-B)

RS232C ⇔ RS485 converter


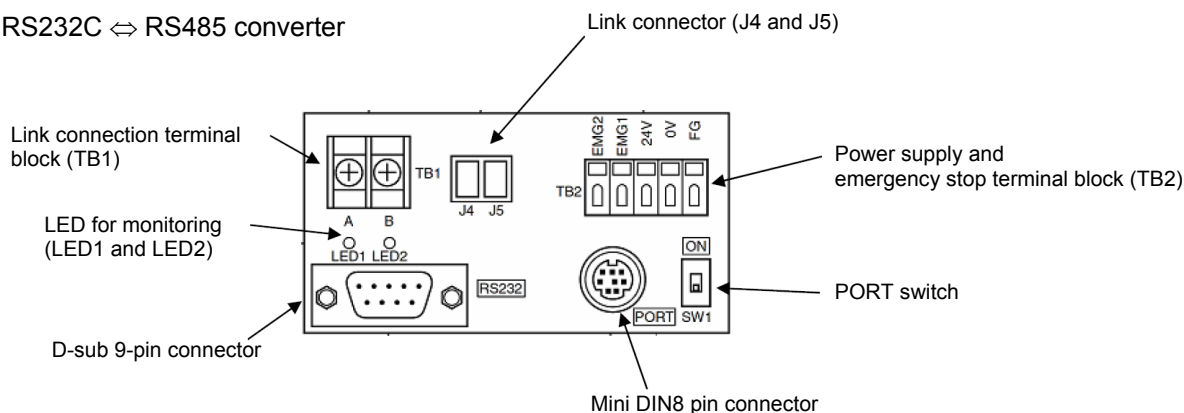



Fig. 11.3

- ⊙ Power supply and emergency stop terminal block (TB2)
 - EMG1 and EMG2: Discrete outputs of the emergency stop switch of the teaching pendant
EMG1 and EMG2 are connected to the emergency stop switch of the teaching pendant when the PORT switch is set to ON; EMG1 and EMG2 are short circuited when the switch is set to OFF.
 - 24 V: Supply +24 V power (current consumption 0.1 A or less)
 - 0 V: Supply 0 V power (use common 0 V for all 24 V DC-supplied controllers).
 - FG: A terminal to which FG is connected
 - * Compatible wires: Single wire: ϕ 0.8 to 1.2 mm
Twisted wire: AWG18 to 20 (strip length 10 mm)
- ⊙ Link connection terminal block (TB1)
A connector for link connection with an RC controller
 - A: Connect to pin 1 (SGA) of the communication connector of the RC controller
 - B: Connect to pin 2 (SGB) of the communication connector of the RC controller
- ⊙ D-sub 9 pin connector
A connector for connection with the master (host) side
- ⊙ Mini DIN8 pin connector
A connector for connection with teaching pendant or PC software
- ⊙ PORT switch
 - ON: A teaching tool is used.
 - OFF: A teaching tool is not used.
- ⊙ LED for monitoring (LED1 and LED2)
 - LED1: Turns on/flashes when the RC controller is transmitting
 - LED2: Turns on/flashes when the master (host) side is transmitting
- ⊙ Link connector (J4 and J5)
Connectors for link connection with an RC controller
An optional link cable (CB-RCB-CTL002) can be connected as is.

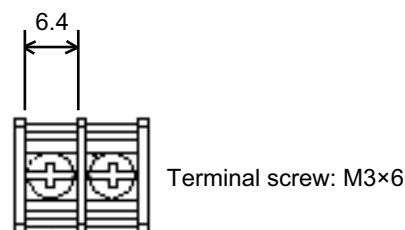

8.3.2 PLC Connection Unit for RCP6S (RCB-P6PLC-□) * Not applicable for ASCII Mode

It is a unit to connect when it is required to operate RCP6S Actuator with the serial communication.

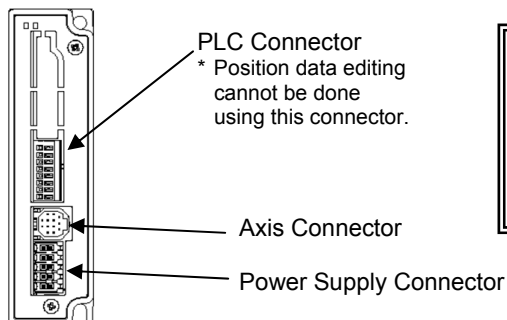

PLC Connector
* Position data editing
cannot be done
using this connector.

Axis Connector


Power Supply Connector

For RCP6S, RCM-P6PC, RCM-P6AC and RCM-P6DC, connect a teaching tool such as PC software to the teaching board in order to edit the position data. At any area other than the teaching board, can access to the position data. 0 should be read in even if readout query gets conducted.

⊙ PLC Connector (0138-1108-BK manufactured by DINKLE)

A connector for link connection with an RC controller

- SD+: Connect to pin 1 (SGA) of the communication connector of the RC controller
- SD-: Connect to pin 2 (SGB) of the communication connector of the RC controller
- 0V: Connect to the 0V on the power.

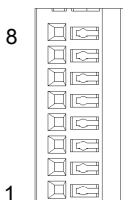


| Pin No. | Signal Name | Description |
|---------|-------------|-----------------------------|
| 1 | SD+ | Serial Communication Line + |
| 2 | SD- | Serial Communication Line - |
| 3 | GND | 0V |
| 4 to 8 | NC | Do not connect to them. |

⊙ Axis Connector

It is a connection inlet to connect RCP6S actuator. Connection is to be made with a dedicated cable.
[Refer to instruction manual of each actuator]


⊙ Power Supply Connector (0156-2B10-BK manufactured by DINKLE)

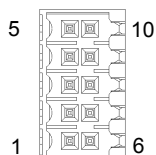

| Pin No. | Signal Name | | Description | |
|---------|-------------|------------------|------------------------------------------------------------------|-----------|
| 1 | FG | | Frame Ground | |
| 2 | NC | | Do not connect to them. | |
| 3 | EMGS | | Emergency Stop Status | |
| 4 | S2 | | Do not connect to them. | |
| 5 | S1 | | Do not connect to them. | |
| 6 | NC | | Do not connect to them. | |
| 7 | GND | | 0V | |
| 8 | CP | | Control Power Supply 24V DC 0.3A input | |
| 9 | MP | Voltage | Motor Power Supply 24V DC input | |
| | | Motor Types | 28P, 35P, 42P, 56P | 56SP, 60P |
| | | Current Amperage | High-output valid : Max. 3.2A High-output invalid : Max. 1.7A | Max. 5.7A |
| 10 | BK | | For brake release, 24V DC, 0.7A max. input | |


* Compatible wires: Single wire: ϕ 0.5 to 1.5 mm
Twisted wire: AWG16 to 20 (strip length 10 mm)

◎ Example for Power Supply Connector Wiring

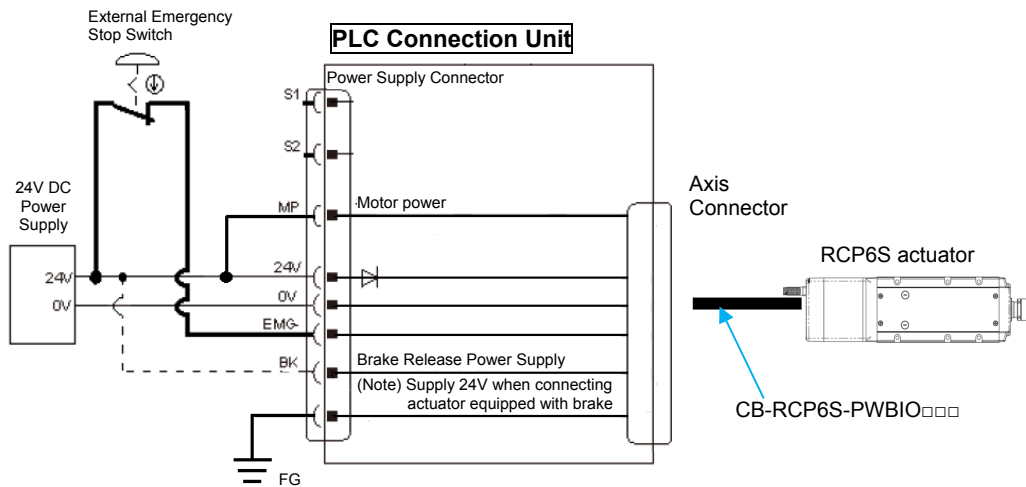


Caution : When supplying the power by turning ON/OFF the 24V DC, keep the 0V being connected and have the +24V supplied/disconnected (cut one side only).
 The rating for the emergency stop signal (EMG-) is 24V DC and 10mA or less.
 Leave for 1 sec or more after shutting the power off before rebooting.
 Do not attempt to supply only the monitor power without supplying the control power.

◎ Appearance Dimensions Screw Fixing Type

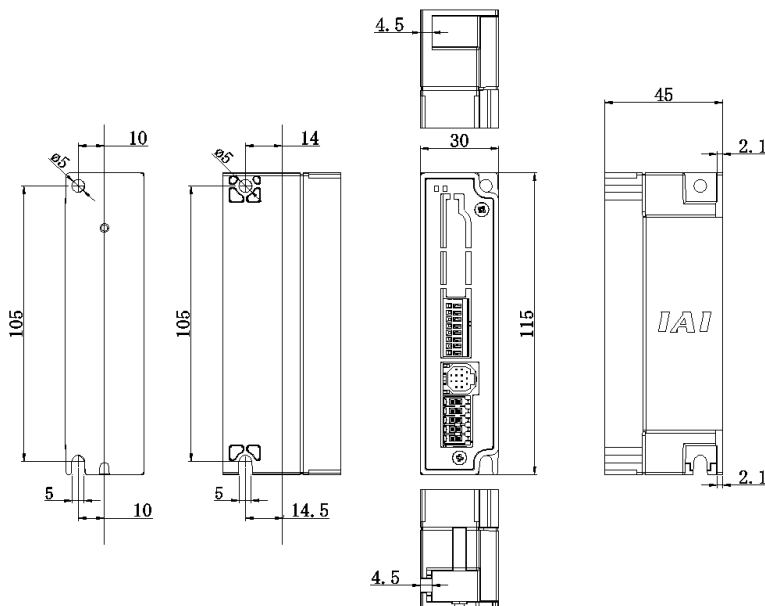


DIN Rail Fixing Type

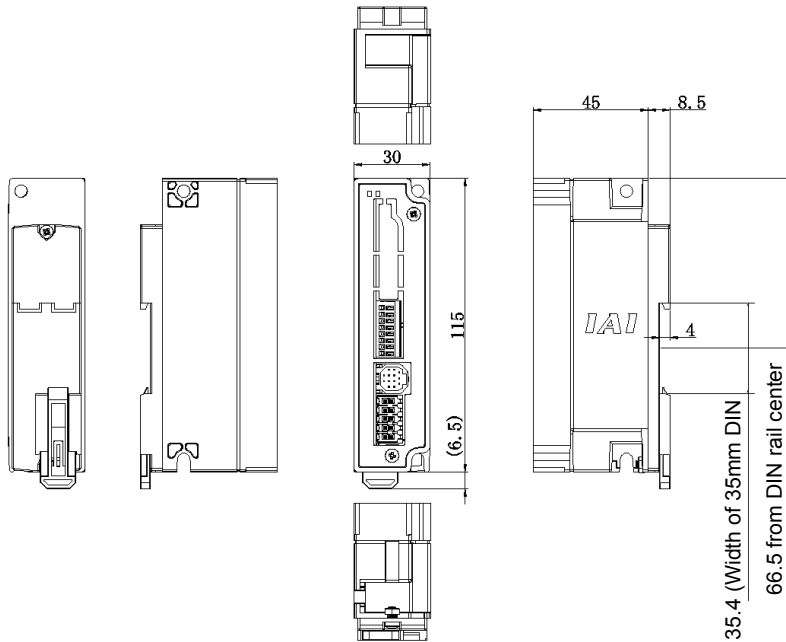

⊙ Heat Radiation and Installation

Designing the layout and build the structure considering the size of the control box, layout of the controllers and cooling for installation and heat radiation of RCB-P6PLC, so the ambient temperature around the controllers is 40degC or lower.

To fix the units in the control box, use the attachment holes on top and bottom of the unit for the screw fixed type, and use the DIN rails for the DIN rail fixed type.

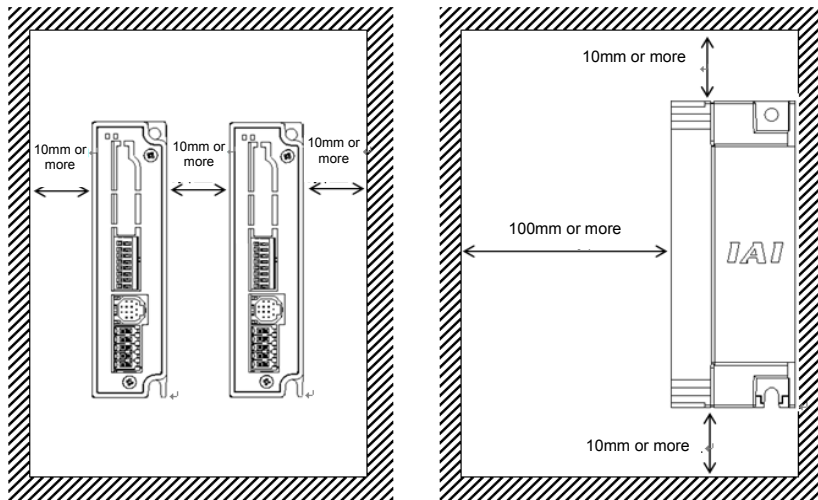

Change History

| Revision Date | Description of Revision |
|---------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| May 2010 | Released Rev. 4. <ul style="list-style-type: none"> Added "Safety Guide." Added SCON-CA to the supported models. (Added the load cell calibration command, complete and measurement read commands and registers.) Readjusted the specification of query 06. Readjusted the specification of query 10. |
| October 2011 | Released Rev. 5. <ul style="list-style-type: none"> SCON-CA added to applicable models (Load cell calibration command, complete, calculated value reading command and register added) |
| December 2012 | Released Rev. 6. <ul style="list-style-type: none"> ERC3, PCON-CA/CFA added to applicable models (Maintenance information reading command and register added) |
| June 2013 | Released Rev. 7. <ul style="list-style-type: none"> Position data reading command added, caution added to the top regarding replacement in relation to message level error outputs |
| October 2015 | Released Rev. 8. <ul style="list-style-type: none"> Servo-press related items added (Query 03, 05) (Change page: P. 30 to 32, 51 to 59, 81, 84, 118, 124 to 134, 167 to 177, 229, 232, 266, 272 to 282, 315 to 325) |
| February 2016 | Released Rev. 9. <ul style="list-style-type: none"> RCP6_PLC connection unit related contents added (Changed and added pages: Before contents, pg. 13, pg. 17 to pg. 20, pg. 372 to pg. 375) |
| January 2017 | Released Rev. 9B/9C. <ul style="list-style-type: none"> Correction made and explanation added |
| July 2018 | Released Rev. 10. <ul style="list-style-type: none"> Following models added to applicable models PCON-CYB/PLB/POB, ACON-CYB/PLB/POB, DCON-CYB /PLB/POB, RCM-P6PC, RCM-P6AC and RCM-P6DC Description added for restrictions for RCP6S Series Correction made |
| August 2018 | Released Rev. 10B. <ul style="list-style-type: none"> Description corrected for models applicable for TFAN Correction made |



IAI Corporation

Head Office: 577-1 Obane Shimizu-KU Shizuoka City Shizuoka 424-0103, Japan
TEL +81-54-364-5105 FAX +81-54-364-2589
website: www.iai-robot.co.jp/

Technical Support available in USA, Europe and China

IAI America, Inc.

Head Office: 2690 W. 237th Street, Torrance, CA 90505
TEL (310) 891-6015 FAX (310) 891-0815
Chicago Office: 110 East State Parkway, Schaumburg, IL 60173
TEL (847) 908-1400 FAX (847) 908-1399
Atlanta Office: 1220 Kennestone Circle, Suite 108, Marietta, GA 30066
TEL (678) 354-9470 FAX (678) 354-9471
website: www.intelligentactuator.com

IAI Industrieroboter GmbH

Ober der Röth 4, D-65824 Schwalbach am Taunus, Germany
TEL 06196-88950 FAX 06196-889524

IAI (Shanghai) Co., Ltd.

SHANGHAI JIAHUA BUSINESS CENTER A8-303, 808, Hongqiao Rd. Shanghai 200030, China
TEL 021-6448-4753 FAX 021-6448-3992
website: www.iai-robot.com

IAI Robot (Thailand) Co., Ltd.

825 PhairojKijja Tower 12th Floor, Bangna-Trad RD., Bangna, Bangkok 10260, Thailand
TEL +66-2-361-4458 FAX +66-2-361-4456